

Remote controller X-3:

It can control the machine in 60 metres, 4 groups coding can be convenient to control the 4 groups smoke machines..




Manual controller X-2:

handy controller, 5 metres long



Coding and Timing controlling Box X-5:

It can be simple and precision to set the time of the smoke machine with coding switch. It can be exact to 1second.

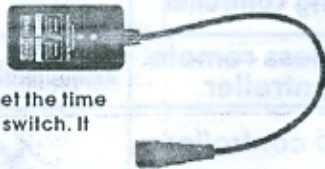

LCD Timing controller X-4:

Complete function large screen timing controller ,with all the controlling function, adopt touching-button.



PROFESSIONAL STAGE SMOKE EFFECT

MODEL: SH-1500F

MODEL: SH-900HZ



WELCOME TO USE THE SMOKE MACHINE

Please read the user's manual before use


1. Place the smoke machine horizontally, unscrew the lid of the tar container to pour in the high-quality baccy, and then fasten the lid
 2. Before power on, please verify that the supply voltage is in conformity with the rated voltage of the smoke machine. the power supply should be connected to the Grounding wire. When powered on, the indicator light will turn on, and the smoke machine will begin to work. conncece it to different controllers for different controls
 3. At the first time, it is normal if the smoke machine creates just a little smoke or some steam, just take it easy.
 4. Please place the smoke machine in the draught but not in the hole, or the smoke machine's temperature fuse will be blown out to stop heating
 5. Place the smoke machine horizontally on the ground or install it on the hanger, but not aslant over 50. The smoke machine should keep a minimum 20cm distance all around And up and down. keep it off kids, flames, inflammable or explosives, and prevent scalding.
 6. Please add tar in time. If the smoke machine keeps running when the tar is used up, its pump and heating organs will be damaged. turn off the power before adding tar, and operate carefully for fear that the tar might overflow to cause short circuit
 7. In case that the smoke is diminished, there is noise in the oil suction pump, or the smoke machine stops smoking, please disconnect the power at once, and check the tar deposit, fuse, wiring plug and power plug at the same time. if the problems are stilled not solved, please contact the supplier
 8. In unmanned cases, do not let machine running. keep it off kids. do not add inflammable gases, such as oils, gas or spice. when the machine is running, do not touch the wire for fear of electrical shock.
- Due to condensation, vapour or moisture might gather around the nozzle of any smoke machine
 - There might be some surplus smoke ejected from any smoke machine during operation or after shutdown

CONNECTION OF DMX512:

Some machines are subject to the dmX512 signal standard. the connection can be Finished by means of "input" and "output" of the triple KLR socket, the output of the control signal line must be corresponding to the grounding wire of the KLR socket, and the lengths of the 2(-) and 3(+)-singnal lines should be within 100m, or they might disturb other electric appliances

■ Note: some consoles cannot work well unless pin 2 and pin 3 are cross-welked

The machine adopts 1 digital band, and its address code range is 0-255(OFFH)

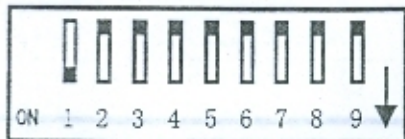

Pull down in the arrow direction to turn on. The address switch shown on the diagram is preset as "1"

1 2 4 8 16 32 64 128 256

PRODUCT PERFORMANCE PARAMETER LIST

Model/instruction	SH-1500F	SH-900HZ
Voltage used	AC220V/50Hz AC110V/50Hz	AC220V/50Hz AC110V/50Hz
Power	1500W	900W
Current-limited safety device	250V/10A 120V/15A	250V/5A 120V/10A
Re-heating time	8Min	6Min
Smoke output	15000Cu.ft/min	10000Cuft/min
Capacity of oil tank	2.5L	1.2L
Gross weight	8.5kg	7.25kg
MIRROR pipe patent technology Pipeline will never be blocked	✓	✓
Electronic temperature control	✓	✓
Wire controller		✓
Timing controller		Selection is available
Wireless remote controller	Selection is available	✓
LCD controller	✓	
DMX-512	✓	✓
Output volumn	✓	
Packaging volume (mm)	490*330*275	585*300*290