

Wizard




user manual



Measurements are expressed in millimeters.

- 1 Data sockets
- 2 Power and Data LEDs
- 3 Power inlet & main fuse
- 4 DIP switch
- 5 Safety cable eye
- 6 Mounting bracket
- 7 Lamp housing
- 8 Swivel locks
- 9 Focus rod

✱ Cover access screws

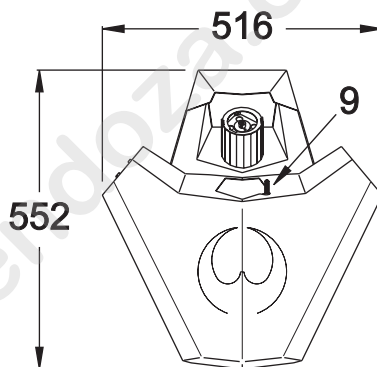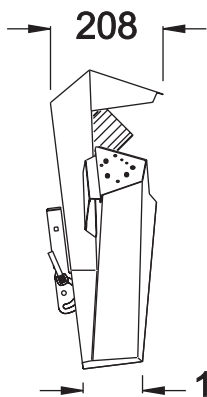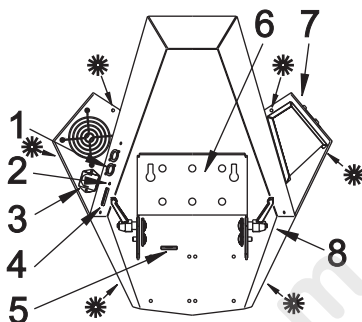

© 2001 Martin Professional A/S, Denmark.

All rights reserved. No part of this manual may be reproduced, in any form or by any means, without permission in writing from Martin Professional A/S, Denmark.

Printed in Denmark.

P/N 35000098, Rev. C

Introduction	4
Wizard safety information	4
Unpacking	6
AC power	7
Installing a plug on the mains lead	7
Adjusting voltage settings	8
Installation	10
Wall mounting	10
Overhead mounting	11
Operation from the floor	12
Data connection	13
Recommended cable	13
Connections	13
Stand-alone operation	15
Single unit operation	15
Master / slave operation	15
Stand-alone settings	17
MC-1 operation	18
MC-1 settings	18
DMX operation	19
DMX modes	19
DMX control address	21
Basic service	23
Cleaning	23
Lamp maintenance	25
Fuses	26
Setting 6- or 8-channel DMX mode	27
Firmware updates	27
Troubleshooting	29
DMX protocol	31
Specifications	33

INTRODUCTION

1

Thank you for selecting the Martin Wizard. The Wizard is an automated lighting fixture that provides:

- Strobe effects
- Seven solid colors, eight-split colors, and two white positions
- 13 gobos plus open
- A rotating parabolic reflector
- A rotating mirror drum with variable swivel angle
- Adjustable focus
- Mechanical shutter
- Multiple control options that enable a broad range of effects

The combination of the parabolic reflector and the mirror drum provide up to 84 individual beams with the current effect.

WIZARD SAFETY INFORMATION

Warning! ***This product is not for household use. It presents risks of lethal or severe injury due to fire and heat, electric shock, and falls.***

Read this manual before powering or installing the fixture, follow the safety precautions listed below and observe all warnings in this manual and printed on the fixture. If you have questions about how to operate the fixture safely, please contact a Martin distributor for assistance. Refer any service operation not described in this manual to a qualified technician. Do not modify the fixture or install other than genuine Martin accessories and upgrade kits.

Avoiding electric shocks

- Disconnect the fixture from AC power before removing or installing the lamp, fuses, or any part, and when not in use.
- Always ground (earth) the fixture electrically.

- Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault protection.
- Do not expose the fixture to rain or moisture.
- Refer all service to a qualified technician.
- Never operate the fixture with missing or damaged lenses and/or covers.

Protecting yourself and others from burns and fire

- Never attempt to bypass the thermostatic switch or fuses. Always replace defective fuses with ones of the specified type and rating.
- Ensure that the air flow through fans and vents is free and unobstructed.
- Keep all combustible materials (for example fabric, wood, paper) at least 0.3 meters (12 inches) away from the fixture. Keep flammable materials well away from the fixture.
- Do not illuminate surfaces within 0.1 meters (4 inches) of the fixture.
- Provide a minimum clearance of 0.1 meters (4 inches) around fans and air vents.
- Replace the lamp if it becomes defective or worn out, or before usage exceeds the maximum service life. When replacing the lamp, allow the fixture to cool for at least 5 minutes before opening the fixture or removing the lamp. Protect your hands and eyes with gloves and safety glasses. It can take up to 15 minutes for the fixture to cool completely.
- Never place filters or other materials over the lens or mirror drum.
- The exterior of the fixture can reach temperatures up to 60° C (140° F). Allow the fixture to cool for at least 5 minutes before handling.
- Do not operate the fixture if the ambient temperature (T_a) exceeds 40° C (104° F).
- Do not stare directly into the light.
- Never operate the fixture without all lenses and covers installed: an unshielded lamp can explode without warning and emits dangerous UV radiation that can cause burns and eye damage.

Preventing injuries due to falls

- When suspending the fixture above ground level, verify that the structure can hold at least 10 times the weight of all installed devices.
- Verify that all external covers and rigging hardware are securely fastened and use an approved means of secondary attachment such as a safety cable.
- Block access below the work area whenever installing or removing the fixture.

UNPACKING

The packing material is carefully designed to protect the fixture during shipment - always use it to transport the fixture.

The Wizard comes with the following:

- 1.5-meter, 3-wire IEC power cable.
- User manual.

The Wizard’s operating voltage is printed on the serial number label that can be found on the back of the Wizard. Verify that the operating voltage closely matches the AC supply voltage before applying power. Contact your Martin dealer if the operating voltage differs from the supply voltage by more than five percent.


INSTALLING A PLUG ON THE MAINS LEAD

The fixture’s mains lead may require a grounding-type cord cap that fits your power distribution cable or outlet. Consult a qualified electrician if you have any doubts about proper installation.

Warning! *For protection from dangerous electric shock, the fixture must be grounded (earthed). The AC mains supply shall have overload and ground-fault protection.*


Important! *Verify that the feed cables are undamaged and rated for the current requirements of all connected devices before use.*

Following the cord cap manufacturer’s instructions, connect the yellow and green wire to ground (earth), the brown wire to live, and the blue wire to neutral. The table below shows some pin identification schemes.

Wire	Pin	Marking	Screw color
brown	live	“L”	yellow or brass
blue	neutral	“N”	silver
yellow/green	ground		green

ADJUSTING VOLTAGE SETTINGS

EU Model

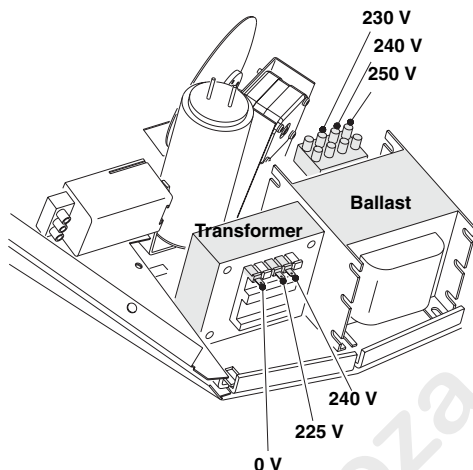


Local AC Supply		Transformer		Ballast
Freq.	Voltage	Setting	Terminal	Setting / Terminal
50 Hz	220 - 235 V	225 V	3	230 V
50 Hz	235 - 245 V	240 V	4	240 V
50 Hz	245 - 260 V	240 V	4	250 V

- 1 Disconnect the fixture from AC power.
- 2 If the lamp is hot, allow it to cool for 5 minutes and wear safety goggles to protect your eyes.
- 3 Remove the 6 cover-access screws and lift off the fixture cover.
- 4 On the *transformer*, move the BROWN wire to the transformer terminal shown in the table above for the local AC supply voltage. The terminals are indicated on a label on the top of the transformer.
- 5 On the *ballast*, move the BROWN wire to the terminal listed for the voltage. The terminals are indicated on the top of the ballast.
- 6 Replace the cover.

US model

Local AC Voltage	Transformer taps
95 - 110 V	Blue wire: 20V Brown wire: 120 V
110 - 130 V	Blue wire: 0 V Brown wire: 120 V
200 - 220 V	Blue wire: 20 V Brown wire: 230 V
220 - 240 V	Blue wire: 0 V Brown wire: 230 V
240 - 260 V	Blue wire: 0 V Brown wire: 250 V

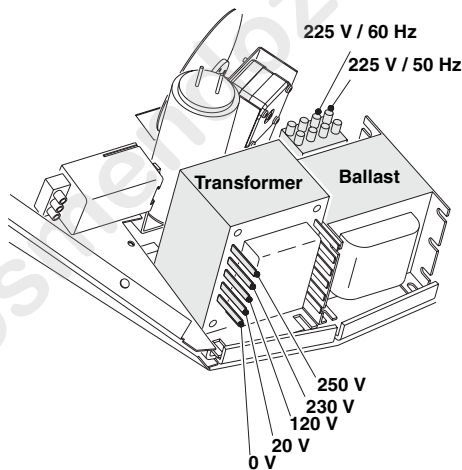

- 1 Disconnect the fixture from AC power.
- 2 If the lamp is hot, allow it to cool for 5 minutes and wear safety goggles to protect your eyes.
- 3 Remove the 6 cover-access screws and lift of the fixture cover.
- 4 On the *ballast*, move the BLUE wire to the 225 V / 50 Hz terminal for 50 Hz local AC supply, or to the 225 V / 60 Hz terminal for 60 Hz local AC supply.
- 5 On the *transformer*, move the BROWN wire to the setting as listed in the previous table for the local AC voltage. The terminals are indicated on a label on the top of the transformer.
- 6 Replace the cover.

INSTALLATION

3


The Wizard can be hung overhead with a clamp (not included), mounted vertically on a wall, or placed on the floor (using the optional floor stand).

Warning! *Block access below the work area before proceeding. Always use a secure means of secondary attachment.*

WALL MOUNTING

To mount the Wizard on a wall, or other vertical surface:


- 1 Verify that the surface is capable of bearing the weight of the fixture.
- 2 Set two 8mm-diameter hex bolts or screws, 155 mm (6.1 in.) apart (center to center), in the mounting surface.
- 3 Set an eye bolt in the mounting surface for the safety cable.
- 4 Fold the mounting bracket so that it lies flat against the back of the fixture and tighten the swivel locks. We recommend that you remove the swivel locks and replace them with M8 hexagonal lock nuts (2 x P/N 08132701); alternatively set the swivel locks so that they lie flat against fixture.
- 5 Hang the fixture on the wall over the two screw/bolt heads using the two slotted holes in the mounting bracket.
- 6 Install a safety cable that can hold at least 10 times the weight of the fixture through the safety cable eye on the fixture and attach this to the eye bolt.
- 7 Verify that the fixture is at least 0.1 meters (4 in.) from the surface to be illuminated and at least 0.3 meters (12 in.) from any combustible materials. Verify that the clearance around the air vents is at least 0.1 meters (4 in.).

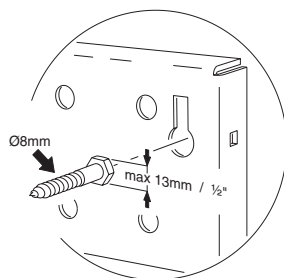

OVERHEAD MOUNTING

To hang the Wizard on an overhead support:


- 1 Verify that the structure can support at least 10 times the weight of all installed fixtures, clamps, cables, auxiliary equipment, and other items.
- 2 If hanging the fixture with a rigging clamp, verify that the clamp is undamaged and is designed for the fixture's weight. Bolt the clamp securely to the bracket with a grade 8.8 (minimum) M12 bolt and lock nut, or as recommended by the clamp manufacturer, through the clamp hole in the mounting bracket.
- 3 If permanently installing the fixture, verify that the hardware (not included) and mounting surface can bear at least 10 times the fixture's weight. Any of the six 13mm ($\frac{1}{2}$ in.) holes in the mounting bracket may be used for attachment, but ensure that the load is distributed evenly.
- 4 Working from a stable platform, clamp or fasten the fixture to the structure.
- 5 Install a safety cable that can hold at least 10 times the weight of the fixture through the safety cable eye on the fixture.
- 6 Loosen the swivel locks, tilt the fixture to the desired angle, and retighten.
- 7 Verify that the fixture is at least 0.1 meters (4 in.) from the surface to be illuminated and at least 0.3 meters (12 in.) from any combustible materials. Verify that the clearance around the air vents is at least 0.1 meters (4 in.).

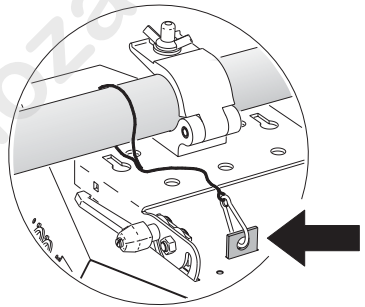

OPERATION FROM THE FLOOR

To operate the Wizard from the floor you need the optional floor stand (P/N: 91606008).

- 1 Attach the floor stand to the mounting bracket. The floor stand is longer at one end. Install the stand so that the long end is positioned where the load is greatest. This will depend on the angle that the Wizard is set at.

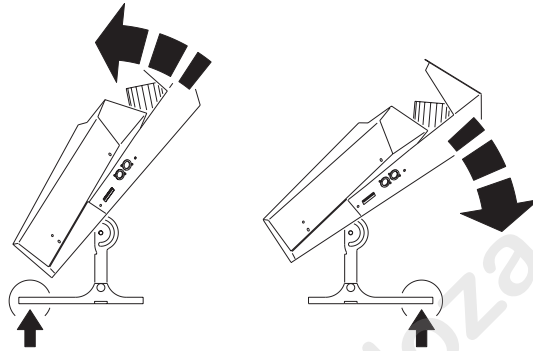

- 2 Set the fixture on the floor. Adjust the mounting bracket and tighten both swivel locks.
- 3 Verify that the fixture is stable, that it is at least 0.1 meters (4 in.) from the surface to be illuminated and at least 0.3 meters (12 in.) from any combustible materials. Verify that the clearance around the air vents is at least 0.1 meters (4 in.).

The stand is designed for use on a flat surface. It is not intended to be used in any other way.

DATA CONNECTION

This section describes how to connect fixtures to each other, or to a controller.

RECOMMENDED CABLE

A reliable data connection begins with the right cable. Standard microphone cable cannot transmit DMX data reliably over long runs. For best results, use cable specifically designed for RS-485 applications. Your Martin dealer can supply high quality cable in various lengths.

CONNECTIONS

The Wizard's XLR data sockets are wired with pin 1 to ground, pin 2 to signal - (cold), and pin 3 to signal + (hot). This is compatible with the standard for DMX devices.

One or more adaptor cables may be required to connect the Wizard to the controller and/or other lights because many devices have 5-pin connectors and others may have reversed signal polarity, that is, pin 2 hot and pin 3 cold.

5-pin to 3-pin Adaptor	
Male	Female
1	1
2	2
3	3
4	
5	
P/N 11820005	

3-pin to 5-pin Adaptor	
Male	Female
1	1
2	2
3	3
	4
	5
P/N 11820004	

3-pin to 3-pin Phase-Reversing Adaptor	
Male	Female
1	1
2	3
3	2
P/N 11820006	

Connecting the data link

- 1 Connect a data cable to the controller's output. If controller has a 5-pin output, use a 5-pin male to 3-pin female adaptor cable (P/N 11820005).
- 2 Lead the data cable from the controller to the first fixture. Plug the cable into the fixture's data input.
- 3 Connect the output of the fixture closest to the controller to the input of the next fixture. If connecting two fixtures with opposing polarity on pins 2 and 3, insert a phase-reversing cable between the two fixtures.
- 4 Continue connecting fixtures output to input. Up to 32 devices may be connected on a serial link.
- 5 Terminate the link by inserting a male termination plug (P/N 91613017) into the data output of the last fixture. A termination plug is simply an XLR connector with a 120 ohm, 0.25 W resistor soldered across pins 2 and 3.

Male Termination Plug	Female Termination Plug
Male XLR <div><div>1</div><div>2</div><div>3</div><div>120</div></div>	Female XLR <div><div>1</div><div>2</div><div>3</div><div>120</div></div>
P/N 91613017	P/N 91613018

STAND-ALONE OPERATION

The Wizard may be operated without a controller in stand-alone mode. It can be operated as a single unit or together with other Wizards in a “master/slave” configuration.

Several options are available to modify stand-alone operation. These options are selected using the DIP-switch and are described in this chapter.

Important! *The Wizard transmits a signal when DIP-switch pins 2 and 10 are set to ON. To avoid damage to the electronics, connect no more than 1 transmitting device (master or controller) to the data link.*

SINGLE UNIT OPERATION

The Wizard defaults to stand-alone mode whenever power is applied and there is no control signal. This can be deactivated by activating 8-channel mode (see “Setting 6- or 8-channel DMX mode” on page 27).

Options for trigger type, mirror speed and movement direction can be selected as described under “Stand-alone settings” on page 17.

MASTER / SLAVE OPERATION

Multiple Wizards can be connected together, without a controller, for synchronized “master/slave” operation in which the slaves mimic, or respond to, the behavior of the master.

Connecting units for master / slave operation

 
- 1 Connect the output of one Wizard to the input of the next Wizard.
- 2 Connect additional Wizards output to input. Up to 32 may be connected.
- 3 Terminate the link on both ends by inserting a *female* termination plug into the data *input* of the first fixture and a *male* termination plug into the data *output* of the last fixture. (The female terminator may not be required if the first fixture is the master.)

A termination plug is simply an XLR connector with a 120 ohm, 0.25 W resistor soldered across pins 2 and 3.

Setting the master

Important! Set only 1 fixture as master (DIP-switch pin 2 and 10 ON).

- 1 Set DIP-switch pins 2 and 10 to ON.
- 2 Set DIP-switch pins 3, 5, 6, 7, 8, 9, and 11 to OFF.
- 3 Select trigger and speed options with DIP-switch pins 1 and 4 (see “Stand-alone settings” on page 17).



Setting a slave

- 1 Set DIP-switch 10 to ON.
- 2 Set pins 1, 2, 3, 4, 5 and 11 to OFF.
- 3 Select options with DIP-switch pins 6, 7, 8, and 9 (see “Stand-alone settings” on page 17). If none of these options are set then the slave fixture will mimic the master exactly. Use these options if you want a slave fixture to behave differently, for example, to make a show more interesting.



STAND-ALONE SETTINGS


DIP-switch pins 1-9 enable stand-alone options only when pin 10 is ON. When pin 10 is off, the DIP-switch selects a DMX address. *Pin 11 must be OFF for stand-alone operation.*

The DIP-switch 10 setting takes effect only after the fixture has been turned off and on.


Fixture	Option	Setting (0 = OFF, 1 = ON)										
		1	2	3	4	5	6	7	8	9	10	11
Single or master	Auto trigger (will use default trigger time)	0	1	0					0			
	Music trigger (synchronized with music)	1	1	0					0			
	Slow movement		1	0	1				0			
Slave	Use a different color in relation to the master			0			1				1	0
	Use a different gobo in relation to the master			0				1				
	Rotate the mirror drum in the opposite direction to the master			0					1			
	Swivel the mirror drum in the opposite direction to the master			0						1		

Note that if the slow movement option is not set then movement will be fast.

Mirror drum rotation

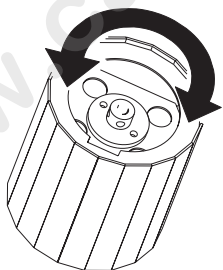

Mirror drum swivel

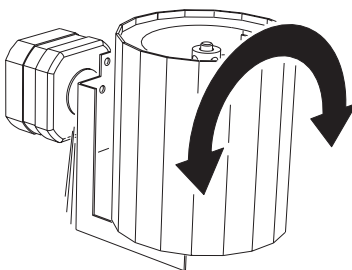

MC-1 OPERATION

6

The Wizard is fully compatible with the Martin MC-1 controller. This chapter describes information about how to configure the Wizard for operation with an MC-1. For further information, refer to the MC-1 user manual.

MC-1 SETTINGS

DIP-switch pin 10 must be set to OFF to enable MC-1 mode operation. Changes to the setting take effect after the fixture has been turned off and on.

DIP-switch pins 6, 7, 8, and 9 control options that are most useful when operating multiple Wizards from a single MC-1. When these options are set the fixture will behave differently compared to other Wizards that do not have these options set. This is useful if you want to make a light show more diverse.

Option	Setting (0 = OFF, 1 = ON)										
	1	2	3	4	5	6	7	8	9	10	11
Use a different color						1				0	1
Use a different gobo							1			0	1
Rotate the mirror drum in the opposite direction								1		0	1
Swivel the mirror drum in the opposite direction									1	0	1

DMX OPERATION

The Wizard can be connected to and operated from a DMX controller. To do this you need to:

- 1 Choose and set one of the three DMX modes. The three modes are described in the following section, “DMX modes”.
- 2 Set a DMX control address. This is described in “DMX control address” on page 21.

DMX MODES

The Wizard has three DMX modes to choose from:

- *1-channel mode* provides control of the built-in stand-alone features.
- *6-channel mode* provides position control of all effects. This is the default factory set mode.
- *8-channel mode* provides position control of all effects, plus control of the mirror drum swivel rate, and the color and gobo wheel change speed.

1-channel DMX operation

The functions shown in the following table are available in 1-channel mode. When a “stand-alone” function is selected, the fixture steps through a routine using a built-in microphone to trigger the action to the beat of the music. Note that multiple fixtures cannot be synchronized in this mode.

DMX value	Percent	Function
0-10	0-3	Light off
11-20	4-7	Light on
21-80	8-31	Strobe
81-115	32-44	Slow music trig (every 2 seconds)
116-140	45-54	Medium music trig (every second)
141-175	55-68	Fast music trig (every 0.2 seconds)
176-210	69-82	Random music trig (between 0.2-2.0 seconds)
211-255	83-100	Trigger whenever DMX value 240 is crossed

6-channel DMX operation

The 6-channel and 8-channel mode functions are described in detail in “DMX protocol” on page 31.

Channel 1 controls lamp on, lamp off, the dimmer and the strobe rate. It also allows you to execute a random “stand-alone” program using automatic or music trigger, and to reset the fixture to its home position.

Channel 2 controls the rotation of the parabolic reflector. This channel has no effect if the stand-alone program is selected on channel 1.

Channel 3 controls the color wheel and is used to select colors, split colors, the twinkle effect and color rotation. When the stand-alone program is running this channel still has active control of the color wheel, unless the DMX value is set to greater than 250 (>98%).

Channel 4 controls the gobo wheel. This channel functions even if the stand-alone program is selected. When the stand-alone program is running this channel still has active control of the gobo wheel, unless the DMX value is set to greater than 250 (>98%).

Channel 5 controls the mirror drum’s swivel position. This has no affect if the stand-alone program is running.

Channel 6 controls mirror drum rotation direction and speed. This has no effect if the stand-alone program is running.

8-channel DMX operation

Channel 7 controls the mirror drum swivel speed, allowing you to vary the speed with controllers without cross-fade times. If your controller has cross-faders and you use them, turn the speed function off by setting channel 7 to 0 percent. This channel has no effect if the stand-alone program is running.

Channel 8 provides speed control of the color and gobo wheels, allowing you to program slow or fast transitions from one effect position to another. This channel has no effect if the stand-alone program is running.

Setting the DMX mode

- 1 Disconnect the fixture from power. *Set DIP-switch pin 10 to OFF.*
- 2 To select:
 - 1-channel DMX mode, set DIP-switch pin 11 to ON.
 - 6-channel DMX mode, set DIP-switch pin 11 to OFF.
 - 8-channel DMX mode, set DIP-switch pin 11 to OFF, and then follow the procedure in “Setting 6- or 8-channel DMX mode” on page 27.

DMX CONTROL ADDRESS

The control address, also known as the start channel, is the first channel used to receive instructions from the controller. Each fixture needs its own control address set, and uses this address and subsequent control channels to receive instructions from a controller. The Wizard uses one, six, or eight control channels depending on the DMX mode that has been specified.

If the Wizard is set to 6-channel mode, it reads the data on the start channel and the next five channels. If the DMX control address is set to 100, the fixture uses channels 100, 101, 102, 103, 104, and 105. Channel 106 would be the control address for the next fixture.

For independent control, each fixture must be assigned its own address and non-overlapping control channels. If two or more fixtures are set up with the same address, they will receive the same instructions and should behave identically. Setting up identical fixtures with the same address is a good tool for troubleshooting unexpected behavior and an easy way to achieve synchronized action.

Specifying a DMX address

DIP-switch pins 1-9 are used to set the control address:

- 1 Select an address for the fixture on your controller. If you are calculating the DMX addresses for multiple fixtures then the Martin Address Calculator is available on the internet at <http://www.martin.dk/service/utilities/AddrCalc/index.asp>
- 2 Look up the DIP-switch setting using the Martin DIP Switch Calculator (also available on the internet, at <http://www.martin.dk/service/dipswitchpopup.htm>), or look for the address in the following DIP-switch settings table.
- 3 Disconnect the fixture from power.
- 4 Set pins 1 through 9 to the ON (1) or OFF (0) position as listed in the table.

Find the address in the following table. Read the settings for pins 1 - 5 to the left and read the settings for pins 6 - 9 above the address. "0" means OFF and "1" means ON. Pin 10 is always OFF for DMX operation.

DIP-Switch Setting 0 = OFF 1 = ON					#9	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1				
					#8	0	0	0	0	1	1	1	1	0	0	0	0	1	1	1	1	1	1	1	
					#7	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1
					#6	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1
#1	#2	#3	#4	#5																					
0	0	0	0	0		32	64	96	128	160	192	224	256	288	320	352	384	416	448	480					
1	0	0	0	0	1	33	65	97	129	161	193	225	257	289	321	353	385	417	449	481					
0	1	0	0	0	2	34	66	98	130	162	194	226	258	290	322	354	386	418	450	482					
1	1	0	0	0	3	35	67	99	131	163	195	227	259	291	323	355	387	419	451	483					
0	0	1	0	0	4	36	68	100	132	164	196	228	260	292	324	356	388	420	452	484					
1	0	1	0	0	5	37	69	101	133	165	197	229	261	293	325	357	389	421	453	485					
0	1	1	0	0	6	38	70	102	134	166	198	230	262	294	326	358	390	422	454	486					
1	1	1	0	0	7	39	71	103	135	167	199	231	263	295	327	359	391	423	455	487					
0	0	0	1	0	8	40	72	104	136	168	200	232	264	296	328	360	392	424	456	488					
1	0	0	1	0	9	41	73	105	137	169	201	233	265	297	329	361	393	425	457	489					
0	1	0	1	0	10	42	74	106	138	170	202	234	266	298	330	362	394	426	458	490					
1	1	0	1	0	11	43	75	107	139	171	203	235	267	299	331	363	395	427	459	491					
0	0	1	1	0	12	44	76	108	140	172	204	236	268	300	332	364	396	428	460	492					
1	0	1	1	0	13	45	77	109	141	173	205	237	269	301	333	365	397	429	461	493					
0	1	1	1	0	14	46	78	110	142	174	206	238	270	302	334	366	398	430	462	494					
1	1	1	1	0	15	47	79	111	143	175	207	239	271	303	335	367	399	431	463	495					
0	0	0	0	1	16	48	80	112	144	176	208	240	272	304	336	368	400	432	464	496					
1	0	0	0	1	17	49	81	113	145	177	209	241	273	305	337	369	401	433	465	497					
0	1	0	0	1	18	50	82	114	146	178	210	242	274	306	338	370	402	434	466	498					
1	1	0	0	1	19	51	83	115	147	179	211	243	275	307	339	371	403	435	467	499					
0	0	1	0	1	20	52	84	116	148	180	212	244	276	308	340	372	404	436	468	500					
1	0	1	0	1	21	53	85	117	149	181	213	245	277	309	341	373	405	437	469	501					
0	1	1	0	1	22	54	86	118	150	182	214	246	278	310	342	374	406	438	470	502					
1	1	1	0	1	23	55	87	119	151	183	215	247	279	311	343	375	407	439	471	503					
0	0	0	1	1	24	56	88	120	152	184	216	248	280	312	344	376	408	440	472	504					
1	0	0	1	1	25	57	89	121	153	185	217	249	281	313	345	377	409	441	473	505					
0	1	0	1	1	26	58	90	122	154	186	218	250	282	314	346	378	410	442	474	506					
1	1	0	1	1	27	59	91	123	155	187	219	251	283	315	347	379	411	443	475	507					
0	0	1	1	1	28	60	92	124	156	188	220	252	284	316	348	380	412	444	476	508					
1	0	1	1	1	29	61	93	125	157	189	221	253	285	317	349	381	413	445	477	509					
0	1	1	1	1	30	62	94	126	158	190	222	254	286	318	350	382	414	446	478	510					
1	1	1	1	1	31	63	95	127	159	191	223	255	287	319	351	383	415	447	479	511					

BASIC SERVICE

This chapter describes the maintenance procedures that you can perform yourself:

- Cleaning
- Lamp maintenance
- Replacing fuses
- Updating firmware

CLEANING

Regular cleaning of the elements in the optical path, as well as the fans and air vents, is vital to maintaining the operational quality of the Wizard.

Important! Excessive dust, smoke fluid, and particulate buildup degrades performance and causes overheating and damage to the fixture that is not covered by the warranty.


Cleaning the fan and air vents

To maintain adequate cooling, dust must be cleaned from the fan and air vents periodically. Remove dust from the fan and air vents with a soft brush, cotton swab, vacuum, or compressed air.

Cleaning optical components

Clean the optical components regularly. The presence of smudges or dust on optical surfaces can reduce the strength of the light output and the quality of the effects.

The following illustration shows the elements that need to be kept clean:

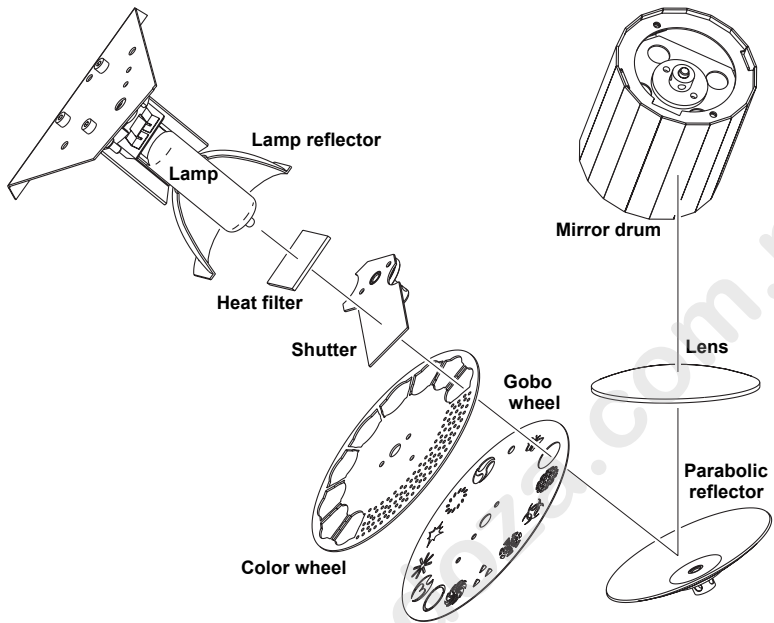

Use care when cleaning optical components and work in a clean, well lit area. The coated surfaces are fragile and easily scratched. Do not use solvents that can damage plastic or painted surfaces.

- 1 Disconnect the fixture from power and allow the components to cool completely.
- 2 Remove the fixture cover. You may want to remove the lamp for cleaning (see the related steps in "Installing a lamp in the Wizard." on page 25).
- 3 Vacuum or gently blow away dust and loose particles with compressed air.
- 4 Remove stuck particles with an unscented tissue or cotton swab moistened with glass cleaner or distilled water. Do not rub the surface: lift the particles off with a soft repeated press.
- 5 Remove smoke and other residues with cotton swabs or unscented tissues moistened with isopropyl alcohol. A commercial glass cleaner may be used, but residues must be removed with distilled water. Clean with a slow circular motion from center to edge. Dry with a clean, soft and lint-free cloth or compressed air.
- 6 Replace the fixture cover (and lamp-access cover) before applying power.

LAMP MAINTENANCE

The following lamp types are supported:

- Osram HSD 250
- Philips MSD 250/2
- Philips MSD 200



Installing any other lamp may damage the fixture!

Allow the lamp to cool for at least 5 minutes before packing and moving the fixture. To avoid possible damage, remove the lamp when shipping the fixture.

Warning! *Always disconnect the fixture from AC power and allow it to cool for 5 minutes before installing the lamp.*

Installing a lamp in the Wizard.

- 1 Disconnect the fixture from AC power. If replacing a lamp, allow it to cool for at least 5 minutes before removing the lamp-access cover. The lamp cools faster with the cover in place. It can take up to 15 minutes for the fixture to cool completely.
- 2 Remove the two lamp access screws from the lamp-access cover, and lift the cover off.
- 3 If replacing a lamp, grasp the old lamp by the reflector and pull it out of the holder. Then pull the socket off the lamp. Do not pull the wires.
- 4 Push the socket fully onto the pins of the new lamp.
- 5 Clean the glass bulb with the cloth supplied with the lamp, particularly if your fingers touched the glass. A clean, lint-free cloth wetted with alcohol may also be used.
- 6 Gently push the lamp into the holder until it snaps into place.
- 7 Replace the lamp-access cover and screws.

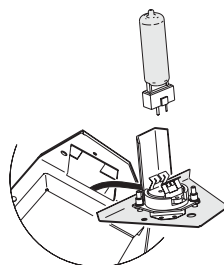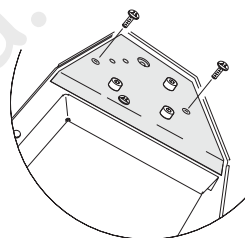

Adjusting the lamp

The Wizard lamp assembly is adjusted at the factory. Due to differences between lamps, however, fine adjustment may be improve performance.


- 1 Disconnect the fixture from AC power.

2 If you are:

- Using a controller, turn on the Wizard and select white light with the open gobo.
 - Not using a controller, flip DIP-switch pins 3 and 10 on. Flip all other pins off. Apply power to the Wizard. After it has reset, the fixture produces a white light with an open gobo for adjustment purposes.
- 3 Wait for the lamp to reach full brightness.
- 4 To reduce the number of images, deflect the light stream away before it strikes the mirror drum by holding a small hand-held mirror in front of the it. Lamp adjustment is also easier if you reflect onto a white surface

5 Make adjustments using the three lamp-adjustments screws. If:

- There are off-center “hot spots” in the images then the lamp is not centered in the reflector. Pull the hot spots into the center of the image fields with small adjustments of the lamp-adjustment screws.
- The light is brighter in the center of the images than it is at the edge, then the lamp is too far forward in the reflector. Pull the lamp in by turning all three screws clockwise 1/4-turn at a time until the light is evenly distributed.
- The light is brighter around the edge of the images than it is in the center, or if light output is low, then the lamp is too far back in the reflector. “Push” the lamp out by turning the screws counterclockwise 1/4-turn at a time until the light is bright and evenly distributed.

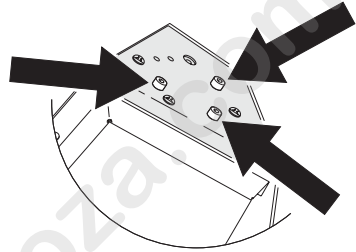

FUSES

The Wizard uses a time-delay fuse for protection against current overload. If the power LED does not light when power is applied, the fuse may be spent. If the fuse blows repeatedly, there is a fault with the unit that requires service by a Martin technician.

Never bypass the fuse or replace it with one of another size or rating.

Replacing the main fuse


- 1 Unplug the mains cable from the input socket.
- 2 Pry open the fuse holder, which is built into the input socket, and remove the fuse.

- 3 Replace the fuse with one of the same type. The fuse rating is listed on the serial number label that can be found on the back of the fixture.

SETTING 6- OR 8-CHANNEL DMX MODE

The fixture arrives from the factory preset in 6-channel mode. To operate in 8-channel mode some adjustments are required:

- 1 Disconnect the fixture from power.
- 2 Remove the fixture cover.
- 3 Locate PL118 on the printed circuit board. It can be found close to the DIP-switch.
- 4 Using a pair of tweezers or similar tool, place the jumper on both of the pins to enable 8-channel operation. When operating in 6-channel mode, the jumper is placed on only one of the pins, or is removed completely.
- 5 Replace the cover before applying power.

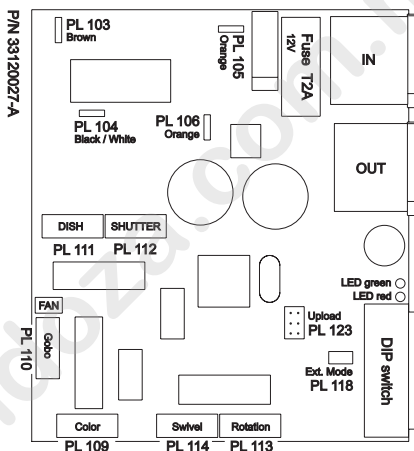

FIRMWARE UPDATES

Firmware updates are released when features are added, or bugs are fixed. The latest version is available from your Martin dealer, or the Support Area of the Martin Professional web site at <http://www.martin.dk>.

The installed firmware version is displayed by the Power and Data LEDs, located next to the DIP switches, when power is applied to the fixture and all DIP switch pins are set to OFF. The red LED (Power) indicates the number to the left of the decimal point and the green LED (Data) indicates the number to the right. For example, if firmware version 1.4 is installed, the red LED flashes once and the green LED flashes four times.

Firmware is installed using a Martin uploader or a DMX interface for the Martin LightJockey controller. The procedure is found in the MP-2 user manual and the Martin Software Uploader online help file.

REQUIREMENTS

The following are required in order to install software.

- The Wizard update file, available for download from the User Support Area of the Martin web site (<http://www.martin.dk>).
- The Martin Software Uploader program, version 4.0 or later, available for download from the User Support Area of the Martin web site.
- A Martin MP-2 Uploader connected to a Windows 95/98/ME/2000 PC, or a LightJockey Controller with DMX Interface card.

Updating fixture firmware with the MP-2 Uploader

- 1 Connect a prepared MP-2 Uploader to the DMX link. Apply power to the fixtures and the MP-2. Wait a few moments for the fixtures to reset.
- 2 Select Read Memory Card from the MP-2 main menu.
- 3 Use the buttons on the right to scroll through the card slots. Select the slot that holds the desired version of the Wizard firmware.
- 4 Select Update Software. Select Yes to confirm.
- 5 Select Update in DMX mode to start the upload. The MP-2 initializes all connected Wizards, which respond with two yellow LEDs in the status display. Avoid interrupting the process: this will corrupt the software.
- 6 After a successful upload the fixtures reset with the new software. If an error occurs and the fixtures do not reset, data was interrupted or corrupted during transmission.

TROUBLESHOOTING

9


Problem	Probable cause(s)	Remedy
Fixture is completely dead.	No power to fixture.	Check that power is switched on and cables are plugged in.
	Primary fuse blown.	Replace fuse.
	Secondary fuse blown.	Contact Martin technician for service.
Fixture resets correctly but does not respond to controller.	The DMX signal is not transmitted.	Connect controller. Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.
	The DMX data signal is reversed.	Insert a phase-reversing cable in the link before the fixture.
	Incorrect address or other DIP-switch setting.	Check DIP-switch settings.
Intermittent flicker or strange behavior.	Data link not terminated.	Insert termination plug in output of the last fixture on the link.
	One of the fixtures is transmitting as a master or is defective.	Bypass one fixture at a time until normal operation is regained: unplug both connectors and connect them directly together. Have the defective fixture serviced by a qualified technician.
Effect fails to reset correctly.	The effect requires mechanical adjustment.	Contact Martin technician for service.
No light.	Lamp missing or blown	Disconnect fixture and replace lamp.

Problem	Probable cause(s)	Remedy
Lamp cuts out intermittently or burns out too quickly.	The operating voltage does not match AC supply.	Contact Martin technician for service.
	Blocked air vent.	Increase clearance around fixture.
	Dust buildup inside fixture.	Contact Martin technician for professional cleaning.
	The fan may not be working. This will result in the thermostatic switch cutting power to the lamp when the fixture overheats. When the fixtures cools the lamp will come on again, causing the fixture to heat, which will again trip the thermostatic switch, and so forth.	Contact Martin technician for service.




DMX PROTOCOL

A

Channel	Value	Percent	Function
1	0-1	0	Light
	2-129	1-50	Shutter closed
	130-189	51-74	Dimmer (closed-open) & Lamp on
	190-199	75-78	Strobe (fast to slow)
	200-209	79-82	Shutter closed
	210-219	83-86	Random strobe
	220-229	87-90	Stand-alone music trig
	230-239	91-94	Stand-alone auto trig
	240-249	95-98	Shutter closed
	250-255	99-100	Reset (hold for >5 seconds)
2	0-1	0	Lamp off (when set for > 5 seconds & channel 3 & 4 > 252)
	Parabolic reflector rotation		
	0-1	0	No rotation
	2-122	1-47	Clockwise rotation (slow to fast)
	123-132	48-51	No rotation
3	133-253	52-99	Counter clockwise rotation (fast to slow)
	254-255	100	No rotation
	Color		
	0-5	0-1	0 Open
	6-11	2-4	1 Open / Blue
	12-17	5-6	2 Blue 108
	18-23	7-8	3 Blue / Orange
	24-29	9-10	4 Orange 306
	30-35	11-13	5 Orange / Purple
	36-41	14-15	6 Purple 502
	42-47	16-17	7 Purple / Green
	48-53	18-20	8 Green 206
	54-59	21-22	9 Green / Blue
	60-65	23-25	10 Blue 101
	66-71	26-27	11 Blue / Yellow
	72-77	28-29	12 Yellow 603
	78-83	30-32	13 Yellow / Magenta
	84-89	33-35	14 Magenta 507
	90-95	36-37	15 Magenta / Open
	96-101	38-39	16 Open
	102-169	40-66	Color rotation (slow to fast)
	170-175	67-68	No rotation
	176-243	69-95	Twinkle rotation (slow to fast)
	244-249	96-97	No rotation
	250-255	98-100	Remote stand-alone music trig and auto trig

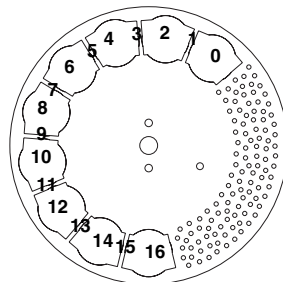

Channel	Value	Percent	Function
4	0-10	0-3	Gobo
	11-22	4-8	0 Open
	23-34	9-13	1 Gridball
	35-46	14-17	2 Virus
	47-58	18-22	3 Tunnel
	59-70	23-26	4 Triple dot
	71-82	27-31	5 Whirl
	83-94	32-36	6 Cone
	95-106	37-41	7 Wizard
	107-118	42-46	8 Spokes
	119-130	47-50	9 Splat
	131-142	51-55	10 Ellipse Halo
	143-154	56-60	11 Ying Yang Yung
	155-169	61-66	12 Dot
	170-239	67-94	13 Butterfly
	240-249	95-97	Wheel rotation (Slow to fast)
	250-255	98-100	No rotation
			Remote stand-alone music trig and auto trig
5	0	0	Mirror drum swivel
	127	50	Max Left
	255	100	Neutral
			Max Right
6	0-1	0	Mirror drum rotation
	2-122	1-48	No rotation
	123-132	49-52	Clockwise rotation (slow to fast)
	133-253	53-99	No rotation
	254-255	100	Counter clockwise rot. (fast to slow)
7*	0-255	0-100	Speed channel for mirror drum swivel Fast to slow
8*	0-255	0-100	Speed channel for color and gobo Fast to slow

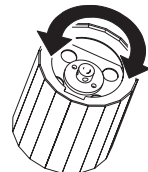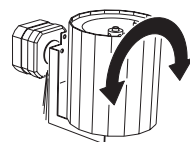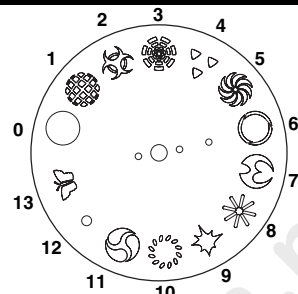

* Only available in 8-channel mode. See “DMX modes” on page 19.

SPECIFICATIONS - WIZARD

PHYSICAL

- Size (L x W x H)..... 552 x 516 x 208 mm (21.7 x 20.3 x 8.2 in)
- Weight..... 14.5 kg (32 lbs)

CONSTRUCTION

- Housing..... aluminum and steel
- Finishelectrostatic powder coating

THERMAL

- Maximum ambient temperature (T_a)40° C (104° F)
- Maximum surface temperature60° C (140° F)

INSTALLATION

- Minimum distance to combustible materials..... 0.3 m (12 in)
- Minimum distance to illuminated surfaces..... 0.1 m (4 in)
- Minimum clearance around fan and air vents.....0.1 m (4 in)

CONTROL AND PROGRAMMING

- Data I/O sockets..... 3-pin XLR male/female, pin 1=shield, pin 2 (-), pin 3 (+)
- Control protocol..... USITT DMX-512 (1990)
- Electrical standard RS-485
- DMX modes..... 1-, 6- or 8-channel
- Stand-alone triggers music or auto
- Control methodDMX controller, stand-alone, master/slave

ELECTRICAL, EU MODEL

- Input.....3-prong IEC male socket
- AC Power..... 230 / 240 / 250 V, 50 Hz
- Main fuse3.15 A T (time delay), P/N 05020013
- Circuit board fuse2 A T (time delay), P/N 05020009
- Maximum power and current @ 230 V, 50 Hz..... 320 W, 1.5 A
- Maximum power and current @ 240 V, 50 Hz..... 320 W, 1.6 A
- Maximum power and current @ 250 V, 50Hz..... 310 W, 1.4 A

ELECTRICAL, US MODEL

- Input.....3-prong IEC male socket
- AC power..... 100 / 120 / 230 / 250 V, 50 / 60 Hz
- Main fuse6.3 A T (time delay), P/N 05020020
- Circuit board fuse2 A T (time delay), P/N 05020009

- Maximum power and current @ 100 V, 50 Hz 320 W, 3.8 A
- Maximum power and current @ 100 V, 60 Hz 310 W, 3.4 A
- Maximum power and current @ 120 V, 50 Hz 320 W, 2.9 A
- Maximum power and current @ 120 V, 60Hz 310 W, 2.7 A
- Maximum power and current @ 230 V, 50Hz 320 W, 1.5 A
- Maximum power and current @ 230 V, 60Hz 320 W, 1.5 A
- Maximum power and current @ 250 V, 50 Hz 310 W, 1.4 A
- Maximum power and current @ 250 V, 60 Hz 320 W, 1.3 A

OSRAM HSD 250 LAMP

- Power..... 250 watts
- Rated life 2000 hours
- Color temperature 6000K
- Martin part number P/N 97010103

PHILIPS MSD 250/2 LAMP

- Power..... 250 watts
- Rated life 2000 hours
- Color temperature 8500K
- Martin part number P/N 97010100

PHILIPS MSD 200 LAMP

- Power..... 200 watts
- Rated life 2000 hours
- Color temperature 6000K
- Martin part number P/N 97010106

ACCESSORIES

- MC-1 controller, EU 90718000
- MC-1 controller, US..... 90718100
- Osram HSD 250, 2000 hr discharge lamp 97010103
- Philips MSD 200, 2000 hr discharge lamp 97000106
- Philips MSD 250/2, 2000 hr discharge lamp 97000100
- Half-coupler clamp 91602005
- Wizard multi-coupler (for rigging multiple fixtures) 91606010
- Wizard floor stand..... 91606008