

# XR2000 BEAM



User's Manual Rel 1.5

D.T.S. Illuminazione srl - ITALY  
<http://www.dts-lighting.it>



The Lighting Company

Made in Italy

Le informazioni contenute in questo documento sono state attentamente redatte e controllate. Tuttavia non è assunta alcuna responsabilità per eventuali inesattezze. Tutti i diritti sono riservati e questo documento non può essere copiato, fotocopiato, riprodotto per intero o in parte senza previo consenso scritto della D.T.S .

D.T.S si riserva il diritto di apportare senza preavviso cambiamenti e modifiche estetiche , funzionali o di design a ciascun proprio prodotto. D.T.S non assume alcuna responsabilità sull'uso o sull'applicazione dei prodotti o dei circuiti descritti.

The information contained in this publication has been carefully prepared and checked. However, no responsibility will be taken for any errors. All rights are reserved and this document cannot be copied, photocopied or reproduced, in part or completely, without prior written consent from D.T.S. D.T.S. reserves the right to make any aesthetic, functional or design modifications to any of its products without prior notice. D.T.S. assumes no responsibility for the use or application of the products or circuits described herein.

Les informations contenues dans le présent manuel ont été rédigées et contrôlées avec le plus grand soin. Nous déclinons toutefois toute responsabilité en cas d'éventuelles inexactitudes. Tous droits réservés. Ce document ne peut être copié, photocopié ou reproduit, dans sa totalité ou partiellement, sans le consentement préalable de D.T.S.

D.T.S. se réserve le droit d'apporter toutes modifications et améliorations esthétiques, fonctionnelles ou de design, sans préavis, à chacun de ses produits. D.T.S. décline toute responsabilité sur l'utilisation ou sur l'application des produits ou des circuits décrits.

Las informaciones contenidas en este documento han sido cuidadosamente redactadas y controladas. Con todo, no se asume ninguna responsabilidad por eventuales inexactitudes. Todos los derechos han sido reservados y este documento no puede ser copiado, fotocopiado o reproducido, total o parcialmente, sin previa autorización escrita de D.T.S.

D.T.S. se reserva el derecho a aportar sin previo aviso cambios y modificaciones de carácter estético, funcional o de diseño a cada producto suyo. D.T.S. no se asume responsabilidad de ningún tipo sobre la utilización o sobre la aplicación de los productos o de los circuitos descritos.

**INDEX:**


|                                                                             |           |
|-----------------------------------------------------------------------------|-----------|
| <b>1- SYMBOLS</b>                                                           | <b>4</b>  |
| <b>2- GENERAL WARNING</b>                                                   | <b>4</b>  |
| <b>3- GENERAL WARRANTY CONDITION</b>                                        | <b>4</b>  |
| <b>4- TECHNICAL FEATURES</b>                                                | <b>5</b>  |
| <b>5- ACCESSORIES</b>                                                       | <b>7</b>  |
| <b>6- IMPORTANT SAFETY INFORMATION</b>                                      | <b>8</b>  |
| 6.1 Fire prevention                                                         |           |
| 6.2 Prevention of electric shock                                            |           |
| 6.3 Protection against ultraviolet radiation                                |           |
| 6.4 Safety                                                                  |           |
| 6.5 Level of protection against the penetration of solid and liquid objects |           |
| <b>7- MOUNTING THE LAMP</b>                                                 | <b>9</b>  |
| 7.1 Lamp alignment                                                          |           |
| <b>8- VOLTAGE AND FREQUENCY</b>                                             | <b>10</b> |
| <b>9- INSTALLATION</b>                                                      | <b>10</b> |
| 9.1 Safety cable                                                            |           |
| 9.2 Protection against liquids                                              |           |
| 9.3 Movement                                                                |           |
| 9.4 Risk of fire                                                            |           |
| 9.5 Forced ventilation                                                      |           |
| 9.6 Ambient temperature                                                     |           |
| <b>10- MAINS CONNECTION</b>                                                 | <b>11</b> |
| 10.1 Protection                                                             |           |
| <b>11- DMX SIGNAL CONNECTION</b>                                            | <b>12</b> |
| 11.1 DMX Addresses                                                          |           |
| 11.2 Selecting the DMX address                                              |           |
| <b>12- FIRMWARE UPDATING</b>                                                | <b>13</b> |
| <b>13- DISPLAY FUNCTIONS</b>                                                | <b>14</b> |
| <b>14- ERROR MESSAGES</b>                                                   | <b>17</b> |
| <b>15- HIDDEN MENU</b>                                                      | <b>18</b> |
| <b>16- PAN &amp; TILT SPEED</b>                                             | <b>19</b> |
| <b>17- FANS SPEED</b>                                                       | <b>19</b> |
| <b>18- OPENING THE PROJECTOR HOUSING</b>                                    | <b>20</b> |
| <b>19- REPLACING GOBOS</b>                                                  | <b>20</b> |
| <b>20- PERIODIC CLEANING</b>                                                | <b>21</b> |
| 20.1 Lenses and reflectors                                                  |           |
| 20.2 Fans and air passages                                                  |           |
| <b>21- PERIODIC CONTROLS</b>                                                |           |
| <b>22- DMX PROTOCOL</b>                                                     | <b>22</b> |
| <b>23- 8 MOTORS CONTROL CARD</b>                                            | <b>34</b> |
| <b>24- PAN &amp; TILT CARD</b>                                              | <b>35</b> |
| <b>25- CABLES RESEND CARD</b>                                               |           |
| <b>26- DISPLAY CARD</b>                                                     |           |
| <b>27- LAMP ON-OFF CONTROL CARD</b>                                         |           |
| <b>28- ROTATING GOBO WHEEL</b>                                              | <b>36</b> |
| <b>29- COLOUR WHEEL 1</b>                                                   | <b>37</b> |
| <b>30- MORE GOBOS PROVIDED IN THE PACK AS STANDARD ACCESSORIES</b>          | <b>38</b> |

## 1- SYMBOLS

Graphic symbols used on this manual



THIS SYMBOL INDICATES A HOT SURFACE

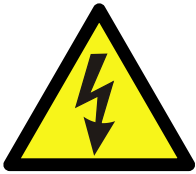


THIS SYMBOL INDICATES ELECTRIC SHOCK RISK



THIS SYMBOL INDICATES GENERAL RISK



THIS SYMBOL MEANS "DO NOT PLACE THE UNIT ON INFLAMMABLE SURFACES"

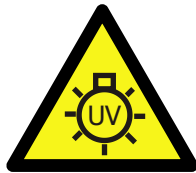

THIS SYMBOL MEANS "RADIATION FROM THIS LAMP CAN CAUSE DAMAGE TO EYES AND SKIN"



THIS SYMBOL INDICATES THE MINIMUM DISTANCE TO BE KEPT BETWEEN THE DEVICE AND THE LIT OBJECT

## 2- GENERAL WARNING

Read the instruction contained in this user manual carefully, as they give important information regarding safety during installation , use and maintenance.

The device is not for domestic use and must be installed by a qualified electrician or experienced person.

Always disconnect the device from the mains before replacing the lamp.

The lamp must be replaced if it has been damaged or deformed by prolonged use or overheating.

The device must always be equipped with an efficient ground connection.

## 3- GENERAL WARRANTY CONDITIONS

The unit is guaranteed for 36 months from the date of purchase against manufacturing material defects.

## 4- TECHNICAL FEATURES

XR2000 BEAM is a new compact moving head with an extremely high light power, projecting a parallel and very concentrated beam.

With its new lens unit, XR2000 BEAM generates a luminosity of an incredible 150,000 Lux at 5 metres, using only a 700 W lamp, giving an exceptional balance between performance and power consumption. XR2000 BEAM is designed for a wide range of professional applications, like concerts, shows, tours and big events. XR2000 BEAM ensures in fact great flexibility in use, because in a single projector it incorporates a range of functions normally available only on different units (long-throw projectors with high-power lamps, PAR 64 ACL, moving heads). XR2000 BEAM offers:

- \* Exceptional light power (150,000 Lux at 5 metres);
- \* The capacity to project a highly condensed and intense beam of light even over great distances, thanks to the high efficiency of the new lens;
- \* Variety of colours (linear CMY synthesis + wheel with 7 colours);
- \* Customizable gobo wheel;
- \* Insertable linear frost filter (soft edge);
- \* Fast and uniform Pan and Tilt movements.

The XR2000 BEAM is also the ideal light for a vast range of applications in which quiet operation is a priority, thanks to its silent ventilation system and silent pan/tilt operation.

The 16 bit Pan/Tilt mechanism features an exclusive Super Speed function, and a locking system with recessed buttons. Access to every feature of the internal menu is simple and direct, thanks to the new user interface featuring a LCD backlit graphic display (128 x 64).

### XR2000 BEAM

(Cod. 03.MB001.EB.L)

- Electronic ballast 90-245V 50/60 Hz • Black finish

### Lamp

Lamp: Philips MSR Gold 700/2 Fastfit

Automatic switching ON of lamp in case of accidental switching OFF.

Lamp ON/OFF via DMX; Reset via DMX.

**Optical group** 150.000 Lux at 5 m (5,5° beam angle)

Dichroic glass reflector

### Dimmer / shutter / strobo

Linear dimmer

Shutter

Strobe from 0,85 flash/sec to 10 flash/sec

### Colours

CMY colour synthesis system + colour wheel (7 colours + open) with linear selection for perfect 2-colour beams

Colour change with blackout sync; rainbow effect

### Gobos

1 customizable rotating gobo wheel (7 gobos); extractable gobo holders

Gobo change with synchronized blackout

Gobo scrolling; Gobo shake

### Frost

Frost filter (soft edge)

## **4- TECHNICAL FEATURES**

### **Pan / Tilt**

Pan 540°(3,9 sec.); Tilt 270°(2,6 sec.); 16-bit resolution

Super Speed function; extremely smooth and precise movements even at the highest speeds

Pan / Tilt locking system with recessed buttons

Automatic Pan/Tilt repositioning in case of knocks

### **DMX channels**

21(default) or 16 DMX channels

Internal operating system updatable via DMX

### **Interface**

LCD backlit graphic display (128x64)

### **Connections**

4 XLR connectors (3-pole In and Out; 5-pole In and Out) by Neutrik

POWERCONN connector by Neutrik

### **Power supply**

Electronic ballast: 90 - 260 V (50/60 Hz)

Power consumption: 820 W

Power saving mode (the lamp dims to 50% six seconds after shutter closure)

### **Standard accessories**

2 x "C" GQuick clamps with "fastlock" connection

### **Thermal**

Operating ambient temperature: -10° / 40°

### **Weight**

37 Kg

#### **WARNING**

FRESNEL FRONTAL LENS CAN ACT AS A POWERFULL MAGNIFIER IF EXPOSED TOWARD DIRECT SUNLIGHT; THIS CAN CAUSE INTERNAL UNIT OVERTEMPERATURE

COMPROMISING ELECTRONIC AND MECHANICAL PARTS OR MELTING OF INTERNAL PARTS, TILL STARTING FIRE IN THE WORSE CASES.



#### **NEVER EXPOSE THE FRONTAL FRESNEL LENS TO DIRECT SUNLIGHT**

THE LAST COMMAND BEFORE POWER OFF THE UNIT AT THE END OF THE SHOW SHOULD POINT THE FRONTAL FRESNEL LENS DOWN TOWARDS THE GROUND.




## 4- TECHNICAL FEATURES

### Dimensions

Packaging Dimensions (LxWxH)  
610 x 540 x 720 mm  
Weight: 42 Kg

Unit Dimensions (LxWxH)  
510x510x775mm  
Weight: 37 Kg

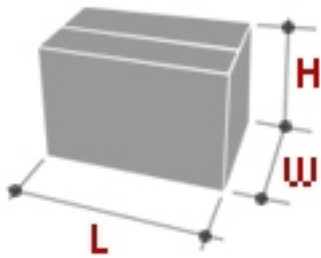

## 5- ACCESSORIES

### As standard

- 1 x MSR Gold 700/2 Fastfit lamp
- 1 x POWERCONN male cable connector (cod. 0520P014)
- 1 x XLR 5 Pins male cable connector (cod. 0508B028)
- 1 x XLR 5 Pins female cable connector (cod. 0508B027)
- 5 x Metal Gobos
- 2 x "C" Clamp GQUICK with "Fast Lock" connection 1/4 turn (max. load. 80Kg) (cod. 0521A014)
- User's manual

### Optional (on request)

- Double Professional Flight case; compartment for lamps and accessories, swivel wheels, cover with hinges with-stay, dishes on cover for piling, 8 handles (2 each side) (cod. 0521C038)
- Raincover for XR2000 base (top) (cod. 03.MA009)
- Raincover for XR2000 base (bottom) (cod. 03.MA010)
- Embedding flange for XR2000 (visible display) (cod. 03.MA008)
- Embedding flange for XR2000 (no visible display) (cod. 03.MA007)
- Wireless DMX receiver card (cod. 03.LA.012)
- "C"Clamp G60 black (max. load 50Kg) (cod. 0521A004)
- "C"Clamp G60 chrome (max. load. 50Kg) (cod. 0521A004.20)
- "C"Clamp GQUICK with "Fast Lock"connection 1/4 turn (max. load. 80Kg) (cod. 0521A014)
- "C"Clamp G100 black / professional (max. load. 200Kg) (cod. 0521A015)
- Omega clamp with "Fast Lock"connection 1/4 turn
- Safety wire (3mm x 60 cm), ring spring catch, max. capacity load 60Kg (cod. 0521A010)

## 6- IMPORTANT SAFETY INFORMATION


### 6.1 Fire prevention:

XR2000 BEAM uses a PHILIPS MSR Gold 700/2 Fastfit lamp

The use of any other alternative lamp is not recommended and will null and void the fixture's warranty.

-Never locate the fixture on any flammable surface.

-Minimum distance from flammable materials: 1.5 MT. 

-Minimum distance from the closest illuminable surface: 2 MT. 

-Replace any blown or damaged fuses only with those of identical value. Refer to the wiring diagram if there is any doubt.

-Connect the projector to mains power via a thermal magnetic circuit breaker.

### 6.2 Prevention of electric shock:



-High voltage is present inside the unit. Unplug the unit prior to performing any function which involves touching the inside of the moving head, including lamp replacement.

-The level of technology inherent in the XR2000 BEAM requires the assistance of specialised personnel for all servicing. Please refer to an authorised DTS service centre.

-A good earth connection is essential for proper functioning of the projector.

-Never connect the unit without proper earth connection.

-The fixture should be located in places with a good air ventilation.

### 6.3 Protection against ultraviolet radiation:



-Never turn on the lamp if any of the lenses, filters or ABS covering are damaged. Their respective shielding functions will only operate efficiently if they are in perfect working order.

-Never look directly the lamp when it is on.

### 6.4 Safety:



-The projector should always be installed with bolts, clamps and other tools that are capable of supporting the weight of the unit.

-Always use a second safety cable to sustain the weight of the unit in case of the failure of the main fixing point.

-The external surface of the unit, at various points, may exceed 70°C. Never handle the unit until at least 10 minutes have elapsed since the lamp was turned off.

-Always replace the lamp if any physical damage is evident.



-Never install the fixture in an enclosed area lacking sufficient air flow. The ambient temperature should not exceed 40°C.

-A hot lamp may explode, so always wait for at least 10 minutes prior to attempting to replace the lamp.

-Always wear suitable hand protection when handling the lamp.

### 6.5 Level of protection against the penetration of solid and liquid objects:



-The projector is classified as an ordinary appliance and its protection level against the penetration of solid and liquid objects is IP 20.

For outdoor use, D.T.S. recommend the use of the dedicated raincovers:

- Raincover for XR2000 base (top) (cod. 03.MA009)
- Raincover for XR2000 base (bottom) (cod. 03.MA010)



## 7- MOUNTING THE LAMPS

**Warning: Switch off the unit before replacing the lamp.**



Philips MSR Gold 700/2 Fastfit  
Power 700W  
Luminous flux 50,000 lm  
Colour temperature 7.500°K  
Lampbase PGJX50  
Rated life 750 hours

1) Using a screwdriver, loose the 3 screws A, B, C, (photo 1) and remove the metal cover .

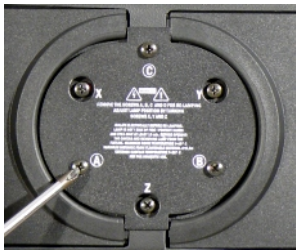


Photo 1

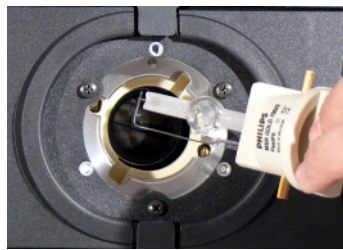


Photo 2

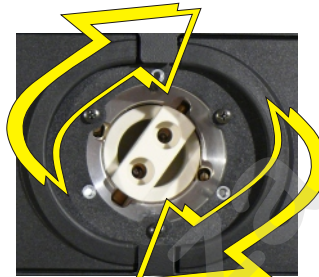


Photo 3

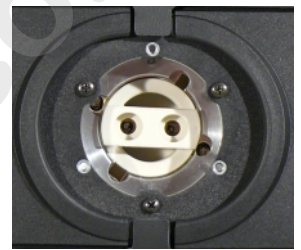


Photo 4

2) Insert the lamp (photo2).

3) Rotate the lamp 1/4 turn clockwise (photo 3 and 4).

The lamp used on XR2000 BEAM is made in quartz glass and should be handled with care. Always follow the instructions supplied in the lamp's packaging. Never touch the glass directly but use the tissue provided in the lamp's packaging. The PGJX50 lamp socket is not symmetrical.

**DO NOT USE UNDUE FORCE ON THE GLASS.** In case of difficulty, read again the instructions and repeat the procedure.

4) Replace the metal cover and tighten the screws A,B,C, which were previously removed.

**WARNING: Never look directly at the lamp when it's lit.**

**Discharge lamps emits UV rays; radiation from this lamp can cause damage to eyes and skin.**



### 7.1 Lamp alignment

Attention: we recommend to align the lamp in the optical system to avoid overheating of the dichroic filters and other components inside the unit. The lamp alignment is also essential to obtain the maximum uniformity and luminous performance by the projection.

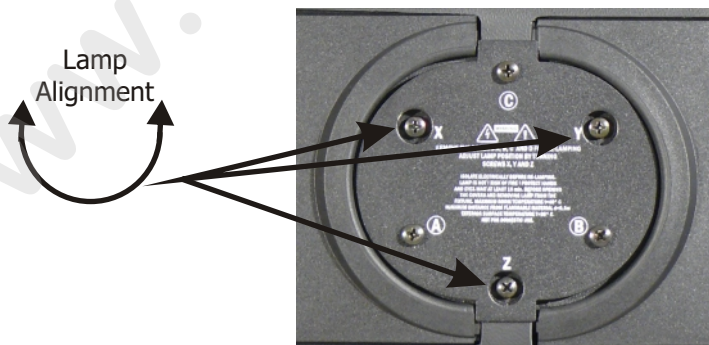


Photo 5



1) Mount the fixture in an orientation so that it may be squarely projected onto a smooth white surface no less than 3 meters away. 2) Using a console or the menu system, focus an open (white) beam onto the surface and observe the beam. 3) Using a phillips-head screw driver, rotate the 3 adjusters X, Y and Z (photo 5) until you achieve a uniform flat field.

When the lamp is correctly optimized, you will have an evenly projected light beam, with no shadows or zones wich are brighter than others.

## **8- VOLTAGE AND FREQUENCY**

The XR2000 BEAM with electronic ballast can operate at 90-260 VOLT 50 or 60 Hz.

## **9- INSTALLATION**



XR2000 BEAM may be either floor or ceiling mounted.

For floor mounting installations, the XR2000 BEAM is supplied with four rubber mounting feet on the base.

For ceiling mounted installations, we recommend the use of appropriate clamps to fix the unit to the mounting surface.

The supporting structure from which the unit is hung should be capable of bearing the weight of the unit, as should any clamps used to hang it. The structure should also be sufficiently rigid so as not to move or shake whilst the XR2000 BEAM is moving.


Eight 1/4 turn Fast Locks connections placed in the base of the units allow to fix the XR2000 BEAM in any position, by using the two Fast Lock 'C' clamps provided in the box.

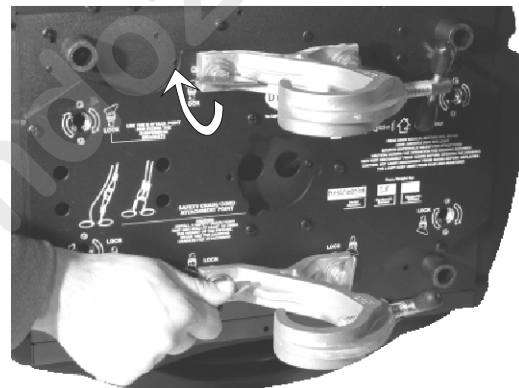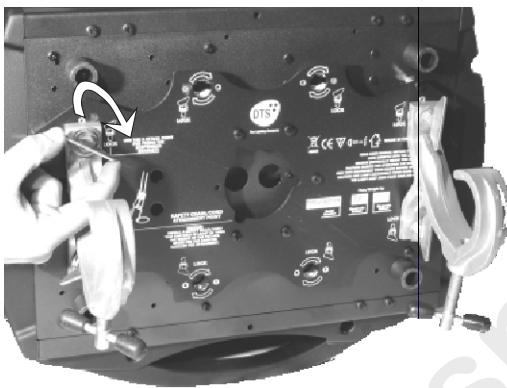

### **9.1- Safety cable**

We recommend the use of a safety cable or chain connected to the XR2000 BEAM and to the suspension truss in order to avoid the fixture accidentally falling should the main fixing point fail. Make sure that the iron cable or chain can bear the weight of the entire unit.

You may attach the safety chain to the two holes (A) located on the base of the fixture, as shown in the picture below.

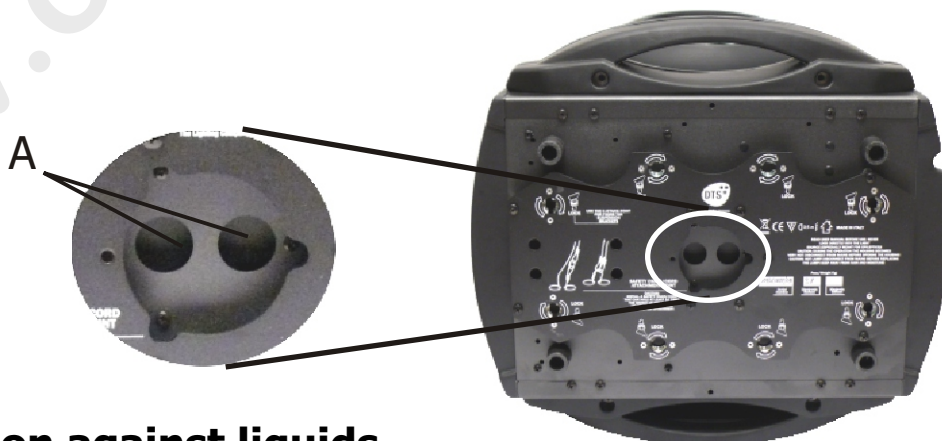

### **9.2- Protection against liquids**

The projector contains electric and electronic components which should under no circumstances come into contact with oil, water or any other liquid. The proper unit functioning would be compromised should this occur.

### 9.3- Movement

The projector has a maximum movement of 540° for Pan and 270° for Tilt. DO NOT place any obstructions in the path of the projector's movement.



#### WARNING

Do not place any object in the path of the projector's movement



### 9.4- Risk of fire

Each fixture produces heat and must be installed in a well-ventilated place. The minimum recommended distance from flammable material is 1 MT.



Minimum distance from the object being illuminated is 2 MT. 12M

### 9.5- Forced ventilation

You will note, on inspection, that the unit features various air inlets and cooling fans located on both the base and head of the fixture. These should, under no circumstances, be blocked or obstructed whilst the projector is in operation.

Doing so could cause the fixture to seriously overheat thereby compromising its proper operation.

### 9.6- Ambient temperature

The projector should never be installed in places that lack a constant air flow. The ambient temperature should NOT exceed 40°C.

## 10- MAINS CONNECTION

XR2000 BEAM with electronic ballast operate at 90-260 VOLT 50-60 Hz.

Prior to connecting the unit to your mains supply, ensure that the model in your possession correctly matches the mains supply available. For connection purposes, ensure that your plug is capable of supporting 8 amps at 230V, Or 16 amps at 100-120 V

Strict adherence to regulatory norms is strongly recommended.



Electronic ballast  
90-260V 50 / 60Hz

### 10.1- Protection

The use of a thermal magnetic circuit breaker is recommended for each XR2000 BEAM.

A good earth connection is essential for the correct operation of the projector.



## 11- DMX SIGNAL CONNECTION

The unit operates using the digital DMX 512 (1990) signal. Connection between the mixer and the projector or between projectors must be carried out using a two pair screened  $\varnothing$  0.5 mm cable and a XLR 5 or 3 pins connector. Ensure that the conductors do not touch each other. Do not connect the cable ground to the XLR chassis

The plug housing must be isolated. Connect the mixer signal to the DMX IN projector plug and connect it to the next projector by connecting the DMX OUT plug on the first projector to the DMX IN plug of the second one.

This way, all the projectors are cascade connected.

NB. If the display showing the DMX address flashes, then one of the following errors has occurred:


- DMX signal not present
- DMX address not valid
- DMX reception problem




For Installations where long distance DMX cable connections are needed, we suggest to use a DMX terminator.

The DMX terminator is a male XLR 3-5 pins connector with a 120 ohm resistor Between pin 2 and 3.

The DMX terminator must be plugged into the last unit (DMX out panel connector) of the DMX line.

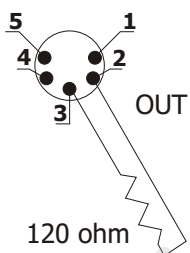

PLACE A 120 OHM RESISTOR BETWEEN PIN 2 AND 3 OF A MALE XRL CONNECTOR AND PLUG IT INTO THE DMX OUT PANEL CONNECTOR OF THE LAST UNIT CONNECTED TO THE DMX LINE

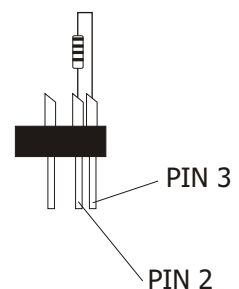

## 11.1-DMX Addresses

XR2000 BEAM can be controlled with 21 (default) or 16 DMX channels.

If you want to use the unit in 21 channels, set the following addresses on the mixer:

Projector 1 A001

Projector 2 A022

If you want to select the next projector, just add "21"

Projector 3 A043

..... A....

projector 6 A106

## 11.2-Selecting the DMX address

1) Press the UP-DOWN key until you reach the required DMX channel. The numbers on the display will start to flash (but the new DMX address hasn't yet been set).

2) Press ENTER to confirm your selection. The numbers on the display will stop flashing and the projector is now setted to the new DMX address.

TRICKS:

if you keep pushed the UP or DOWN keys, the channels are calculated more quickly and you get a faster selection.

## 12 FIRMWARE UPDATING

Warning:

This procedure require a base knowlege of computer applications and Windows Hyperterminal program. **Please refer to an authorised DTS service centre.**



To update the software version of the XR2000 BEAM you need:

D.T.S. RED BOX interface (D.T.S. Code: 03.LA.008).

USB-DMX Drivers for the D.T.S. RED BOX interface .

(The drivers and the installation procedure are available in our web site [www.dts-lighting.it](http://www.dts-lighting.it))

'Updating the software version'


Please follow the procedure below to perform the update:

1. Install the D.T.S. RED BOX USB-DMX driver on the PC you will use to update the unit software.
2. Connect the D.T.S. RED BOX interface to the PC by using a USB cable.
3. Connect the D.T.S. RED BOX interface to the fixture by using a DMX cable.
4. Download the new software version into the unit by using Windows Hyperterminal program.

It will be possible to download the software from the reserved area of D.T.S. web site:  
[www.dts-lighting.it](http://www.dts-lighting.it).



## 13- DISPLAY FUNCTIONS

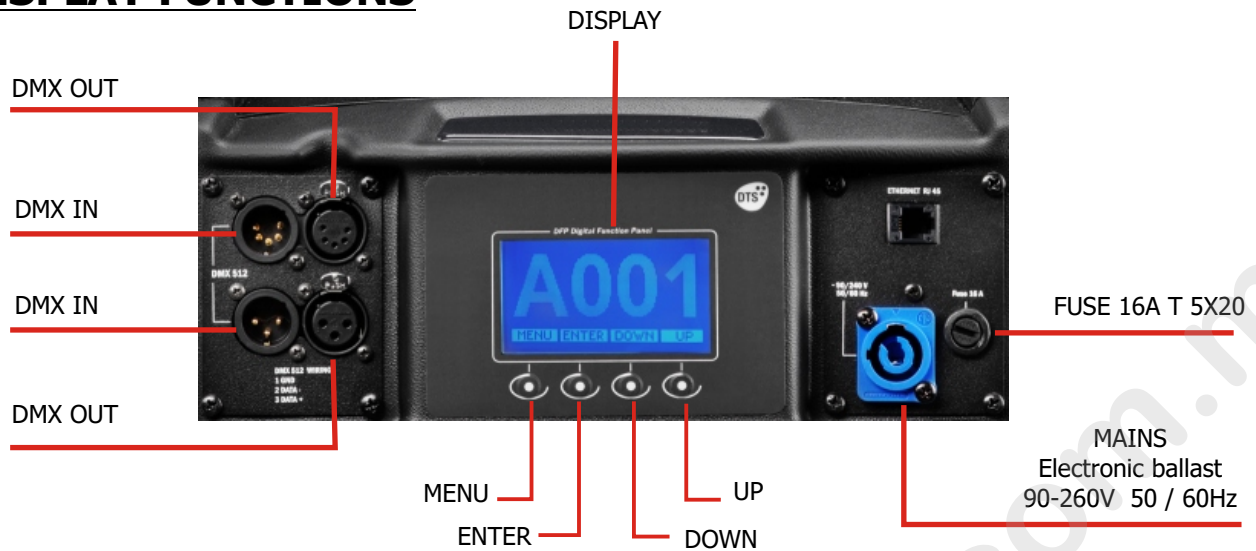

### DISPLAY FUNCTIONS

The XR2000 BEAM display panel shows all the available functions . Using these functions, it is possible to change some of the parameters and add some functions. Changing the DTS setting can vary the functions of the unit so that it does not respond to the DMX 512 used to control it. Carefully follow the instructions below before carrying out any variations or selections.

NOTE: the symbol  shows which key has to be pushed to obtain the desired function.

  **Pan Direction**

**PAN DIRECTION**  
This menu allows to set the Pan movement.  
Normal or Reversed



Pan movement Normal or Reversed  
Default = Normal



  **Tilt Direction**

**TILT DIRECTION**  
This menu allows to set the Pan movement.  
Normal or Reversed




Tilt movement Normal or Reversed  
Default = Normal



  **Pan Tilt Speed**

**PAN TILT SPEED**  
Pan Tilt Speed control (1-4)

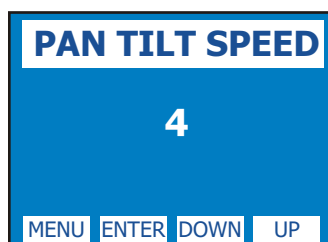

Pan Tilt Speed control  
Default = 4





## 13- DISPLAY FUNCTIONS

### Display


 

DISPLAY FLIP / STAND BY / CONTRAST

**Display Flip:**  
Reverses display's reading depending on the mounting position  
(On the ground or suspended).


**Display Standby:**  
To turn off the display (after 5 seconds)  
Or leave it always on.

**Display Contrast:**  
Display contrast regulation (1-16)

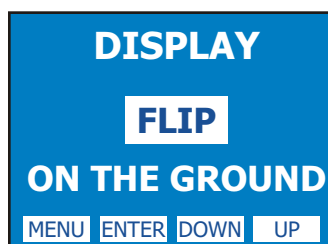

Display Flip  
ON THE GROUND (Default)  
SUSPENDED



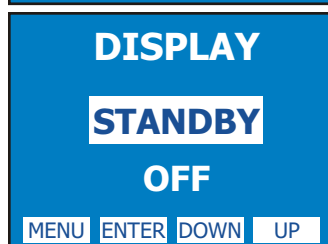

Display Standby  
OFF = Display Standby disabled  
(Default)  
ON = Display goes OFF after 5 seconds





Display Contrast  
1-16 (Default = 8)



### DMX Mode

**DMX MODE**  
To select DMX mode :  
21 channels or 16 channels



DMX mode  
21 channels (Default)  
16 channels




### Lamp


**LAMP**  
Lamp always ON, always OFF,  
lamp ON-OFF selectable via DMX  
And lamp life time reset

**ADJUST**  
To adjust the lamp with no mixer  
connected.  
It's possible to set the parameters for  
PAN-TILT and ZOOM

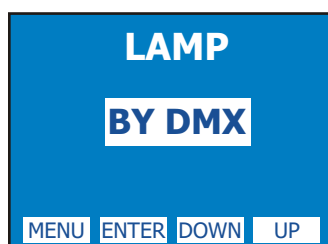

BY DMX = ON / OFF via DMX (default)  
ALWAYS ON = Forced ON  
ALWAYS OFF = Forced OFF  
RESET COUNTER = Lamp life time  
reset



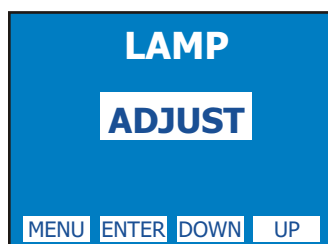

LAMP ADJUST = To adjust the lamp  
with no mixer connected.  
It's possible to set the parameters for  
PAN-TILT and ZOOM




## 13- DISPLAY FUNCTIONS

  Reset

RESET  
Reset via DMX ENABLED / DISABLED  
and unit reset

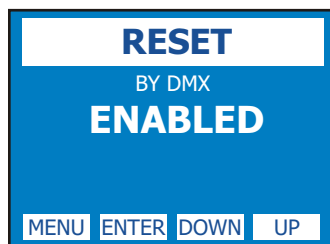


ENABLED = Reset via DMX enabled  
(Default)  
DISABLED = Reset via DMX disabled  
NOW = Unit motors reset



  Fan Speed

FAN SPEED  
Fan Speed control

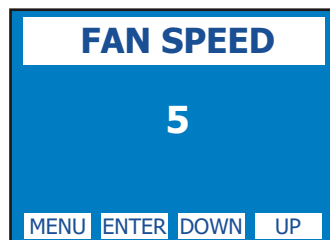


Fan speed control  
1-5 (Default = 5)



  Gobo Rotation

GOBO ROTATION  
Gobo rotation control the Rotating speed of gobo

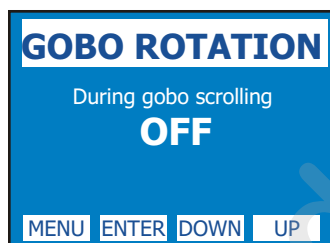


ON  
OFF = (Default)



  CMY Blackout

CMY BLACKOUT  
CMY filters blades inserted at 100% if the dimmer  
remain closed for more than 5 seconds.  
By activating this function, it will be possible to  
reduce substantially any visible light reflection  
coming out from the front lens when dimmer is  
closed.

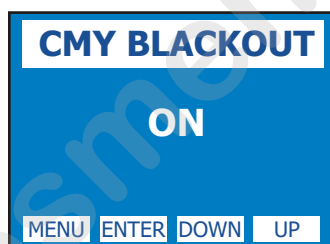


ON = Blackout enabled (Default)  
OFF = Blackout disabled



  System info

SYSTEM INFO  
Lamp life time, lamp strikes, unit life time, 8  
motors card software version, Pan&Tilt card  
software version and unit model

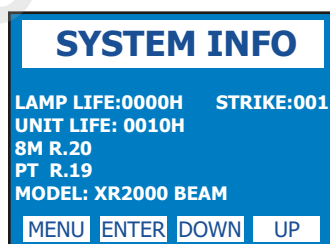

SYSTEM INFO  
Lamp life time, lamp strikes, unit life  
time, 8 motors card software  
version, Pan&Tilt card software  
version and unit model



  Reserved

RESERVED  
Pan lock-Tilt lock  
Pan free-Tilt free  
System Reboot  
(Code = 100)



Pan Lock = Lock the Pan to the  
desired value  
Tilt Lock = Lock the Tilt to the  
desired value  
Pan Free = Remove power to Pan  
motor  
Tilt Free = Remove power to Tilt  
motor  
System Reboot = Unit Reboot  
without needing of turning OFF the  
unit




## 13- DISPLAY FUNCTIONS



Default

DEFAULT  
To restore main settings

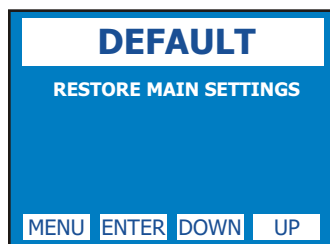


Default  
To restore main settings



Motors Test

TEST MODE  
Full test and single function test.

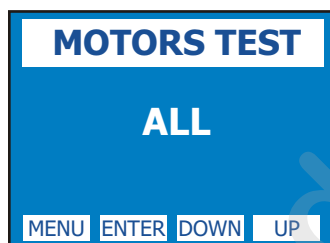


Motors Test  
ALL ,PAN, TILT, DIMMER, SHUTTER,  
COLOUR WHEEL, CYAN, MAGENTA,  
YELLOW and FROST.




## 14- ERROR MESSAGES




COLOUR WHEEL  
POSITION ERROR

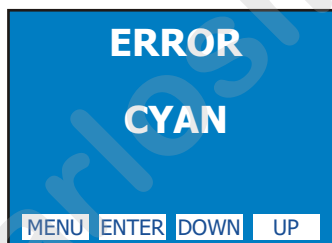


CYAN POSITION  
ERROR

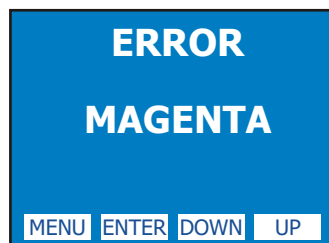


MAGENTA POSITION  
ERROR

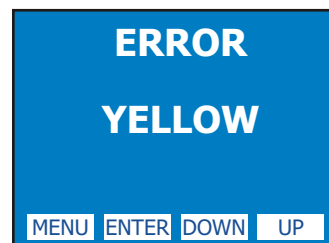


YELLOW POSITION  
ERROR

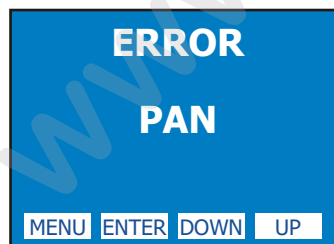

PAN REPOSITIONING  
ENCODER ERROR

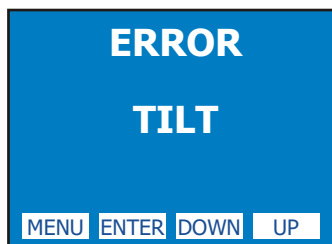

TILT REPOSITIONING  
ENCODER ERROR

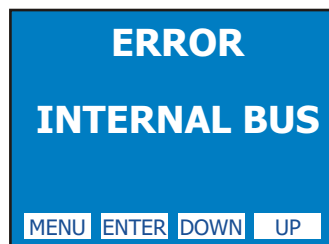

COMMUNICATION  
PROBLEM BETWEEN 8  
MOTORS CARD AND  
PAN&TILT CARD



DMX ADDRESS  
ERROR

## 15- HIDDEN MENU

For technical personnel only.

To operate this menu:

-Connect the projector to the DMX controller (DMX SIGNAL MUST BE CORRECTLY RECEIVED)


- Reset the XR2000 BEAM (reset from the MENU, not from the DMX controller!).
- While reset is running, press the MENU and ENTER keys at the same time.




ELECTRONIC  
CALIBRATION OF THE  
MOTORS



RESET EEPROM.  
RESET ALL SETTINGS  
TO 128 VALUE

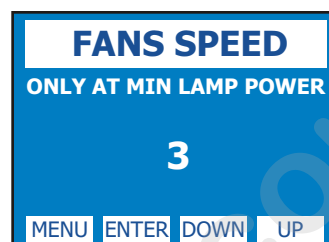

FAN SPEED WHEN  
DIMMER CLOSED

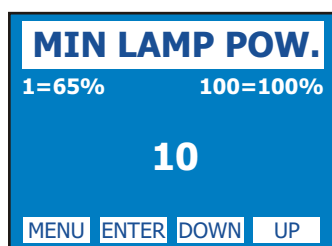

LAMP POWER WHEN  
DIMMER CLOSED




EXIT FROM HIDDEN  
MENU

## Calibration mode



PAN ALIGNMENT  
To align Pan position

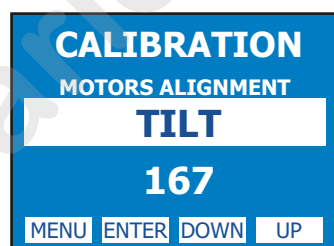

TILT ALIGNMENT  
To align Tilt position



GOBO WHEEL ALIGNMENT  
To align Gobo wheel




GOBO WHEEL INDEX ALIGNMENT  
To align Gobo wheel Index



COLOUR WHEEL ALIGNMENT  
To align Colour wheel



SHUTTER ALIGNMENT  
To align Shutter blades

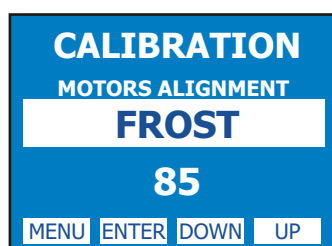

FROST ALIGNMENT  
To align Frost



CYAN ZERO ALIGNMENT  
Cyan zero position setting

## Calibration mode



CYAN PATH ALIGNMENT  
Cyan excursion setting



MAGENTA ZERO ALIGNMENT  
Magenta zero position setting



MAGENTA PATH ALIGNMENT  
Magenta excursion setting



YELLOW ZERO ALIGNMENT  
Yellow zero position setting



YELLOW PATH ALIGNMENT  
Yellow excursion setting

## 16- PAN & TILT SPEED (default: 4)

You can set the PAN and TILT motors at high speed on your XR2000 BEAM.

Press menu until you see PAN TILT SPEED.

Press ENTER and select a speed with UP-DOWN (there are 4 speeds). Confirm by pressing ENTER.

## 17- FAN SPEED ( default: 5)

Fan speed regulation makes it possible to reduce fan noise. However, the ambient temperature must be less than 35° C.



## 18- OPENING THE PROJECTOR HOUSING

It is possible to inspect the inside of the projector by removing the cover as indicated below.

### ATTENTION

**REMOVE MAINS POWER PRIOR TO ACCESSING THE PROJECTOR'S INTERNAL COMPONENTS.**

- 1) Using a screwdriver, loose the 3 screws A, B, C, (photo 1) and remove the metal cover .
- 2) Loosen the 2 screws which fix the head covers (photo 2) .
- 3) Once unscrewed, simply lift the covers to access the internal components (photo 3).

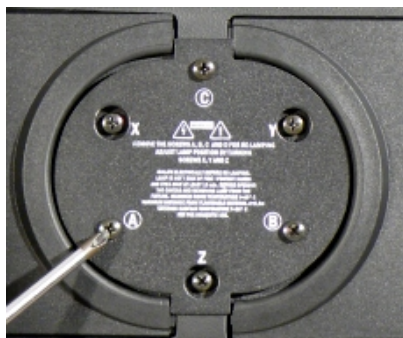


Photo 1



Photo 2



Photo 3

## 19- REPLACING GOBOS

XR2000 BEAM uses a mechanical system which allows the fixture's gobos to be removed without the use of special tools. Replacement gobos should be made of either heat resistant glass or metal.

An ever-increasing range of gobos is available from your DTS sales network.

Gobo dimensions are as follows:

ø external (ED) = 27.9 mm

ø of image with defined edge (ID) = 24 mm

thickness = from 0.2 to 4 mm (see catalogue)



### Coated side

When an object is held up the coated side of the glass gobo there is no space between the object and its reflection.

### Uncoated side

When an object is held up the uncoated side of the glass gobo there is a space between the object and its reflection.



**Coated side**



**Uncoated side**

**Load with coated surface toward the light source.**

## **Replacing gobos on the rotating gobo wheel**

When replacing gobos, ensure that the projector is switched off.

- 1) Open the projector housing as described on page 20.
- 2) Remove the gobo holder to allow easier access to the gobo (photo 1).
- 3) Release the gobo retaining spring and carefully remove the gobo (photo 2).
- 4) Reverse the procedure to install a replacement gobo.

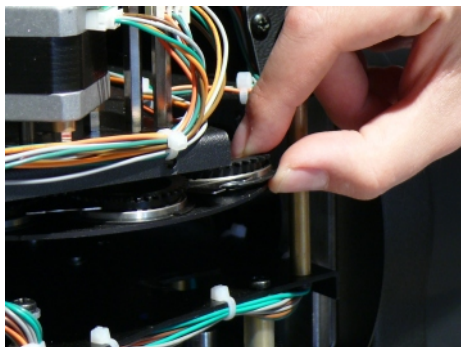


Photo 1



Photo 2

## **20- PERIODIC CLEANING**

### **20.1- Lenses and reflectors**

Even a fine layer of dust can reduce the luminous output substantially. Regularly clean all lenses and the reflector using a soft cotton cloth, dampened with a specialist lens cleaning solution.

### **20.2- Fans and air passages**

The fans and air passages must be cleaned approximately every 6 weeks. This periodic cleaning will depend of course, on the conditions in which the projector is operating. Suitable instruments for performing this type of maintenance are a brush and a common vacuum cleaner or an air compressor. If necessary, clean the fans and air passages more frequently.

## **21- PERIODIC CONTROLS**

### **Attention**

Disconnect mains power prior to removing the projector housing.

### **Lamp**

The lamp should be replaced if there is any visible damage or deformation due to heat. This will help to avoid the danger of the lamp exploding.

XR2000 BEAM lamp lifespan is about 750 hours, then it is necessary to replace it.

### **Mechanical parts**


Periodically check all mechanical parts, gears, guides, belts, etc. for wear and tear, replacing them if necessary. Periodically check the lubrication of all components, particularly the parts subject to high temperatures. If necessary, lubricate with suitable lubricant, available from your D.T.S. distributor. Check the tension of the belts and adjust it if necessary.

### **Electrical components**

Check all electrical components for correct earthing and proper connection of all connectors, refastening if necessary.

### **Fuse replacement**

Locate the fuse, which protects the lamp and electronics, in the base of the XR2000 BEAM. Using a multimeter, test the condition of the fuse, replacing it with one of equivalent type if necessary.

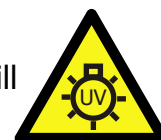

## 22- DMX PROTOCOL

### 21 CHANNELS MODE (DEFAULT)

- 1 PAN msb 540°**
- 2 PAN lsb**
- 3 TILT msb 270°**
- 4 TILT lsb**
- 5 SPEED MOVEMENT**
- 6 DIMMER**
- 7 SHUTTER**
- 8 COLOUR**
- 9 COLOUR mode**
- 10 CYAN**
- 11 MAGENTA**
- 12 YELLOW**
- 13 SPEED CMY**
- 14 MACRO CMY**
- 15 GOBO**
- 16 GOBO MODE**
- 17 GOBO ROTATION/INDEX**
- 18 GOBO INDEX FINE**
- 19 GOBO SHAKE**
- 20 FROST**
- 21 RESET - LAMP**

|             |          |                           |
|-------------|----------|---------------------------|
| DMX CHANNEL | <b>1</b> | Parameter: <b>PAN msb</b> |
|-------------|----------|---------------------------|

|             |          |                           |
|-------------|----------|---------------------------|
| DMX CHANNEL | <b>2</b> | Parameter: <b>PAN lsb</b> |
|-------------|----------|---------------------------|

|             |          |                            |
|-------------|----------|----------------------------|
| DMX CHANNEL | <b>3</b> | Parameter: <b>TILT msb</b> |
|-------------|----------|----------------------------|

|             |          |                            |
|-------------|----------|----------------------------|
| DMX CHANNEL | <b>4</b> | Parameter: <b>TILT lsb</b> |
|-------------|----------|----------------------------|

|             |          |                                  |
|-------------|----------|----------------------------------|
| DMX CHANNEL | <b>5</b> | Parameter: <b>SPEED MOVEMENT</b> |
|-------------|----------|----------------------------------|

| DMX range Value  | Mid point DMX value | Move range (degrees) | Mode | Option | Function                                                    |
|------------------|---------------------|----------------------|------|--------|-------------------------------------------------------------|
| <b>000 - 010</b> |                     |                      |      |        | <b>Standard</b>                                             |
| <b>011-025</b>   |                     |                      |      |        | <b>Fast movement</b>                                        |
| <b>026-127</b>   |                     |                      |      |        | <b>Vector mode from fast to slow</b>                        |
| <b>128-247</b>   |                     |                      |      |        | <b>Variable time reaction to DMX signal ( fast to slow)</b> |
| <b>248-255</b>   |                     |                      |      |        | <b>Silent Mode</b>                                          |

|             |   |                          |
|-------------|---|--------------------------|
| DMX CHANNEL | 6 | Parameter: <b>DIMMER</b> |
|-------------|---|--------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                   |
|-----------------|---------------------|----------------------|------|--------|----------------------------|
| 0-7             |                     |                      |      |        | <b>Black-out</b>           |
| 8-255           |                     |                      |      |        | <b>Proportional dimmer</b> |

|             |   |                           |
|-------------|---|---------------------------|
| DMX CHANNEL | 7 | Parameter: <b>SHUTTER</b> |
|-------------|---|---------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                             |
|-----------------|---------------------|----------------------|------|--------|--------------------------------------|
| 000-019         |                     |                      |      |        | <b>Black - out</b>                   |
| 020-039         |                     |                      |      |        | <b>Open</b>                          |
| 040-059         |                     |                      |      |        | <b>Black-out</b>                     |
| 060-079         |                     |                      |      |        | <b>Random Strobe</b>                 |
| 080-089         |                     |                      |      |        | <b>Strobe speed 1 min. (0,85 Hz)</b> |
| 090-099         |                     |                      |      |        | <b>Strobe speed 2 (1,4 Hz)</b>       |
| 100-109         |                     |                      |      |        | <b>Strobe speed 3 (2 HZ)</b>         |
| 110-119         |                     |                      |      |        | <b>Strobe speed 4 (3,75 Hz)</b>      |
| 120-129         |                     |                      |      |        | <b>Strobe speed 5 (5 Hz)</b>         |
| 130-139         |                     |                      |      |        | <b>Strobe speed 6 max. (6,75 Hz)</b> |
| 140-149         |                     |                      |      |        | <b>Pulse open speed 1 min.</b>       |
| 150-159         |                     |                      |      |        | <b>Pulse open speed 2</b>            |
| 160-169         |                     |                      |      |        | <b>Pulse open speed 3</b>            |
| 170-179         |                     |                      |      |        | <b>Pulse open speed 4 max.</b>       |
| 180-189         |                     |                      |      |        | <b>Pulse closed speed 1 min.</b>     |
| 190-199         |                     |                      |      |        | <b>Pulse closed speed 2</b>          |
| 200-209         |                     |                      |      |        | <b>Pulse closed speed 3</b>          |
| 210-219         |                     |                      |      |        | <b>Pulse closed speed 4 max.</b>     |
| 220-227         |                     |                      |      |        | <b>Colour and Gobo in black-out</b>  |
| 228-233         |                     |                      |      |        | <b>Pan and Tilt in black-out</b>     |
| 234-255         |                     |                      |      |        | <b>Open</b>                          |

|             |   |                          |
|-------------|---|--------------------------|
| DMX CHANNEL | 8 | Parameter: <b>COLOUR</b> |
|-------------|---|--------------------------|

**IF CHANNEL 9 = FULL COLOUR (DMX range value 0 - 63)**

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function        |
|-----------------|---------------------|----------------------|------|--------|-----------------|
| 000-031         |                     |                      |      |        | <b>Colour 1</b> |
| 032-063         |                     |                      |      |        | <b>Colour 2</b> |
| 064-095         |                     |                      |      |        | <b>Colour 3</b> |
| 096-127         |                     |                      |      |        | <b>Colour 4</b> |
| 128-159         |                     |                      |      |        | <b>Colour 5</b> |
| 160-191         |                     |                      |      |        | <b>Colour 6</b> |
| 192-223         |                     |                      |      |        | <b>Colour 7</b> |
| 224-255         |                     |                      |      |        | <b>Colour 8</b> |

| DMX CHANNEL                                                 | 8                   | Parameter: <b>COLOUR</b> |      |        |            |
|-------------------------------------------------------------|---------------------|--------------------------|------|--------|------------|
| <b>IF CHANNEL 9 = FULL COLOUR (Dmx range value 64 -127)</b> |                     |                          |      |        |            |
| DMX range Value                                             | Mid point DMX value | Move range (degrees)     | Mode | Option | Function   |
| 000 - 27                                                    |                     |                          |      |        | Colour 1   |
| 028 - 055                                                   |                     |                          |      |        | Colour 1-2 |
| 056 - 083                                                   |                     |                          |      |        | Colour 2-3 |
| 084 - 111                                                   |                     |                          |      |        | Colour 3-4 |
| 112- 139                                                    |                     |                          |      |        | Colour 4-5 |
| 140 - 167                                                   |                     |                          |      |        | Colour 5-6 |
| 168 - 195                                                   |                     |                          |      |        | Colour 6-7 |
| 196 - 223                                                   |                     |                          |      |        | Colour 7-8 |
| 224 - 255                                                   |                     |                          |      |        | Colour 8-1 |

|                                                                       |  |  |  |  |                     |
|-----------------------------------------------------------------------|--|--|--|--|---------------------|
| <b>IF CHANNEL 9 = PROPORTIONAL COLOUR (Dmx range value 128 - 191)</b> |  |  |  |  |                     |
| 000 - 010                                                             |  |  |  |  | No Colour           |
| 011-255                                                               |  |  |  |  | Proportional colour |

|                                                           |  |  |  |  |                                 |
|-----------------------------------------------------------|--|--|--|--|---------------------------------|
| <b>IF CHANNEL 9 = RAINBOW (Dmx range value 192 - 255)</b> |  |  |  |  |                                 |
| 000- 009                                                  |  |  |  |  | No Colour                       |
| 010-127                                                   |  |  |  |  | Right Rot.Speed from Max to Min |
| 128-137                                                   |  |  |  |  | Stop                            |
| 138-255                                                   |  |  |  |  | Left Rot.speed from Min to Max  |

|             |   |                               |  |  |  |
|-------------|---|-------------------------------|--|--|--|
| DMX CHANNEL | 9 | Parameter: <b>COLOUR MODE</b> |  |  |  |
|-------------|---|-------------------------------|--|--|--|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function            |
|-----------------|---------------------|----------------------|------|--------|---------------------|
| 000 - 063       |                     |                      |      |        | Full colour         |
| 064 - 127       |                     |                      |      |        | Half colour         |
| 128 - 191       |                     |                      |      |        | Proportional colour |
| 192 - 255       |                     |                      |      |        | Rainbow             |

|             |    |                        |  |  |  |
|-------------|----|------------------------|--|--|--|
| DMX CHANNEL | 10 | Parameter: <b>CYAN</b> |  |  |  |
|-------------|----|------------------------|--|--|--|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function             |
|-----------------|---------------------|----------------------|------|--------|----------------------|
| 000 - 255       |                     |                      |      |        | Proportionall colour |

|             |    |                           |  |  |  |
|-------------|----|---------------------------|--|--|--|
| DMX CHANNEL | 11 | Parameter: <b>MAGENTA</b> |  |  |  |
|-------------|----|---------------------------|--|--|--|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function            |
|-----------------|---------------------|----------------------|------|--------|---------------------|
| 000 - 255       |                     |                      |      |        | Proportional colour |

|             |    |                          |
|-------------|----|--------------------------|
| DMX CHANNEL | 12 | Parameter: <b>YELLOW</b> |
|-------------|----|--------------------------|

| DMX range Value  | Mid point DMX value | Move range (degrees) | Mode | Option | Function                   |
|------------------|---------------------|----------------------|------|--------|----------------------------|
| <b>000 - 255</b> |                     |                      |      |        | <b>Proportional colour</b> |

|             |    |                             |
|-------------|----|-----------------------------|
| DMX CHANNEL | 13 | Parameter: <b>SPEED CMY</b> |
|-------------|----|-----------------------------|

| DMX range Value  | Mid point DMX value | Move range (degrees) | Mode | Option | Function                               |
|------------------|---------------------|----------------------|------|--------|----------------------------------------|
| <b>000 - 007</b> |                     |                      |      |        | <b>No function</b>                     |
| <b>008 - 255</b> |                     |                      |      |        | <b>Variabile speed from max to min</b> |

|             |    |                             |
|-------------|----|-----------------------------|
| DMX CHANNEL | 14 | Parameter: <b>MACRO CMY</b> |
|-------------|----|-----------------------------|

| DMX range Value  | Mid point DMX value | Move range (degrees) | Mode | Option | Function                      |
|------------------|---------------------|----------------------|------|--------|-------------------------------|
| <b>000 - 009</b> |                     |                      |      |        | <b>No function</b>            |
| <b>010 - 014</b> |                     |                      |      |        | <b>Macro 1</b>                |
| <b>015 - 019</b> |                     |                      |      |        | <b>Macro 2</b>                |
| <b>020 - 024</b> |                     |                      |      |        | <b>Macro 3</b>                |
| <b>025 - 029</b> |                     |                      |      |        | <b>Macro 4</b>                |
| <b>030 - 034</b> |                     |                      |      |        | <b>Macro 5</b>                |
| <b>035 - 039</b> |                     |                      |      |        | <b>Macro6</b>                 |
| <b>040 - 044</b> |                     |                      |      |        | <b>Macro 7</b>                |
| <b>045 - 049</b> |                     |                      |      |        | <b>Macro 8</b>                |
| <b>050 - 054</b> |                     |                      |      |        | <b>Macro 9</b>                |
| <b>055 - 059</b> |                     |                      |      |        | <b>Macro 10</b>               |
| <b>060 - 064</b> |                     |                      |      |        | <b>Macro11</b>                |
| <b>065 - 069</b> |                     |                      |      |        | <b>Macro 12</b>               |
| <b>070 - 074</b> |                     |                      |      |        | <b>Macro 13</b>               |
| <b>075 - 079</b> |                     |                      |      |        | <b>Macro 14</b>               |
| <b>080 - 084</b> |                     |                      |      |        | <b>Macro 15</b>               |
| <b>085 - 089</b> |                     |                      |      |        | <b>Macro 16</b>               |
| <b>090 - 094</b> |                     |                      |      |        | <b>Macro17</b>                |
| <b>095 - 099</b> |                     |                      |      |        | <b>Macro 18</b>               |
| <b>100-104</b>   |                     |                      |      |        | <b>Macro 19</b>               |
| <b>105-109</b>   |                     |                      |      |        | <b>Macro 20</b>               |
| <b>110-114</b>   |                     |                      |      |        | <b>Macro 21</b>               |
| <b>115-121</b>   |                     |                      |      |        | <b>Macro rainbow wait = 0</b> |
| <b>122-128</b>   |                     |                      |      |        | <b>Macro rainbow wait = 2</b> |
| <b>129-135</b>   |                     |                      |      |        | <b>Macro rainbow wait = 3</b> |
| <b>136-142</b>   |                     |                      |      |        | <b>Macro rainbow wait = 4</b> |
| <b>143-149</b>   |                     |                      |      |        | <b>Macro rainbow wait = 5</b> |
| <b>150-156</b>   |                     |                      |      |        | <b>Macro rainbow wait = 6</b> |
| <b>157-163</b>   |                     |                      |      |        | <b>Macro rainbow wait = 7</b> |
| <b>164-170</b>   |                     |                      |      |        | <b>Macro rainbow wait = 8</b> |
| <b>171-177</b>   |                     |                      |      |        | <b>Macro rainbow wait = 9</b> |



|             |    |                             |
|-------------|----|-----------------------------|
| DMX CHANNEL | 14 | Parameter: <b>MACRO CMY</b> |
|-------------|----|-----------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                         |
|-----------------|---------------------|----------------------|------|--------|----------------------------------|
| 178-185         |                     |                      |      |        | <b>Macro rainbow wait = 10</b>   |
| 186-192         |                     |                      |      |        | <b>Full colours rainbow = 0</b>  |
| 193-199         |                     |                      |      |        | <b>Full colours rainbow = 2</b>  |
| 200-206         |                     |                      |      |        | <b>Full colours rainbow = 3</b>  |
| 207-213         |                     |                      |      |        | <b>Full colours rainbow = 4</b>  |
| 114-220         |                     |                      |      |        | <b>Full colours rainbow = 5</b>  |
| 221-227         |                     |                      |      |        | <b>Full colours rainbow = 6</b>  |
| 228-234         |                     |                      |      |        | <b>Full colours rainbow = 7</b>  |
| 235-241         |                     |                      |      |        | <b>Full colours rainbow = 8</b>  |
| 242-248         |                     |                      |      |        | <b>Full colours rainbow = 9</b>  |
| 249-255         |                     |                      |      |        | <b>Full colours rainbow = 10</b> |

|             |    |                        |
|-------------|----|------------------------|
| DMX CHANNEL | 15 | Parameter: <b>GOBO</b> |
|-------------|----|------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                     |
|-----------------|---------------------|----------------------|------|--------|------------------------------|
| 0-25            |                     |                      |      |        | <b>Open</b>                  |
| 26-51           |                     |                      |      |        | <b>Gobo 1</b>                |
| 52-77           |                     |                      |      |        | <b>Gobo 2</b>                |
| 78-103          |                     |                      |      |        | <b>Gobo 3</b>                |
| 104-129         |                     |                      |      |        | <b>Gobo 4</b>                |
| 130-155         |                     |                      |      |        | <b>Gobo 5</b>                |
| 156-181         |                     |                      |      |        | <b>Gobo 6</b>                |
| 182-207         |                     |                      |      |        | <b>Gobo 7</b>                |
| 208-213         |                     |                      |      |        | <b>Rotation speed 1 min.</b> |
| 214-219         |                     |                      |      |        | <b>Rotation speed 2</b>      |
| 220-225         |                     |                      |      |        | <b>Rotation speed 3</b>      |
| 226-231         |                     |                      |      |        | <b>Rotation speed 4</b>      |
| 232-237         |                     |                      |      |        | <b>Rotation speed 5</b>      |
| 238-243         |                     |                      |      |        | <b>Rotation speed 6</b>      |
| 244-249         |                     |                      |      |        | <b>Rotation speed 7</b>      |
| 250-255         |                     |                      |      |        | <b>Rotation speed 8 Max</b>  |

|             |    |                             |
|-------------|----|-----------------------------|
| DMX CHANNEL | 16 | Parameter: <b>GOBO MODE</b> |
|-------------|----|-----------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                  |
|-----------------|---------------------|----------------------|------|--------|---------------------------|
| 0-127           |                     |                      |      |        | <b>Gobo Rotation Mode</b> |
| 128-255         |                     |                      |      |        | <b>Gobo Index Mode</b>    |

|             |    |                                                   |
|-------------|----|---------------------------------------------------|
| DMX CHANNEL | 17 | Parameter: <b>GOBO ROTATION/GOBO INDEX COARSE</b> |
|-------------|----|---------------------------------------------------|

| DMX range Value                                                     | Mid point DMX value | Move range (degrees) | Mode | Option                                | Function |
|---------------------------------------------------------------------|---------------------|----------------------|------|---------------------------------------|----------|
| <b>IF CHANNEL 16 = Gobo Rotation Mode (Dmx range value 0 - 127)</b> |                     |                      |      |                                       |          |
| <b>0-9</b>                                                          |                     |                      |      | <b>Stop</b>                           |          |
| <b>10-127</b>                                                       |                     |                      |      | <b>SX Rot. Prop. Speed Max to Min</b> |          |
| <b>128-137</b>                                                      |                     |                      |      | <b>Stop</b>                           |          |
| <b>138-255</b>                                                      |                     |                      |      | <b>DX Rot. Prop. Speed Min to Max</b> |          |
| <b>IF CHANNEL 16 = Gobo Index Mode (Dmx range value 128 - 255)</b>  |                     |                      |      |                                       |          |
| <b>0-255</b>                                                        |                     |                      |      | <b>Gobo index Coarse</b>              |          |

|             |    |                                   |
|-------------|----|-----------------------------------|
| DMX CHANNEL | 18 | Parameter: <b>GOBO INDEX FINE</b> |
|-------------|----|-----------------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function               |
|-----------------|---------------------|----------------------|------|--------|------------------------|
| <b>0-255</b>    |                     |                      |      |        | <b>Gobo Index Fine</b> |

|             |    |                                |
|-------------|----|--------------------------------|
| DMX CHANNEL | 19 | Parameter: <b>GOBO 1 SHAKE</b> |
|-------------|----|--------------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option                             | Function |
|-----------------|---------------------|----------------------|------|------------------------------------|----------|
| <b>0-9</b>      |                     |                      |      | <b>Stop</b>                        |          |
| <b>10-22</b>    |                     |                      |      | <b>Gobo Shake R-L Speed 1 Min.</b> |          |
| <b>23-35</b>    |                     |                      |      | <b>Gobo Shake R-L Speed 2</b>      |          |
| <b>36-48</b>    |                     |                      |      | <b>Gobo Shake R-L Speed 3</b>      |          |
| <b>49-61</b>    |                     |                      |      | <b>Gobo Shake R-L Speed 4</b>      |          |
| <b>62-74</b>    |                     |                      |      | <b>Gobo Shake R-L Speed 5</b>      |          |
| <b>75-87</b>    |                     |                      |      | <b>Gobo Shake R-L Speed 6</b>      |          |
| <b>88-100</b>   |                     |                      |      | <b>Gobo Shake R-L Speed 7</b>      |          |
| <b>101-113</b>  |                     |                      |      | <b>Gobo Shake R-L Speed 8</b>      |          |
| <b>114-126</b>  |                     |                      |      | <b>Gobo Shake R-L Speed 9 Max</b>  |          |
| <b>127-138</b>  |                     |                      |      | <b>Stop</b>                        |          |
| <b>139-151</b>  |                     |                      |      | <b>Gobo Shake L-R Speed 1 Min</b>  |          |
| <b>152-164</b>  |                     |                      |      | <b>Gobo Shake L-R Speed 2</b>      |          |
| <b>165-177</b>  |                     |                      |      | <b>Gobo Shake L-R Speed 3</b>      |          |
| <b>178-190</b>  |                     |                      |      | <b>Gobo Shake L-R Speed 4</b>      |          |
| <b>191-203</b>  |                     |                      |      | <b>Gobo Shake L-R Speed 5</b>      |          |
| <b>204-216</b>  |                     |                      |      | <b>Gobo Shake L-R Speed 6</b>      |          |
| <b>217-229</b>  |                     |                      |      | <b>Gobo Shake L-R Speed 7</b>      |          |
| <b>230-242</b>  |                     |                      |      | <b>Gobo Shake L-R Speed 8</b>      |          |
| <b>243-255</b>  |                     |                      |      | <b>Gobo Shake L-R Speed 9 Max</b>  |          |

|             |           |                         |
|-------------|-----------|-------------------------|
| DMX CHANNEL | <b>20</b> | Parameter: <b>FROST</b> |
|-------------|-----------|-------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                     |
|-----------------|---------------------|----------------------|------|--------|------------------------------|
| <b>000-009</b>  |                     |                      |      |        | <b>No function</b>           |
| <b>010-255</b>  |                     |                      |      |        | <b>Linear frost position</b> |

|             |           |                                |
|-------------|-----------|--------------------------------|
| DMX CHANNEL | <b>21</b> | Parameter: <b>RESET / LAMP</b> |
|-------------|-----------|--------------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                                |
|-----------------|---------------------|----------------------|------|--------|-----------------------------------------|
| <b>0-9</b>      |                     |                      |      |        | <b>No Effect</b>                        |
| <b>10-60</b>    |                     |                      |      |        | <b>Lamp OFF (activ.after 3 seconds)</b> |
| <b>61-129</b>   |                     |                      |      |        | <b>No Effect</b>                        |
| <b>130-179</b>  |                     |                      |      |        | <b>Lamp ON (activ.after 3 seconds)</b>  |
| <b>180-200</b>  |                     |                      |      |        | <b>No Effect</b>                        |
| <b>201-239</b>  |                     |                      |      |        | <b>Internal motor reset</b>             |
| <b>240-255</b>  |                     |                      |      |        | <b>Total Reset</b>                      |

## 23 DMX PROTOCOL

### 16 CHANNELS MODE

- 1 PAN msb 540°**
- 2 PAN lsb**
- 3 TILT msb 270°**
- 4 TILT lsb**
- 5 SPEED MOVEMENT**
- 6 DIMMER**
- 7 SHUTTER**
- 8 COLOUR**
- 9 CYAN**
- 10 MAGENTA**
- 11 YELLOW**
- 12 GOBO**
- 13 GOBO ROTATION/INDEX**
- 14 GOBO SHAKE**
- 15 FROST**
- 16 RESET - LAMP**

|             |          |                           |
|-------------|----------|---------------------------|
| DMX CHANNEL | <b>1</b> | Parameter: <b>PAN msb</b> |
|-------------|----------|---------------------------|

|             |          |                           |
|-------------|----------|---------------------------|
| DMX CHANNEL | <b>2</b> | Parameter: <b>PAN lsb</b> |
|-------------|----------|---------------------------|

|             |          |                            |
|-------------|----------|----------------------------|
| DMX CHANNEL | <b>3</b> | Parameter: <b>TILT msb</b> |
|-------------|----------|----------------------------|

|             |          |                            |
|-------------|----------|----------------------------|
| DMX CHANNEL | <b>4</b> | Parameter: <b>TILT lsb</b> |
|-------------|----------|----------------------------|

|             |          |                                  |
|-------------|----------|----------------------------------|
| DMX CHANNEL | <b>5</b> | Parameter: <b>SPEED MOVEMENT</b> |
|-------------|----------|----------------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                                                    |
|-----------------|---------------------|----------------------|------|--------|-------------------------------------------------------------|
| <b>0-10</b>     |                     |                      |      |        | <b>Standard</b>                                             |
| <b>11-25</b>    |                     |                      |      |        | <b>Fast movement</b>                                        |
| <b>26-127</b>   |                     |                      |      |        | <b>Vector mode from fast to slow</b>                        |
| <b>128-247</b>  |                     |                      |      |        | <b>Variable time reaction to DMX signal ( fast to slow)</b> |
| <b>248-255</b>  |                     |                      |      |        | <b>Silent Mode</b>                                          |

|             |   |                          |
|-------------|---|--------------------------|
| DMX CHANNEL | 6 | Parameter: <b>DIMMER</b> |
|-------------|---|--------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                   |
|-----------------|---------------------|----------------------|------|--------|----------------------------|
| <b>0-7</b>      |                     |                      |      |        | <b>Black-out</b>           |
| <b>8-255</b>    |                     |                      |      |        | <b>Proportional dimmer</b> |

|             |   |                           |
|-------------|---|---------------------------|
| DMX CHANNEL | 7 | Parameter: <b>SHUTTER</b> |
|-------------|---|---------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                             |
|-----------------|---------------------|----------------------|------|--------|--------------------------------------|
| <b>0-19</b>     |                     |                      |      |        | <b>Black - out</b>                   |
| <b>20-39</b>    |                     |                      |      |        | <b>Open</b>                          |
| <b>40-59</b>    |                     |                      |      |        | <b>Black-out</b>                     |
| <b>60-79</b>    |                     |                      |      |        | <b>Random Strobe</b>                 |
| <b>80-89</b>    |                     |                      |      |        | <b>Strobe speed 1 min. (0,85 Hz)</b> |
| <b>90-99</b>    |                     |                      |      |        | <b>Strobe speed 2 (1,4 Hz)</b>       |
| <b>100-109</b>  |                     |                      |      |        | <b>Strobe speed 3 (2 HZ)</b>         |
| <b>110-119</b>  |                     |                      |      |        | <b>Strobe speed 4 (3,75 Hz)</b>      |
| <b>120-129</b>  |                     |                      |      |        | <b>Strobe speed 5 (5 Hz)</b>         |
| <b>130-139</b>  |                     |                      |      |        | <b>Strobe speed 6 max. (6,75 Hz)</b> |
| <b>140-149</b>  |                     |                      |      |        | <b>Pulse open speed 1 min.</b>       |
| <b>150-159</b>  |                     |                      |      |        | <b>Pulse open speed 2</b>            |
| <b>160-169</b>  |                     |                      |      |        | <b>Pulse open speed 3</b>            |
| <b>170-179</b>  |                     |                      |      |        | <b>Pulse open speed 4 max.</b>       |
| <b>180-189</b>  |                     |                      |      |        | <b>Pulse closed speed 1 min.</b>     |
| <b>190-199</b>  |                     |                      |      |        | <b>Pulse closed speed 2</b>          |
| <b>200-209</b>  |                     |                      |      |        | <b>Pulse closed speed 3</b>          |
| <b>210-219</b>  |                     |                      |      |        | <b>Pulse closed speed 4 max.</b>     |
| <b>220-227</b>  |                     |                      |      |        | <b>Colour and Gobo in black-out</b>  |
| <b>228-233</b>  |                     |                      |      |        | <b>Pan and Tilt in black -out</b>    |
| <b>234-255</b>  |                     |                      |      |        | <b>Open</b>                          |

|             |   |                          |
|-------------|---|--------------------------|
| DMX CHANNEL | 8 | Parameter: <b>COLOUR</b> |
|-------------|---|--------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function          |
|-----------------|---------------------|----------------------|------|--------|-------------------|
| <b>000-011</b>  |                     |                      |      |        | <b>Colour 1</b>   |
| <b>012-023</b>  |                     |                      |      |        | <b>Colour 1-2</b> |
| <b>024-035</b>  |                     |                      |      |        | <b>Colour 2</b>   |
| <b>036-047</b>  |                     |                      |      |        | <b>Colour 2-3</b> |
| <b>048-059</b>  |                     |                      |      |        | <b>Colour 3</b>   |
| <b>060-071</b>  |                     |                      |      |        | <b>Colour 3-4</b> |
| <b>072-083</b>  |                     |                      |      |        | <b>Colour 4</b>   |
| <b>084-095</b>  |                     |                      |      |        | <b>Colour 4-5</b> |

| DMX CHANNEL     |                     | 8                    | Parameter: <b>COLOUR</b> |        |                            |
|-----------------|---------------------|----------------------|--------------------------|--------|----------------------------|
| DMX range Value | Mid point DMX value | Move range (degrees) | Mode                     | Option | Function                   |
| 096 - 107       |                     |                      |                          |        | Colour 5                   |
| 108 - 119       |                     |                      |                          |        | Colour 5-6                 |
| 120 - 131       |                     |                      |                          |        | Colour 6                   |
| 132 - 143       |                     |                      |                          |        | Colour 6-7                 |
| 144 - 155       |                     |                      |                          |        | Colour 7                   |
| 156 - 167       |                     |                      |                          |        | Colour 7-8                 |
| 168 - 179       |                     |                      |                          |        | Colour 8                   |
| 180 - 197       |                     |                      |                          |        | Colour 8-1                 |
| 198 - 200       |                     |                      |                          |        | Right rotation speed 9 Max |
| 201 - 203       |                     |                      |                          |        | Right rotation speed 8     |
| 204 - 206       |                     |                      |                          |        | Right rotation speed 7     |
| 207 - 209       |                     |                      |                          |        | Right rotation speed 6     |
| 210 - 212       |                     |                      |                          |        | Right rotation speed 5     |
| 213 - 215       |                     |                      |                          |        | Right rotation speed 4     |
| 216 - 218       |                     |                      |                          |        | Right rotation speed 3     |
| 219 - 221       |                     |                      |                          |        | Right rotation speed 2     |
| 222 - 224       |                     |                      |                          |        | Right rotation speed 1Min  |
| 225 - 228       |                     |                      |                          |        | Stop                       |
| 229 - 231       |                     |                      |                          |        | Left rotation speed 1 Min  |
| 232 - 234       |                     |                      |                          |        | Left rotation speed 2      |
| 235 - 237       |                     |                      |                          |        | Left rotation speed 3      |
| 238 - 240       |                     |                      |                          |        | Left rotation speed 4      |
| 241 - 243       |                     |                      |                          |        | Left rotation speed 5      |
| 244 - 246       |                     |                      |                          |        | Left rotation speed 6      |
| 247 - 249       |                     |                      |                          |        | Left rotation speed 7      |
| 250 - 252       |                     |                      |                          |        | Left rotation speed 8      |
| 253 - 255       |                     |                      |                          |        | Left rotation speed 9 Max  |

| DMX CHANNEL |  | 9 | Parameter: <b>CYAN</b> |  |  |
|-------------|--|---|------------------------|--|--|
|-------------|--|---|------------------------|--|--|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function            |
|-----------------|---------------------|----------------------|------|--------|---------------------|
| 0-255           |                     |                      |      |        | Proportional colour |

| DMX CHANNEL |  | 10 | Parameter: <b>MAGENTA</b> |  |  |
|-------------|--|----|---------------------------|--|--|
|-------------|--|----|---------------------------|--|--|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function            |
|-----------------|---------------------|----------------------|------|--------|---------------------|
| 0-255           |                     |                      |      |        | Proportional colour |



|             |    |                          |
|-------------|----|--------------------------|
| DMX CHANNEL | 11 | Parameter: <b>YELLOW</b> |
|-------------|----|--------------------------|

| DMX range Value  | Mid point DMX value | Move range (degrees) | Mode | Option | Function                   |
|------------------|---------------------|----------------------|------|--------|----------------------------|
| <b>000 - 255</b> |                     |                      |      |        | <b>Proportional colour</b> |

|             |    |                        |
|-------------|----|------------------------|
| DMX CHANNEL | 12 | Parameter: <b>GOBO</b> |
|-------------|----|------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                     |
|-----------------|---------------------|----------------------|------|--------|------------------------------|
| <b>000-025</b>  |                     |                      |      |        | <b>Open</b>                  |
| <b>026-051</b>  |                     |                      |      |        | <b>Gobo 1</b>                |
| <b>052-077</b>  |                     |                      |      |        | <b>Gobo 2</b>                |
| <b>078-103</b>  |                     |                      |      |        | <b>Gobo 3</b>                |
| <b>104-129</b>  |                     |                      |      |        | <b>Gobo 4</b>                |
| <b>130-155</b>  |                     |                      |      |        | <b>Gobo 5</b>                |
| <b>156-181</b>  |                     |                      |      |        | <b>Gobo 6</b>                |
| <b>182-207</b>  |                     |                      |      |        | <b>Gobo 7</b>                |
| <b>208-213</b>  |                     |                      |      |        | <b>Rotation speed 1 min.</b> |
| <b>214-219</b>  |                     |                      |      |        | <b>Rotation speed 2</b>      |
| <b>220-225</b>  |                     |                      |      |        | <b>Rotation speed 3</b>      |
| <b>226-231</b>  |                     |                      |      |        | <b>Rotation speed 4</b>      |
| <b>232-237</b>  |                     |                      |      |        | <b>Rotation speed 5</b>      |
| <b>238-243</b>  |                     |                      |      |        | <b>Rotation speed 6</b>      |
| <b>244-249</b>  |                     |                      |      |        | <b>Rotation speed 7</b>      |
| <b>250-255</b>  |                     |                      |      |        | <b>Rotation speed 8 Max</b>  |

|             |    |                                       |
|-------------|----|---------------------------------------|
| DMX CHANNEL | 13 | Parameter: <b>GOBO ROTATION/INDEX</b> |
|-------------|----|---------------------------------------|

| DMX range Value  | Mid point DMX value | Move range (degrees) | Mode | Option | Function                            |
|------------------|---------------------|----------------------|------|--------|-------------------------------------|
| <b>000 - 127</b> |                     |                      |      |        | <b>Proportional index 0° - 360°</b> |
| <b>128 - 180</b> |                     |                      |      |        | <b>Left rotation</b>                |
| <b>181 - 202</b> |                     |                      |      |        | <b>Stop</b>                         |
| <b>203 - 255</b> |                     |                      |      |        | <b>Right rotation</b>               |

|             |    |                              |
|-------------|----|------------------------------|
| DMX CHANNEL | 14 | Parameter: <b>GOBO SHAKE</b> |
|-------------|----|------------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                           |
|-----------------|---------------------|----------------------|------|--------|------------------------------------|
| <b>0-9</b>      |                     |                      |      |        | <b>Stop</b>                        |
| <b>10-22</b>    |                     |                      |      |        | <b>Gobo Shake R-L Speed 1 Min.</b> |
| <b>23-35</b>    |                     |                      |      |        | <b>Gobo Shake R-L Speed 2</b>      |
| <b>36-48</b>    |                     |                      |      |        | <b>Gobo Shake R-L Speed 3</b>      |
| <b>49-61</b>    |                     |                      |      |        | <b>Gobo Shake R-L Speed 4</b>      |
| <b>62-74</b>    |                     |                      |      |        | <b>Gobo Shake R-L Speed 5</b>      |

|             |           |                              |
|-------------|-----------|------------------------------|
| DMX CHANNEL | <b>14</b> | Parameter: <b>GOBO SHAKE</b> |
|-------------|-----------|------------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                          |
|-----------------|---------------------|----------------------|------|--------|-----------------------------------|
| <b>075-087</b>  |                     |                      |      |        | <b>Gobo Shake R-L Speed 6</b>     |
| <b>088-100</b>  |                     |                      |      |        | <b>Gobo Shake R-L Speed 7</b>     |
| <b>101-113</b>  |                     |                      |      |        | <b>Gobo Shake R-L Speed 8</b>     |
| <b>114-126</b>  |                     |                      |      |        | <b>Gobo Shake R-L Speed 9 Max</b> |
| <b>127-138</b>  |                     |                      |      |        | <b>Stop</b>                       |
| <b>139-151</b>  |                     |                      |      |        | <b>Gobo Shake L-R Speed 1 Min</b> |
| <b>152-164</b>  |                     |                      |      |        | <b>Gobo Shake L-R Speed 2</b>     |
| <b>165-177</b>  |                     |                      |      |        | <b>Gobo Shake L-R Speed 3</b>     |
| <b>178-190</b>  |                     |                      |      |        | <b>Gobo Shake L-R Speed 4</b>     |
| <b>191-203</b>  |                     |                      |      |        | <b>Gobo Shake L-R Speed 5</b>     |
| <b>204-216</b>  |                     |                      |      |        | <b>Gobo Shake L-R Speed 6</b>     |
| <b>217-229</b>  |                     |                      |      |        | <b>Gobo Shake L-R Speed 7</b>     |
| <b>230-242</b>  |                     |                      |      |        | <b>Gobo Shake L-R Speed 8</b>     |
| <b>243-255</b>  |                     |                      |      |        | <b>Gobo Shake L-R Speed 9 Max</b> |

|             |           |                         |
|-------------|-----------|-------------------------|
| DMX CHANNEL | <b>15</b> | Parameter: <b>FROST</b> |
|-------------|-----------|-------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                     |
|-----------------|---------------------|----------------------|------|--------|------------------------------|
| <b>000-009</b>  |                     |                      |      |        | <b>No function</b>           |
| <b>010-255</b>  |                     |                      |      |        | <b>Linear frost position</b> |

|             |           |                                |
|-------------|-----------|--------------------------------|
| DMX CHANNEL | <b>16</b> | Parameter: <b>RESET / LAMP</b> |
|-------------|-----------|--------------------------------|

| DMX range Value | Mid point DMX value | Move range (degrees) | Mode | Option | Function                                |
|-----------------|---------------------|----------------------|------|--------|-----------------------------------------|
| <b>0-9</b>      |                     |                      |      |        | <b>No Effect</b>                        |
| <b>10-60</b>    |                     |                      |      |        | <b>Lamp OFF (activ.after 3 seconds)</b> |
| <b>61-129</b>   |                     |                      |      |        | <b>No Effect</b>                        |
| <b>130-179</b>  |                     |                      |      |        | <b>Lamp ON (activ.after 3 seconds)</b>  |
| <b>180-200</b>  |                     |                      |      |        | <b>No Effect</b>                        |
| <b>201-239</b>  |                     |                      |      |        | <b>Internal motor reset</b>             |
| <b>240-255</b>  |                     |                      |      |        | <b>Total Reset</b>                      |

**23- 8 MOTORS CONTROL CARD****8 MOTORS CONTROL CARD**

J7 Magnetic Sensors  
Connector

Line 1 Brown:  
Line 2 Orange:

GND  
ORANGE  
BROWN  
VCC

J1 Internal DATA  
Communication  
Connector  
From J8 Pan & Tilt  
card

30 VDC

Fans

Fans

**Gobo**  
(BLACK)

**RotGobo**  
(DARK GREEN)

**Strobe**  
(YELLOW)


**Frost**  
(PINK)

**Color**  
(GREY)


**Magenta**  
(LIGHT BLUE)

**Cyan**  
(GOLD)

**Yellow**  
(BLUE)

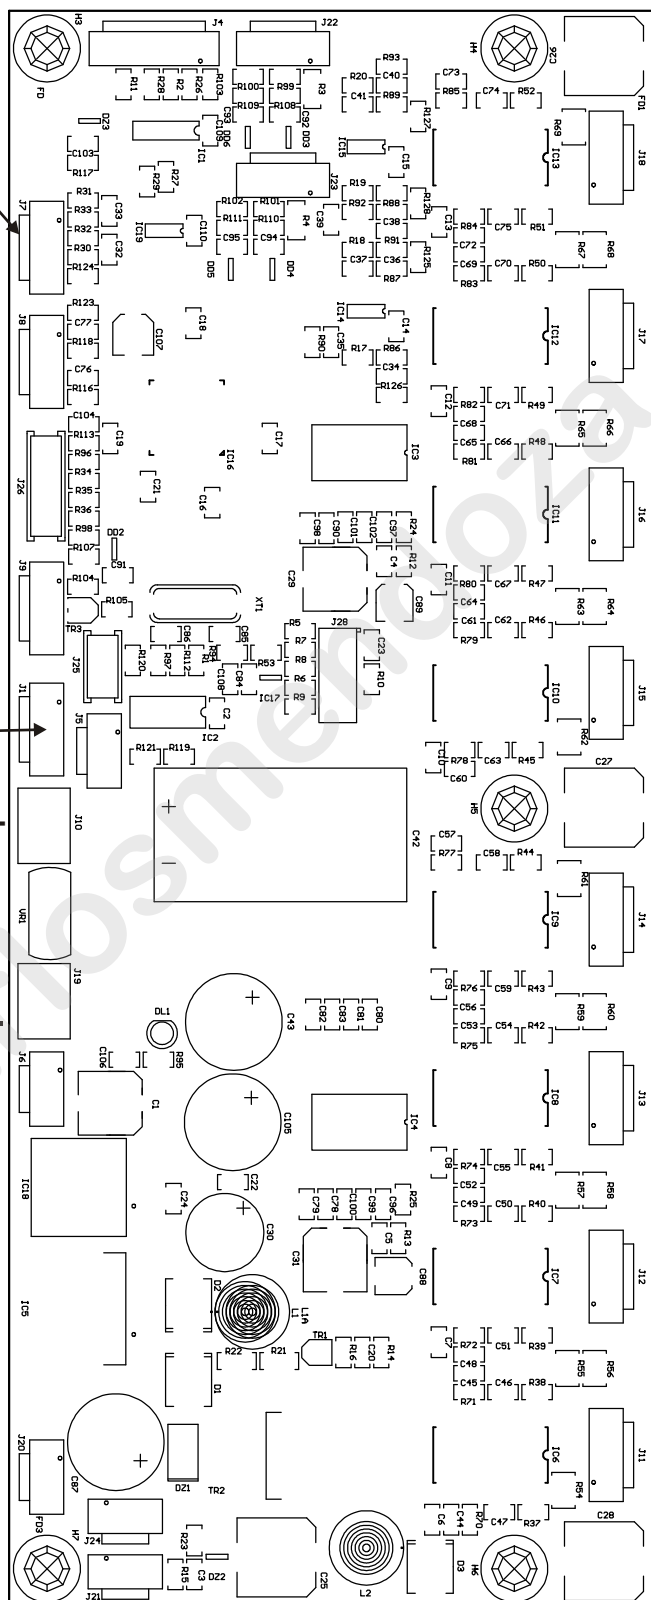


## 24-PAN & TILT CARD

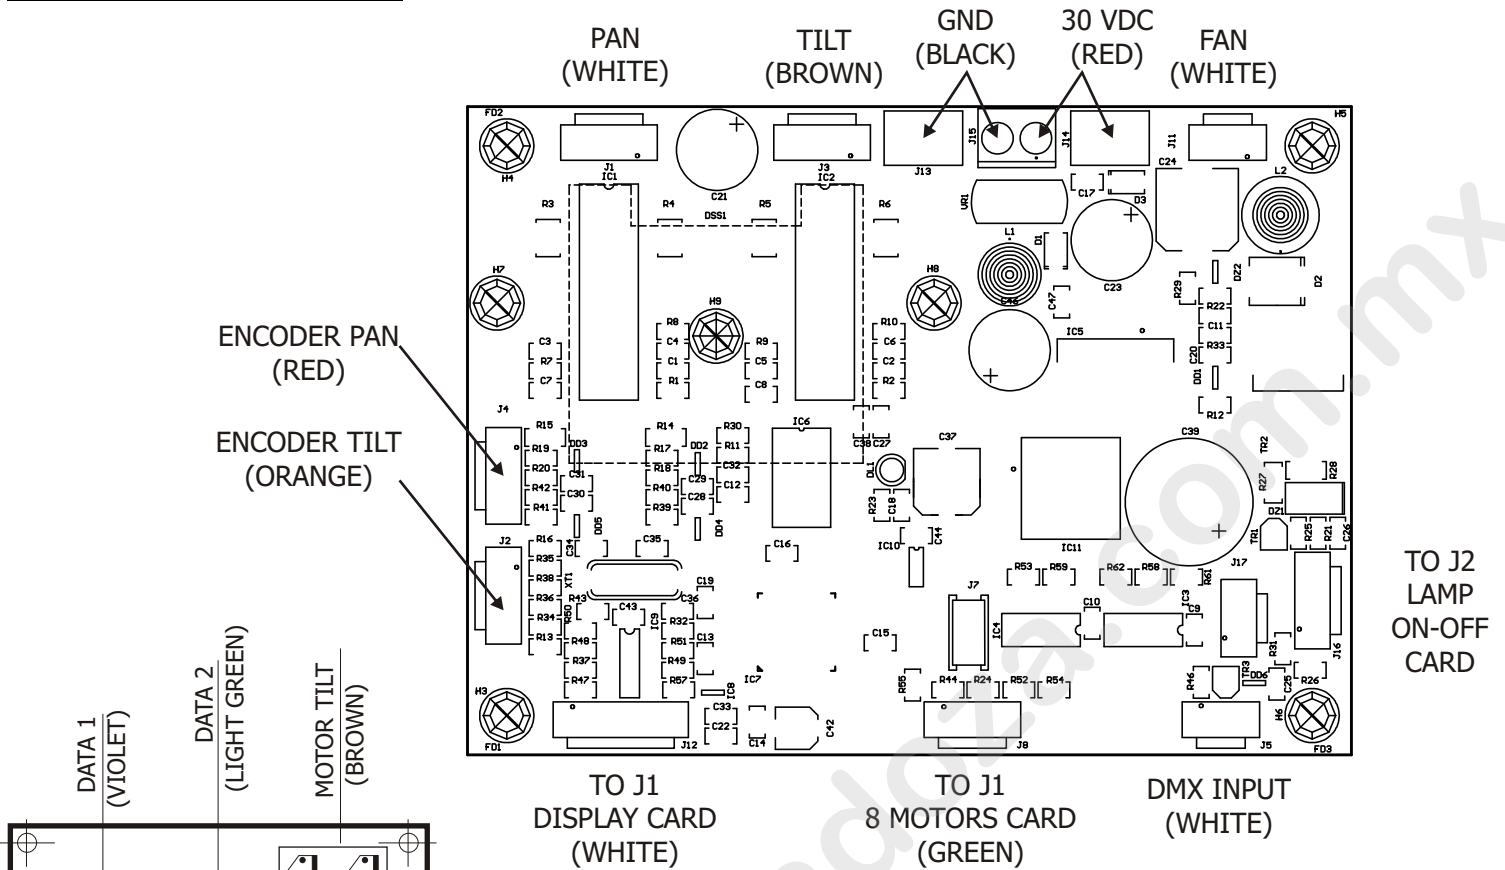




## 25-CABLES RESEND CARD

## 26-DISPLAY CARD

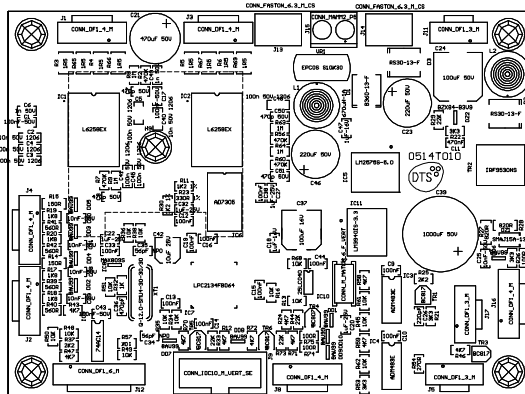

## 27-LAMP ON-OFF CONTROL CARD

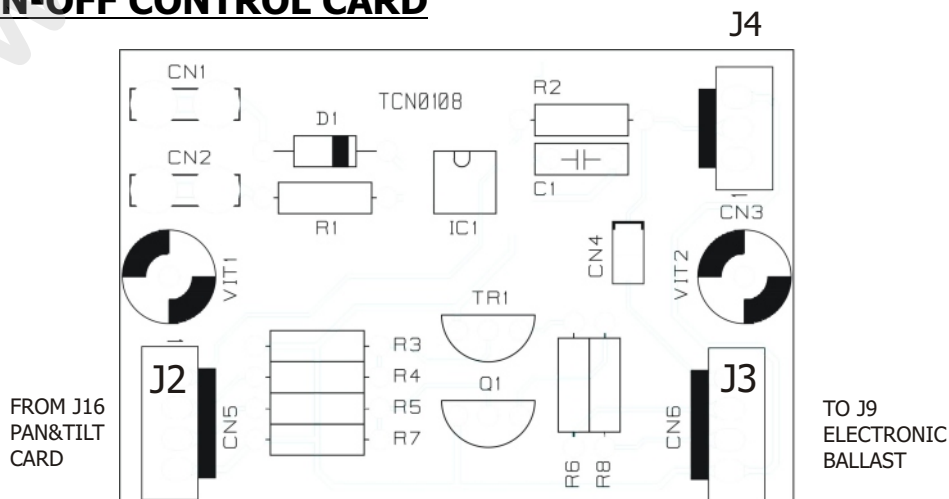

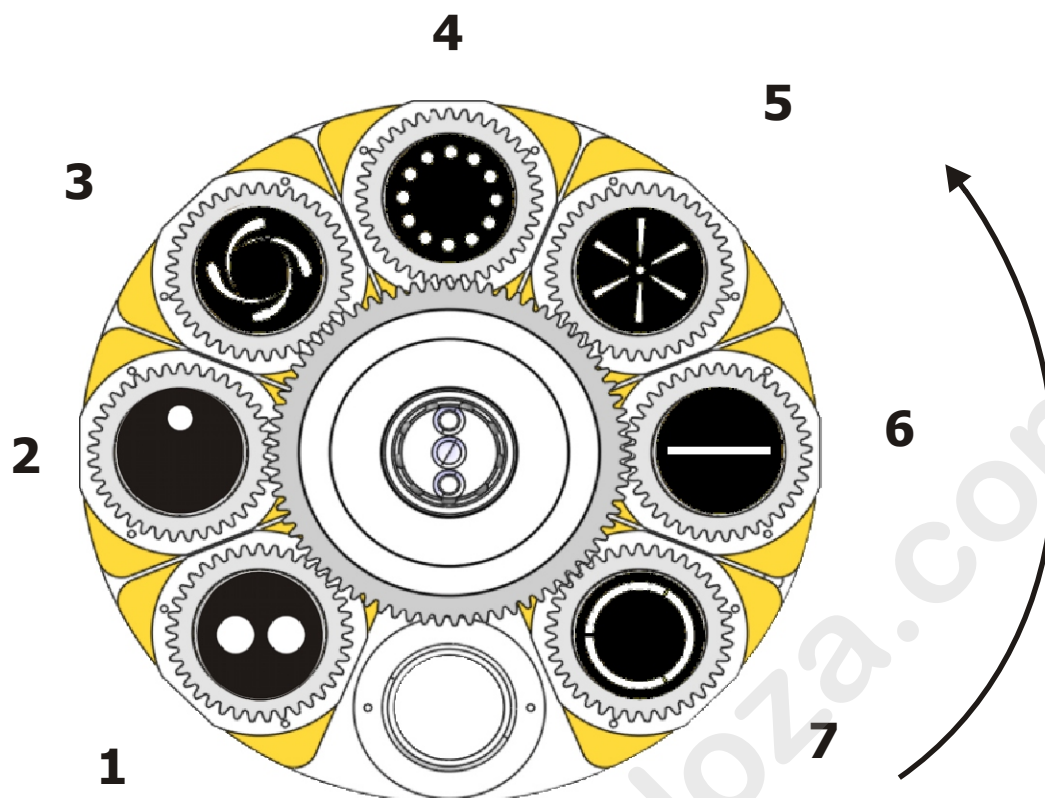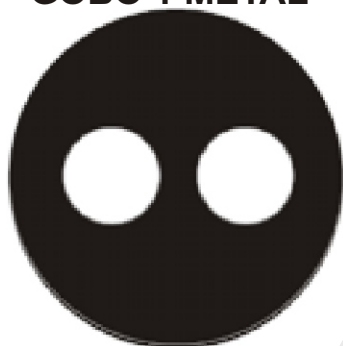**28- ROTATING GOBO WHEEL****GOBO 1 METAL**


0516G033.01

**GOBO 2 METAL**


0516G033.02

**GOBO 3 METAL**


0516G033.03

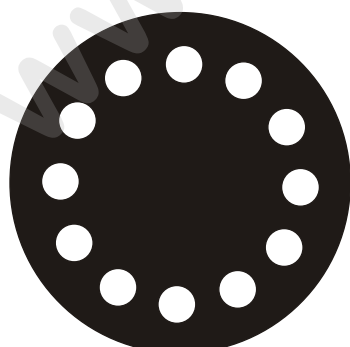**GOBO 4 METAL**


0516G033.04

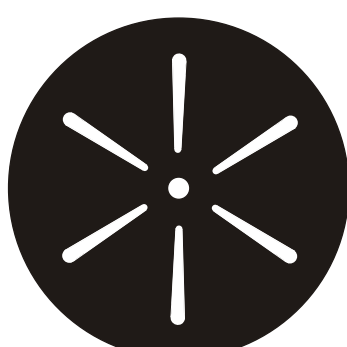**GOBO 5 METAL**



0516G033.05

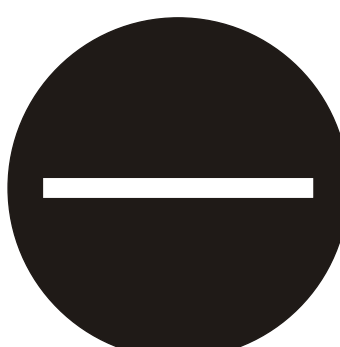**GOBO 6 METAL**

0516G033.06

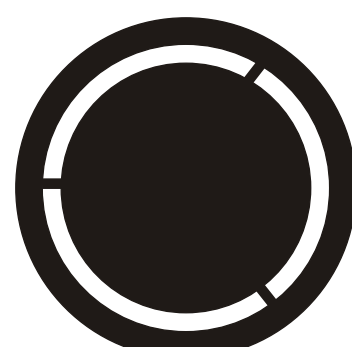**GOBO 7 METAL**

0516G033.15.M.58

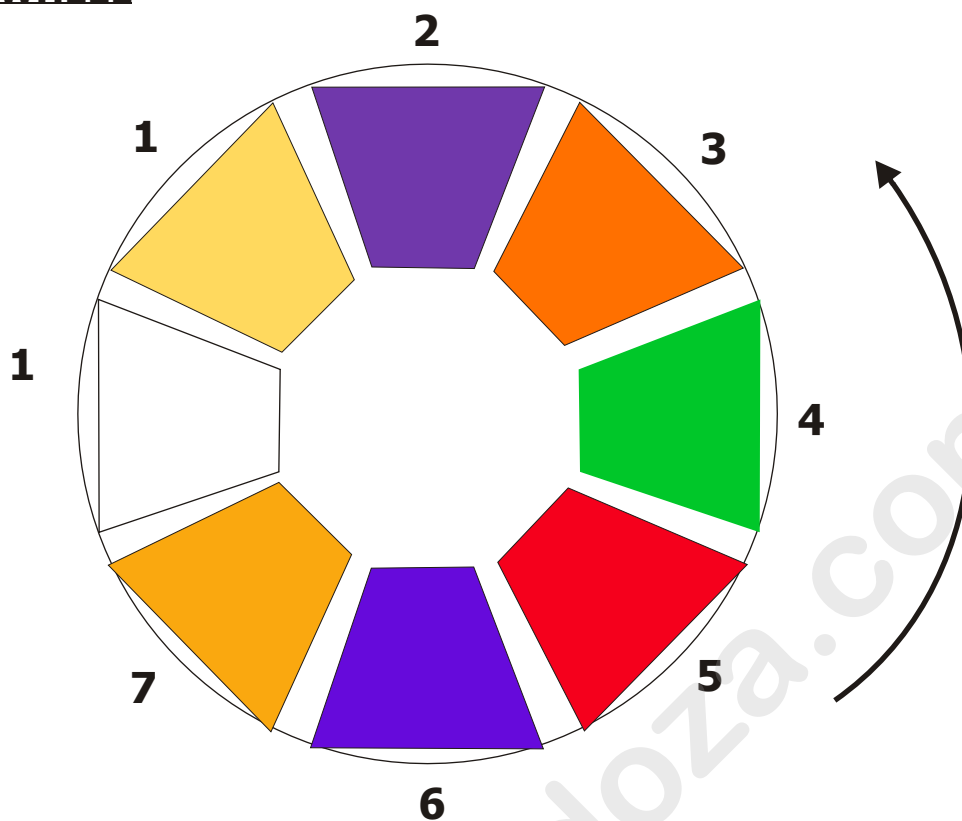**29- COLOUR WHEEL****COL1**


0507K004.D10  
CONV.FILTER CTO  
TC3256

**COL2**

0507C046.D10  
WOOD SW 460

**COL3**

0507C051.D10  
ORANGE LW590

**COL4**

0507C042.D10  
GREEN WB5055

**COL5**

0507C047.D10  
RED LW 640





**COL6**

0507C041.D10  
DARK BLUE SW490

**COL7**

0507C053.D10  
AMBER LW 550

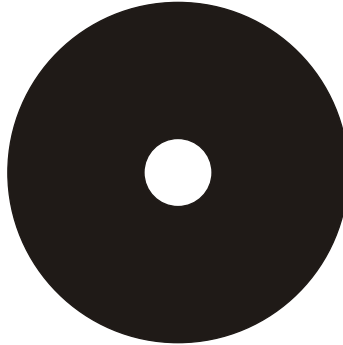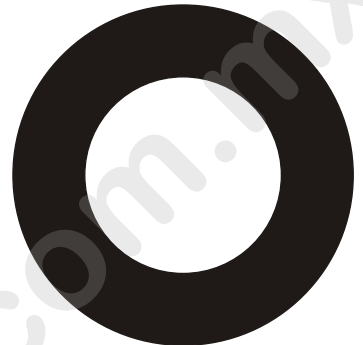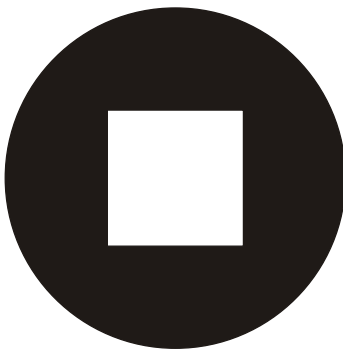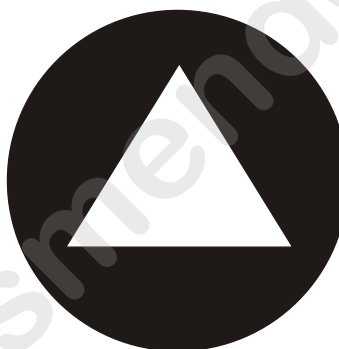

**30- MORE GOBOS PROVIDED IN THE PACK AS STANDARD ACCESSORIES****GOBO 8 METAL****0516G033.08****GOBO 9 METAL****0516G033.09****GOBO 10 METAL****0516G033.10****GOBO 11 METAL****0516G033.11****GOBO 12 METAL****0516G033.12**

**NOTES**

[www.carlosmendoza.com.mx](http://www.carlosmendoza.com.mx)

The information contained in this publication has been carefully prepared and checked. However, no responsibility will be taken for any errors. All rights are reserved and this document cannot be copied, photocopied or reproduced, in part or completely, without prior written consent from D.T.S.. D.T.S. reserves the right to make any aesthetic, functional or design modifications to any of its products without prior notice. D.T.S. assumes no responsibility for the use or application of the products or circuits described herein.

MADE IN ITALY



**The Lighting Company**

**ISO 9001:2000**

D.T.S. quality system  
is certified to the  
ISO 9001:2000 standard



D.T.S. products are designed  
and manufactured at the D.T.S.  
plants in Italy



05171107