

Raptor



The Lighting Company

Le informazioni contenute in questo documento sono state attentamente redatte e controllate. Tuttavia non è assunta alcuna responsabilità per eventuali inesattezze. Tutti i diritti sono riservati e questo documento non può essere copiato, fotocopiato, riprodotto per intero o in parte senza previo consenso scritto della D.T.S .

D.T.S. si riserva il diritto di apportare senza preavviso cambiamenti e modifiche estetiche , funzionali o di design a ciascun proprio prodotto. D.T.S non assume alcuna responsabilità sull'uso o sull'applicazione dei prodotti o dei circuiti descritti.

The information contained in this publication has been carefully prepared and checked. However, no responsibility will be taken for any errors. All rights are reserved and this document cannot be copied, photocopied or reproduced, in part or completely, without prior written consent from D.T.S.

D.T.S. reserves the right to make any aesthetic, functional or design modifications to any of its products without prior notice. D.T.S. assumes no responsibility for the use or application of the products or circuits described herein.

Les informations contenues dans le présent manuel ont été rédigées et contrôlées avec le plus grand soin. Nous déclinons toutefois toute responsabilité en cas d'éventuelles inexactitudes. Tous droits réservés. Ce document ne peut être copié, photocopié ou reproduit, dans sa totalité ou partiellement, sans le consentement préalable de D.T.S.

D.T.S. se réserve le droit d'apporter toutes modifications et améliorations esthétiques, fonctionnelles ou de design, sans préavis, à chacun de ses produits. D.T.S. décline toute responsabilité sur l'utilisation ou sur l'application des produits ou des circuits décrits.

Las informaciones contenidas en este documento han sido cuidadosamente redactadas y controladas. Con todo, no se asume ninguna responsabilidad por eventuales inexactitudes. Todos los derechos han sido reservados y este documento no puede ser copiado, fotocopiado o reproducido, total o parcialmente, sin previa autorización escrita de D.T.S.

D.T.S. se reserva el derecho a aportar sin previo aviso cambios y modificaciones de carácter estético, funcional o de diseño a cada producto suyo. D.T.S. no se asume responsabilidad de ningún tipo sobre la utilización o sobre la aplicación de los productos o de los circuitos descritos.

INDEX:

1- SYMBOLS	4
2- GENERAL WARNING	5
3- GENERAL WARRANTY CONDITION	5
4- TECHNICAL FEATURES	6
5- ACCESSORIES	8
6- IMPORTANT SAFETY INFORMATION	9
6.1 Fire prevention	
6.2 Prevention of electric shock	
6.3 Protection against ultraviolet radiation	
6.4 Safety	
6.5 Level of protection against the penetration of solid and liquid objects	
7- MOUNTING / REPLACING THE LAMP AND LAMP ALIGNMENT	10
8- VOLTAGE AND FREQUENCY	15
9- INSTALLATION	15
9.1 Safety cable	
9.2 Protection against liquids	
9.3 Movement	
9.4 Risk of fire	
9.5 Forced ventilation	
9.6 Ambient temperature	
10- MAINS CONNECTION	18
10.1 Protection	
11- DMX SIGNAL CONNECTION	19
11.1 DMX Addresses	
11.2 Selecting the DMX address	
12- FIRMWARE UPDATING	20
13- DISPLAY FUNCTIONS	21
14- ERROR MESSAGES	25
15- HIDDEN MENU	26
15.1 Calibration mode	
15.2 Power Setup menu	
16- PAN SPEED & TILT SPEED	29
17- OPENING THE PROJECTOR HOUSING	29
18- PERIODIC CLEANING	30
18.1 Lenses and reflectors	
18.2 Fans and air passages	
19- PERIODIC CONTROLS	30
20- DMX PROTOCOL	31
21- FIXED GOBO WHEEL	38
22- COLOUR WHEEL	39

1- SYMBOLS

Graphic symbols used on this manual:



THIS SYMBOL INDICATES A HOT SURFACE



THIS SYMBOL INDICATES ELECTRIC SHOCK RISK



THIS SYMBOL INDICATES GENERAL RISK



THIS SYMBOL MEANS “DO NOT PLACE THE UNIT ON INFLAMMABLE SURFACES”



THIS SYMBOL MEANS “RADIATION FROM THIS LAMP CAN CAUSE DAMAGE TO EYES AND SKIN”



MINIMUM DISTANCE FROM THE OBJECTS AND THE PEOPLE LIT BY THE LIGHT BEAM

2- GENERAL WARNING

Read the instruction contained in this user manual carefully, as they give important information regarding safety during installation, use and maintenance.

The device is not for domestic use and must be installed by a qualified electrician or experienced person.

Always disconnect the device from the mains before replacing the lamp.

The lamp must be replaced if it has been damaged or deformed by prolonged use or overheating.

The device must always be equipped with an efficient ground connection.

MINIMUM DISTANCE FROM THE OBJECTS AND THE PEOPLE

The projector needs to be positioned so that the objects and the people hit by the beam of light are at least 15 meters (49,21 ft) from the unit frontal lens.



3- GENERAL WARRANTY CONDITIONS

The unit is guaranteed for 36 months from the date of purchase against manufacturing material defects.

4- TECHNICAL FEATURES

Overview

RAPTOR is the most compact Beam moving head on the market: just 37 cm x 50 cm. RAPTOR projects the most powerful beam of light (150.000 Lux at 15 m) and the most concentrated one.

RAPTOR can perfectly focus its 17 gobos at any distance.

Its unique selectable 'Smooth' filter eliminates the hot spot typical of Beam projectors, evenly diffusing luminosity at any point of the light beam.

RAPTOR comes equipped with the 'FPR' (patented) system, which allows limitless pan rotation, in either direction, never having to reverse motion.

Also, the unit features the fastest strobe effect.

RAPTOR

(D.T.S. Product Code: 03.MB005.EB.L)

• Electronic ballast 90-260V 50/60 Hz • Black finish

RAPTOR FPR

(D.T.S. Product Code: 03.MB005.EB.LFP)

• Electronic ballast 90-260V 50/60 Hz • FPR (Free Pan Rotation) • Black finish

Lamp

Osram Sirius HRI 330W (16.500 Lumens)

Colour temperature: 7.500°K

Optical group

Beam opening: 0,6° - 3,4°

16-bit motorized linear focus

Linear dimmer / shutter / ultra-fast strobe

150.000 Lux at 15 m

Colour generation

17-colour wheel with linear selection for perfect 2-colour beams

Dynamic effects

17-gobo wheel

8-facet rotating prism

Filters

Smooth filter (eliminates the hot spot, evenly diffusing luminosity)

Frost filter

4- TECHNICAL FEATURES

Interface / Control / Programming

LCD graphic display (control / management / monitoring of the main parameters)

4 soft-keys

Controlled via DMX 512

RDM

Wireless ready

ARTNET available on request

Internal operating system updatable via D.T.S. RED BOX interface and hyperterminal program on windows based PC

DMX

18 DMX channels

Pan & Tilt

RAPTOR FPR (03.MB005.EB.LFP)

'FPR': limitless pan rotation, in either directions, never having to reverse motion

Tilt 270° (1,2 sec.)

RAPTOR (03.MB005.EB.L)

Pan 540° (2,3 sec.); Tilt 270° (1,2 sec.)

New Tri-phase stepper motor technology for ultra-fast and silent Pan &Tilt movements
16-bit movement resolution

Power supply

Electronic ballast: 90-260V 50/60 Hz

Power consumption: 450W with PFC

Energy saving

Power saving mode (the lamp dims to 80% after shutter closure)

Connectors

DMX: 4x XLR connectors (3-pole In and Out; 5-pole In and Out) by Neutrik;

Power supply: POWERCON connectors (Power In / Power Out) by Neutrik

Operating ambient temperature

-10° / 40°

Weight

15,4 Kg

Internal safety devices

Overvoltage circuit protection and overtemperature circuit protection

International certifications

Safety: EN 60598-1: 2009

EN 60598-2-17: 1989

EMC: EN 55015.2006

4- TECHNICAL FEATURES

Dimensions

Packaging Dimensions (LxWxH)

420 x 440 x 580 mm

Weight: 18,9 Kg

Unit Dimensions (LxWxH)

368x288x538mm

Weight: 15,4 Kg



5- ACCESSORIES

As standard

- * 1 x Osram Sirius HRI 330W (already installed in the projector) (Code 0505S037)
- * 1 x POWERCON male cable connector (Code 0520P014)
- * 1 x XLR 5 Pins male cable connector (Code 0508B066)
- * 1 x XLR 5 Pins female cable connector (Code 0508B065)
- * 2 x Omega clamp with "Fast Lock" connection 1/4 turn
- * User's manual

Optional (on request)



- "C" Clamp G100 black / professional (max. load 200Kg) (Code 0521A015)
- Aliscaf Clamp (max. capacity load 100Kg) (Code 0521A008)
- Safety wire (3mm x 60 cm), ring spring catch, max. capacity load 60Kg (Code 0521A010)

6- IMPORTANT SAFETY INFORMATION

6.1 Fire prevention:

RAPTOR uses a Osram Sirius HRI 330W lamp.

The use of any other alternative lamp is not recommended and will null and void the fixture's warranty.

- Never locate the fixture on any flammable surface.
- Minimum distance from flammable materials: 1 m . 
- Minimum distance from the closest illuminable surface: 15 m. 
- Replace any blown or damaged fuses only with those of identical value (5AT). Refer to the wiring diagram if there is any doubt.
- Connect the projector to mains power via a thermal magnetic circuit breaker.

6.2 Prevention of electric shock:



-High voltage is present inside the unit.

Unplug the unit prior to performing any function which involves touching the inside of the moving head, including lamp replacement.

-The level of technology inherent in the RAPTOR requires the assistance of specialised personnel for all servicing.

Please refer to an authorised D.T.S. service centre.

-A good earth connection is essential for proper functioning of the projector.

-Never connect the unit without proper earth connection.

-The fixture should be located in places with a good air ventilation.

6.3 Protection against ultraviolet radiation:



-Never turn on the lamp if any of the lenses, filters or plastic covering are damaged. Their respective shielding functions will only operate efficiently if they are in perfect working order.

-Never look directly the lamp when it is on.

6.4 Safety:



-The projector should always be installed with bolts, clamps and other tools that are capable of supporting the weight of the unit.

-Always use a second safety cable to sustain the weight of the unit in case of the failure of the main fixing point.

-The external surface of the unit, at various points, may exceed 70°C. Never handle the unit until at least 20 minutes have elapsed since the lamp was turned off.

-Always replace the lamp if any physical damage is evident.

-Never install the fixture in an enclosed area lacking sufficient air flow.

The ambient temperature should not exceed 40°C.

-A hot lamp may explode, so always wait for at least 20 minutes prior to attempting to replace the lamp.

-Always wear suitable hand protection when handling the lamp.



6.5 Level of protection against the penetration of solid and liquid objects:



-The projector is classified as an ordinary appliance and its protection level against the penetration of solid and liquid objects is IP20.

For outdoor use, D.T.S. recommend the use of the dedicated raincovers.

7- MOUNTING / REPLACING THE LAMP AND LAMP ALIGNMENT**WARNING**


Turn off the lamp before opening the unit head covers.
Never look directly at the lamp when it's lit.
Discharge lamps emits UV rays; radiation from this lamp can cause damage to eyes and skin.




Let the projector cool for at least 20 minutes.



Switch off the unit and unplug the Mains AC cable connector before replacing the lamp.

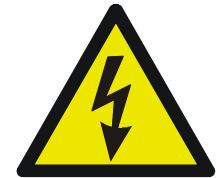**REPLACEMENT LAMP (D.T.S. Code 0505S037) :**


OSRAM SIRIUS HRI
Power 330W
Luminous flux 16.500 lm
Colour temperature 7.500°K
Rated life 1500 hours

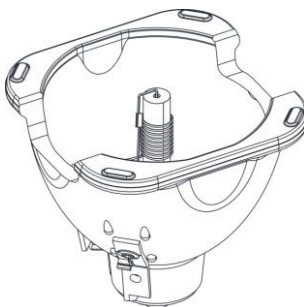


The use of any other alternative lamp is not recommended and will null and void the fixture's warranty.

1) Loosen the 3 “¼ turn” screws which fix the head covers on both sides (picture 1) .

2) Once loosened the screws, simply lift the covers to access the internal components (picture 2).

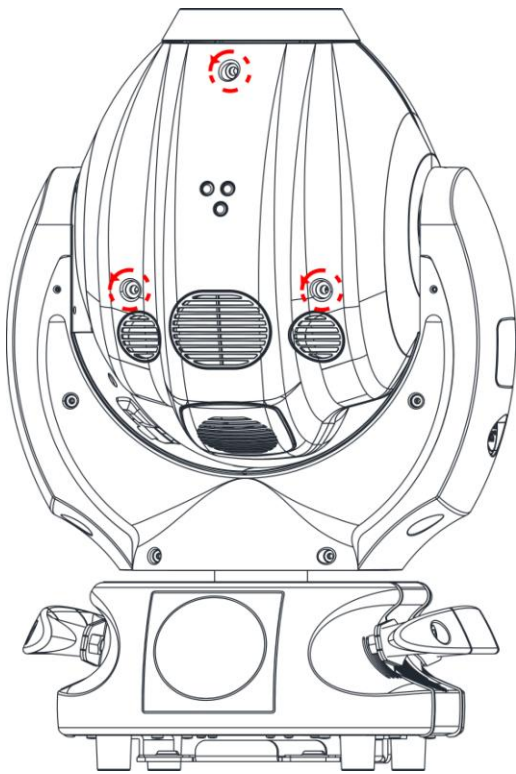


PICTURE 1

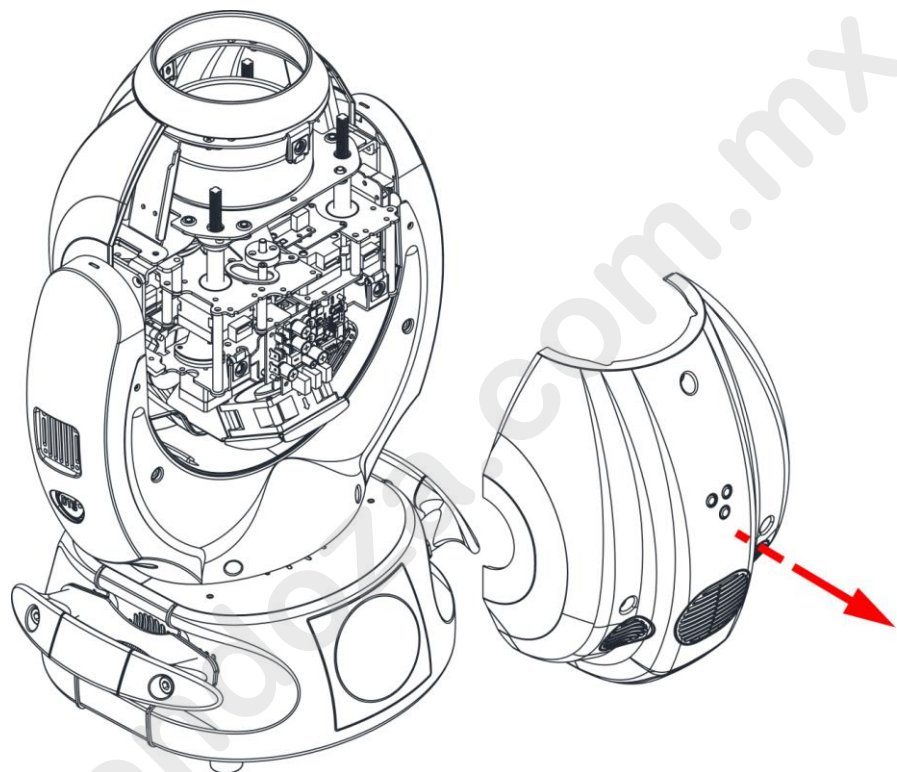


PICTURE 2

3) Unplug the indicated fan connectors from the fans resend card (picture 3);
Unplug the two indicated fast-on cable connectors (1 and 2) and using a flathead screwdriver remove the indicated lamp cable (3) from the screw connector (picture 4).

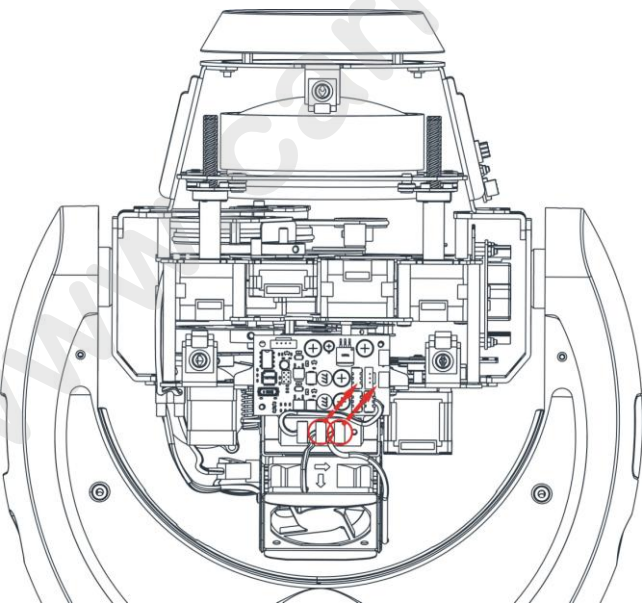


PICTURE 3

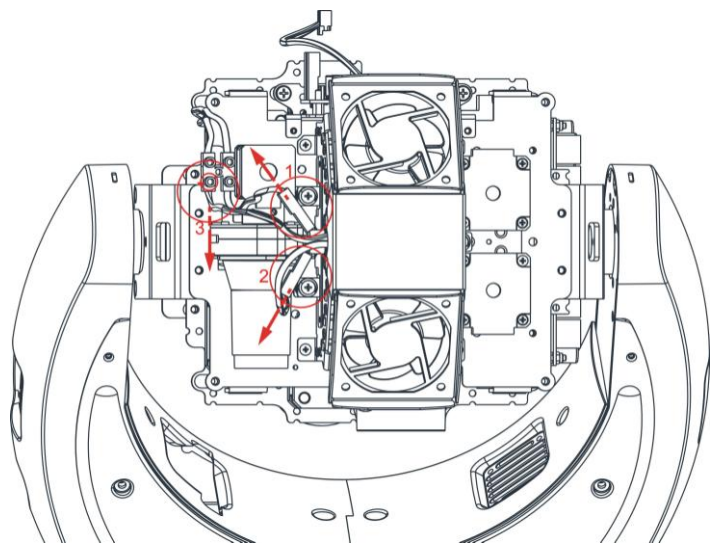


PICTURE 4

4) Using a phillips screwdriver, loose the 4 screws A, B, C, D and remove the lamp fan assembly (picture 5).

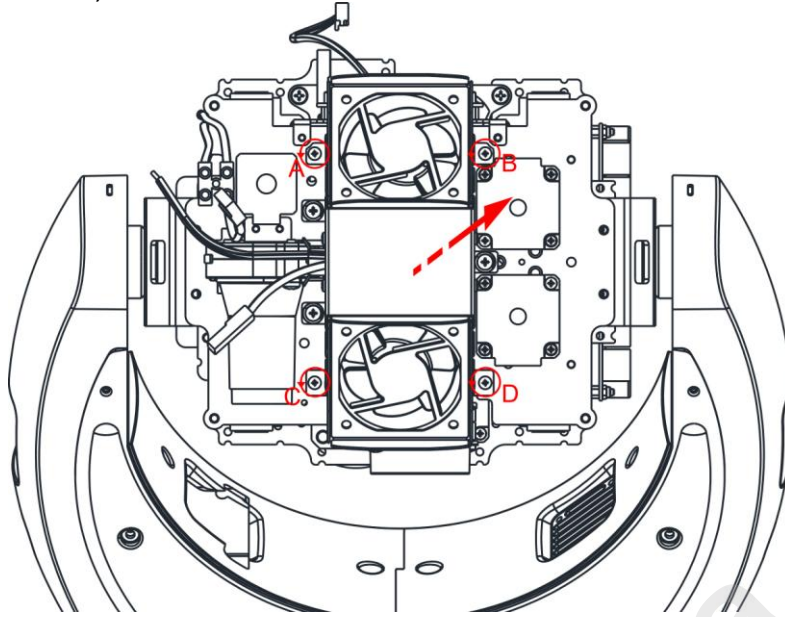


PICTURE 5

5) Loose the four screws E, F, G, H from the plate which fix the lamp (picture 6), then loose the two screws on both sides of the lamp rear metal cover (picture 7) and remove the old lamp.

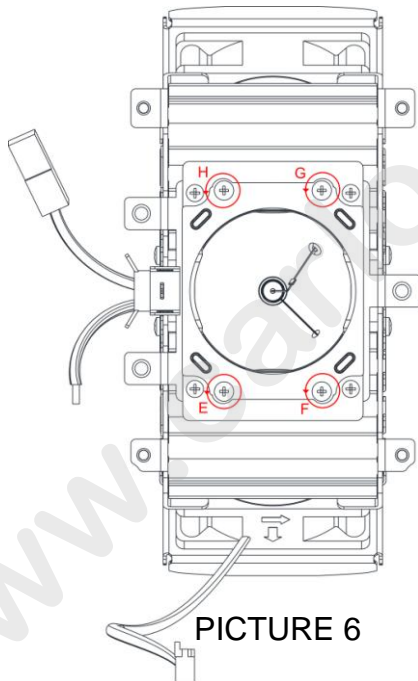


PICTURE 6

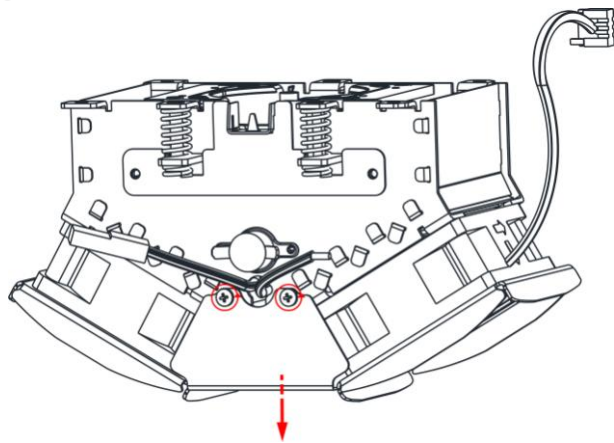


PICTURE 7

6) Remove the cable connectors from the old lamp and apply them on the new lamp (picture 8).

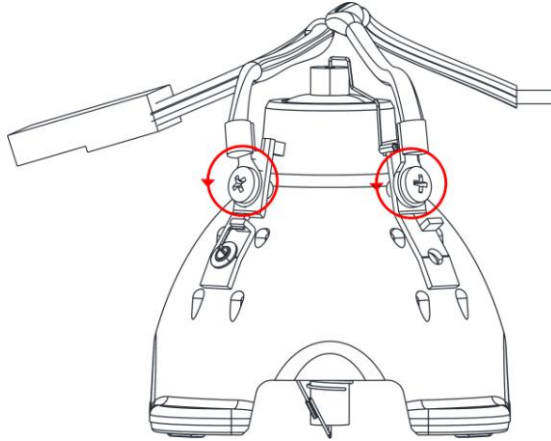

PICTURE 8

7) Put in place the new lamp in the lamp support.
Place the lamp connectors on the fan air conveyor side (picture 9).

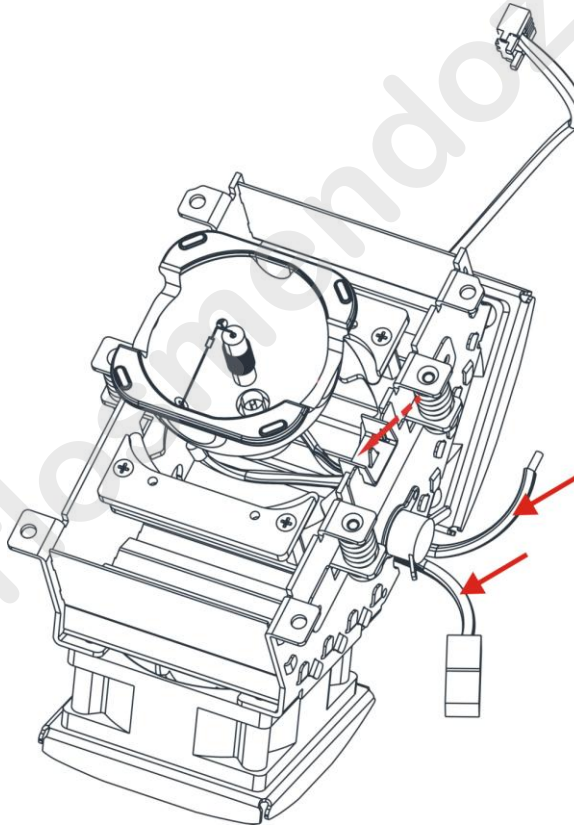

PICTURE 9


8) Lamp sub-assembly can now be re-installed, following backward all the above listed steps.

Lamp Alignment

Attention: we recommend to align the lamp in the optical system to avoid overheating of the dichroic filters and other components inside the unit.

The lamp alignment is also essential to obtain the maximum luminous performance by the projection.

- 1) Mount the fixture in an orientation so that it may be squarely projected onto a smooth white surface no less than 20 meters away.
 - 2) Using a console or the "LAMP ADJUST" menu system, focus and open (white) beam onto the surface and observe the beam.
 - 3) Using a phillips screwdriver, rotate the 3 indicated adjusters until you achieve a hot spot in the center.
- When the lamp alignment is correctly optimized, you will have a hot spot in the center.

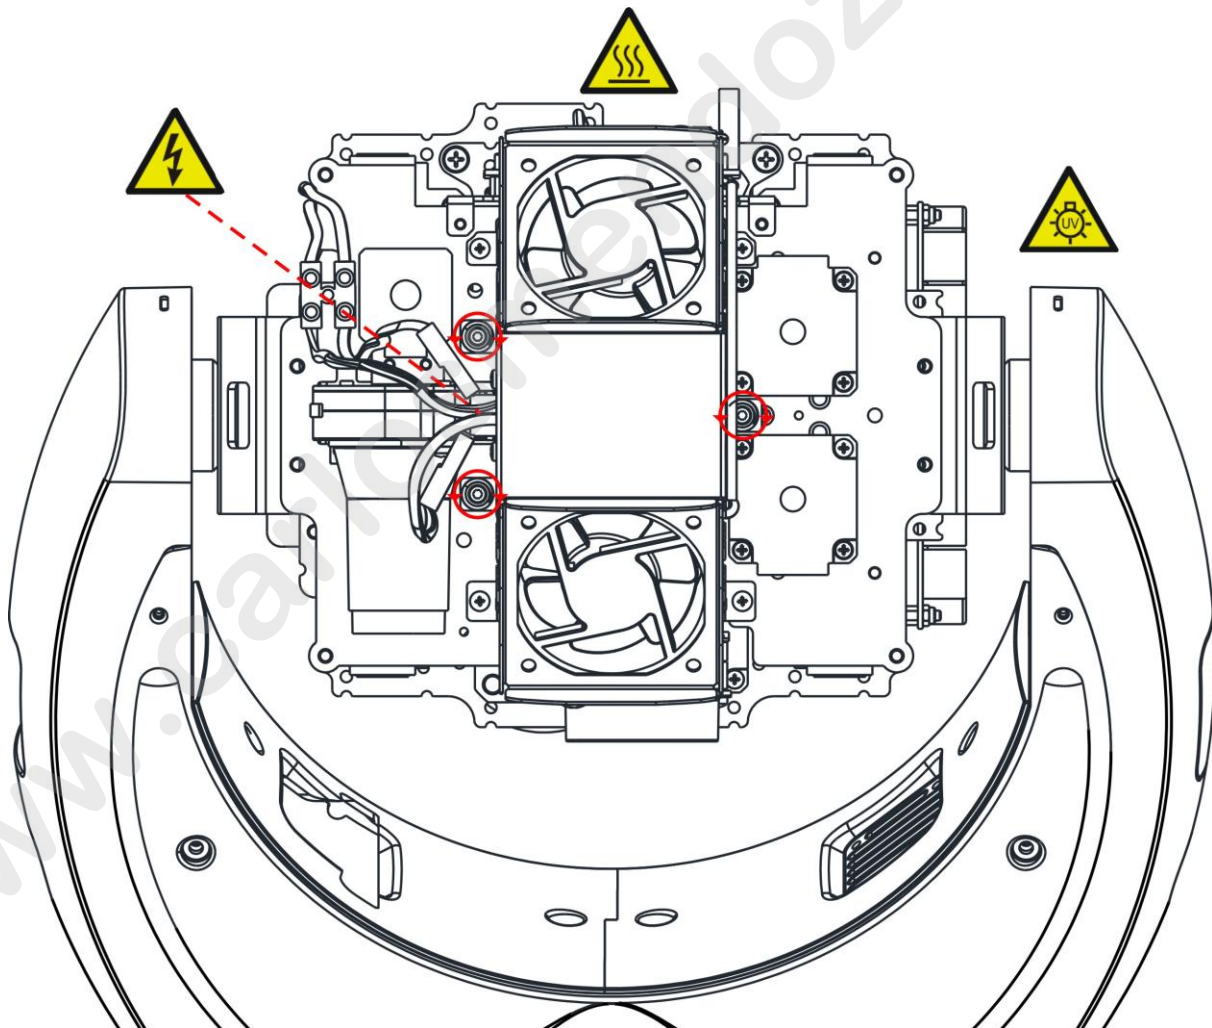

8- VOLTAGE AND FREQUENCY


The RAPTOR with electronic ballast can operate at 90-260V 50 or 60 Hz.

9- INSTALLATION

RAPTOR may be either floor or ceiling mounted.

For floor mounting installations, the RAPTOR is supplied with four rubber mounting feet on the base.


For ceiling mounted installations, we recommend the use of appropriate clamps to fix the unit to the mounting surface.

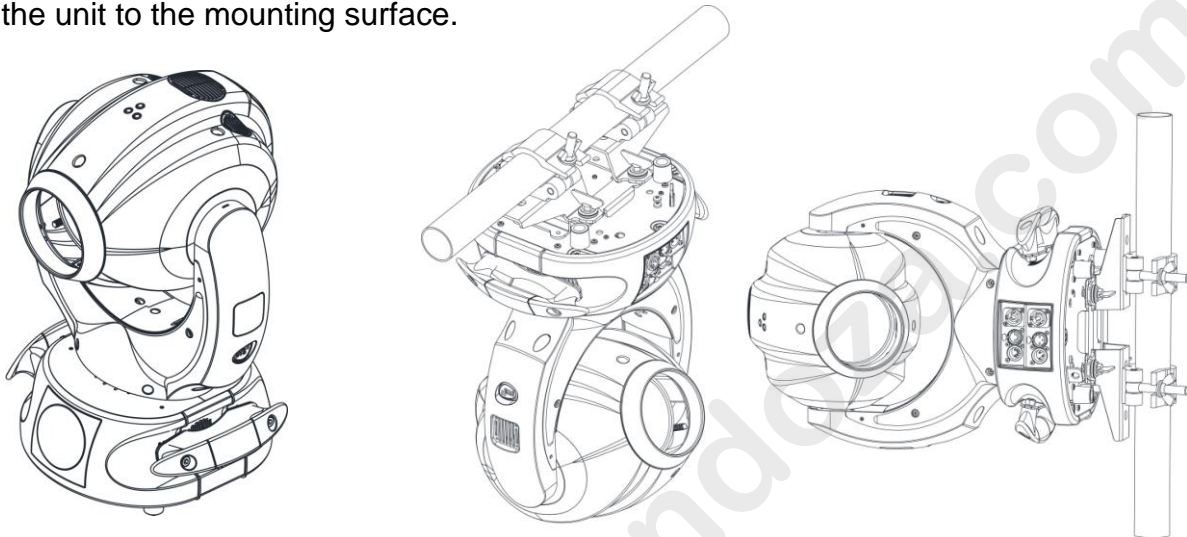

The supporting structure from which the unit is hung should be capable of bearing the weight of the unit, as should any clamps used to hang it.

The structure should also be sufficiently rigid so as not to move or shake whilst the RAPTOR is moving.

Four 1/4 turn Fast Locks connections placed in the base of the unit allow to hang the RAPTOR by using the two omega clamps (provided in the box) in conjunction with fixing clamps for truss (fixing clamps are not included into the unit box).

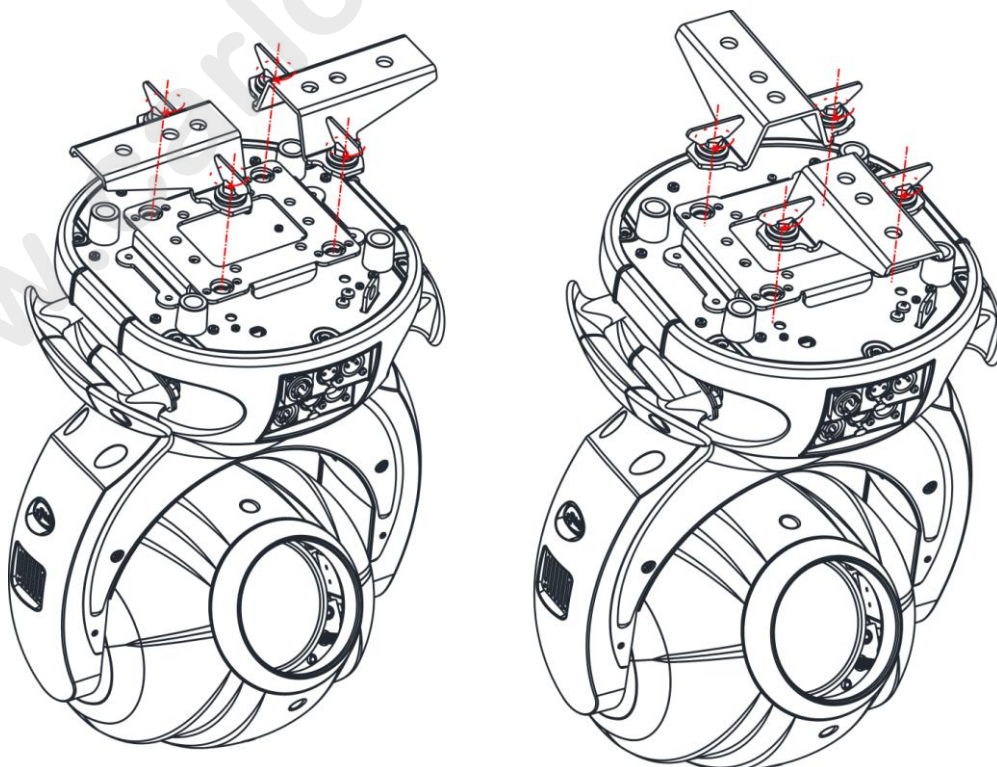


9.1- Safety cable



We recommend the use of a safety cable or chain connected to the RAPTOR and to the suspension truss in order to avoid the fixture accidentally falling should the main fixing point fail.

Make sure that the iron cable or chain can bear the weight of the entire unit.

You may attach the safety chain/cord to the attachment point (A) located on the base of the fixture, as shown in the picture below.

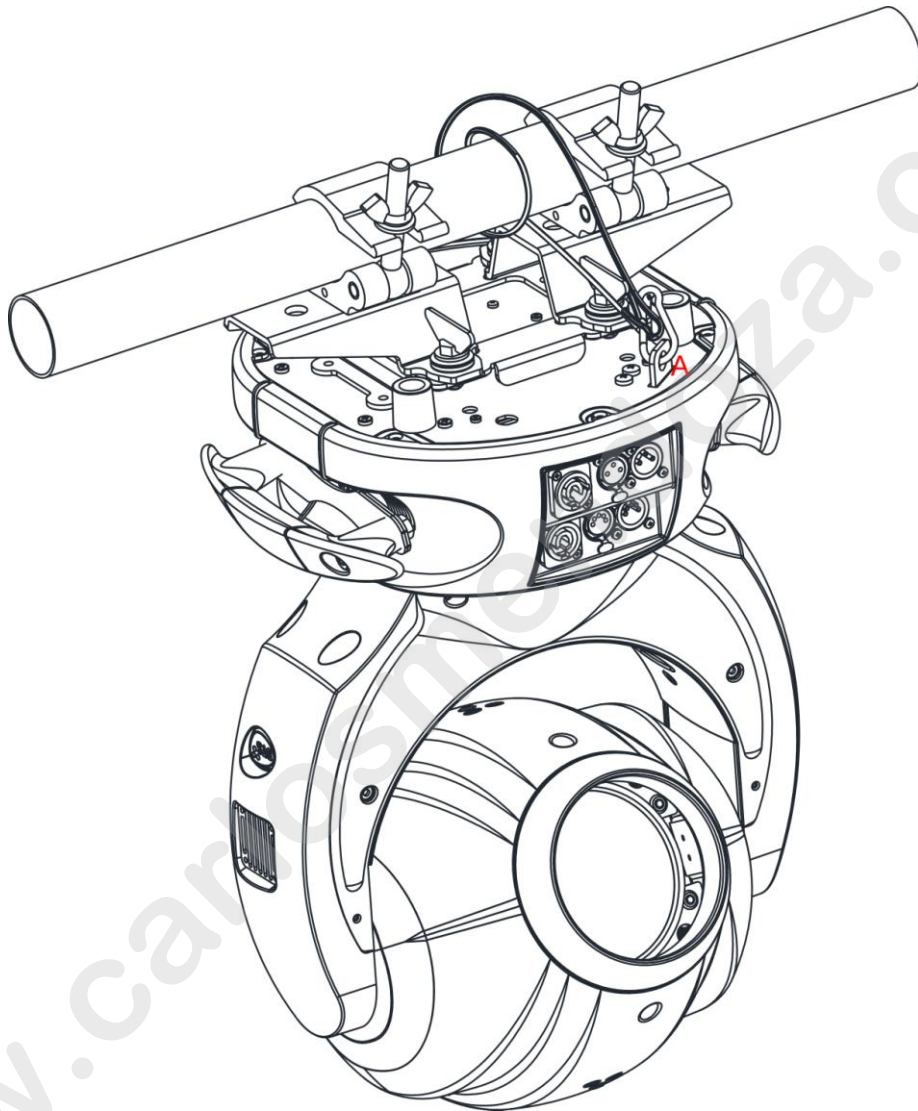

9.2 Protection against liquids

The projector contains electric and electronic components which should under no circumstances come into contact with oil, water or any other liquid.

The proper unit functioning would be compromised should this occur.

9.3- Movement

RAPTOR FPR (03.MB005.EB.LFP) Unlimited Pan rotation; Tilt 270° (1,2 sec.) .


RAPTOR (03.MB005.EB.L) Pan 540° (2,3 sec.); Tilt 270° (1,2 sec.) .

Do not place any obstructions in the path of the projector's movement.



WARNING

Do not place any object in the path of the projector's movement

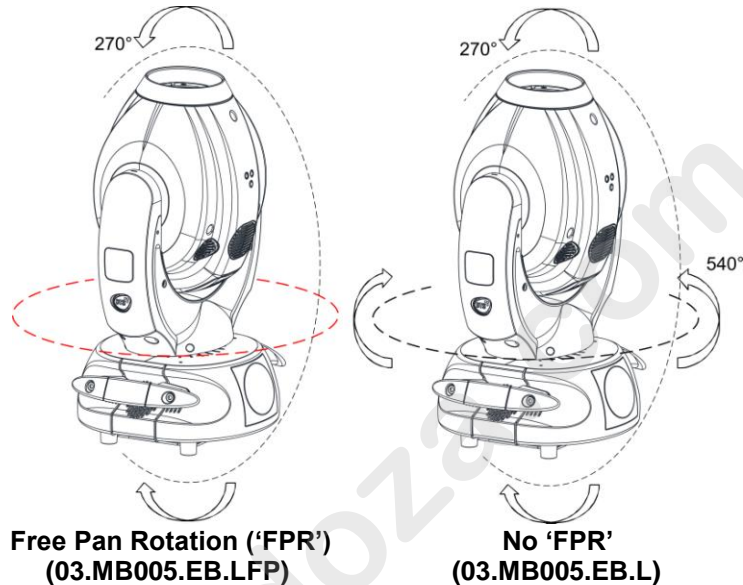

Please Note: If two different RAPTOR model (with and without FPR) are controlled at the same time via DMX controller, be shure that channel 6 (PAN FAR) is set to value 0. In this way, the RAPTOR with FPR will react to DMX same as RAPTOR with no FPR function.

9.4- Risk of fire

Each fixture produces heat and must be installed in a well-ventilated place. The minimum recommended distance from flammable material is 1 m.

Minimum distance from the object being illuminated is 15 m. 15M



9.5- Forced ventilation

You will note, on inspection, that the unit features various air inlets and cooling fans located on both the base and head of the fixture.

These should, under no circumstances, be blocked or obstructed whilst the projector is in operation. Doing so could cause the fixture to seriously overheat thereby compromising its proper operation.

9.6- Ambient temperature

The projector should never be installed in places that lack a constant air flow. The ambient temperature should NOT exceed 40°C.

10- MAINS CONNECTION

RAPTOR with electronic ballast operate at 90-260V 50-60 Hz.

Prior to connecting the unit to your mains supply, ensure that the model in your possession correctly matches the mains supply available.


For connection purposes, ensure that your plug is capable of supporting 1,5 amps at 230 VOLT, or 3 amps at 90 VOLT.

Strict adherence to regulatory norms is strongly recommended.

MAINS AC OUTPUT 90-260V 50/60 Hz (16A Max)


MAX 6 RAPTOR UNITS @ 230V

MAX 3 RAPTOR UNITS @ 120V

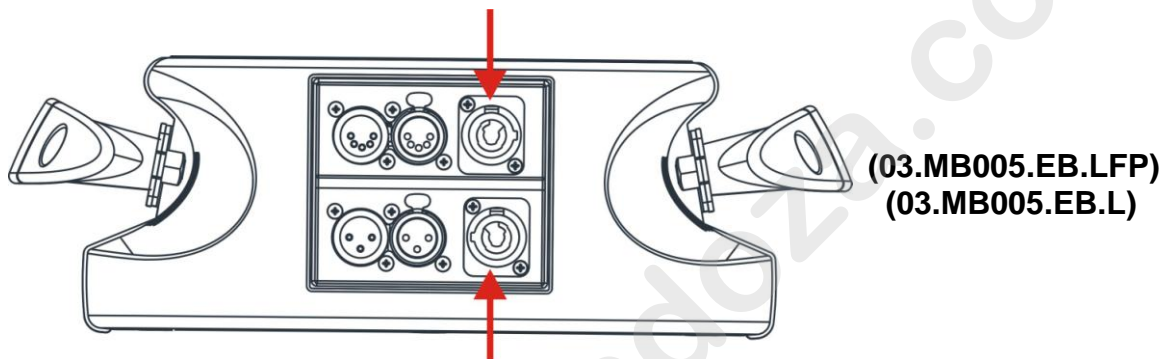

MAINS AC INPUT 90-260V 50/60 Hz

FUSE 5A T 5X20

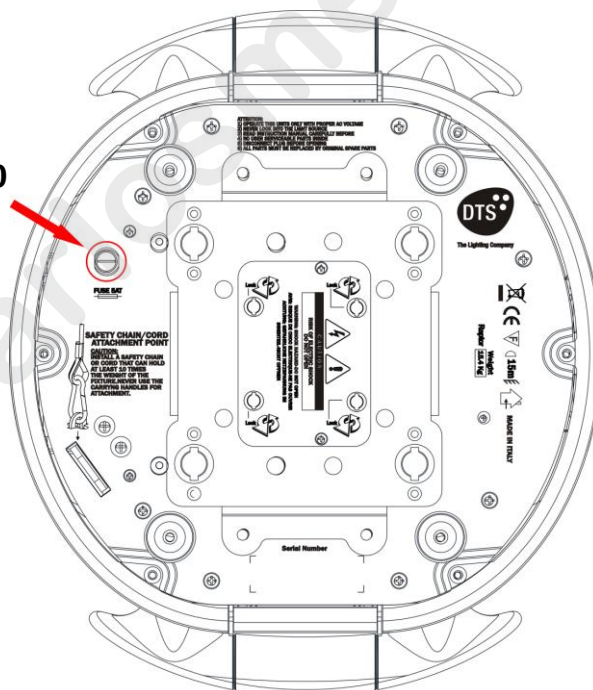

10.1- Protection



The use of a thermal magnetic circuit breaker is recommended for each RAPTOR. A good earth connection is essential for the correct operation of the projector.

11- DMX SIGNAL CONNECTION

The unit operates using the digital DMX 512 (1990) signal.

Connection between the mixer and the projector or between projectors must be carried out using a two pair screened \varnothing 0.5 mm cable and a XLR 5 or 3 pins connector.

Ensure that the conductors do not touch each other.


Do not connect the cable ground to the XLR chassy.

The plug housing must be isolated. Connect the mixer signal to the DMX IN projector plug and connect it to the next projector by connecting the DMX OUT plug on the first projector to the DMX IN plug of the second one.

This way, all the projectors are cascade connected.

NB. If the display showing the DMX address flashes, then one of the following errors has occurred:


- DMX signal not present
- DMX address not valid
- DMX reception problem

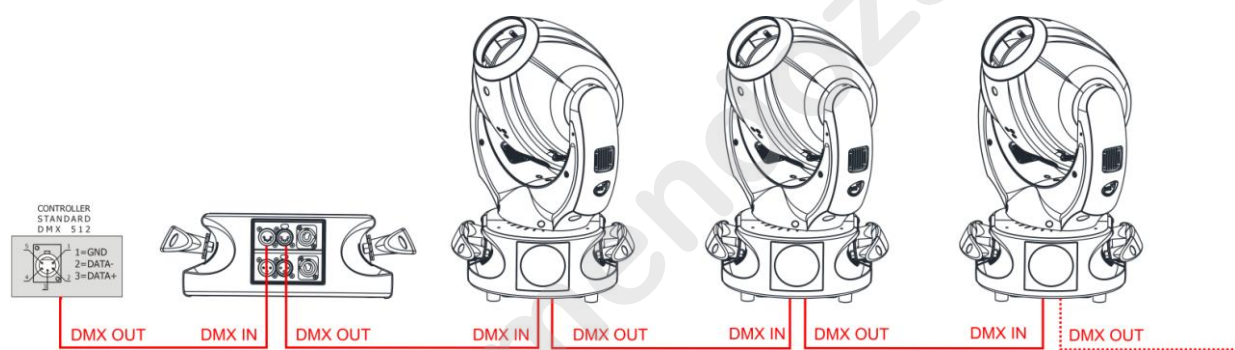


For Installations where long distance DMX cable connections are needed, we suggest to use a DMX terminator.

The DMX terminator is a male XLR 3-5 pins connector with a 120 ohm resistor between pin 2 and 3.

The DMX terminator must be plugged into the last unit (DMX out panel connector) of the DMX line.

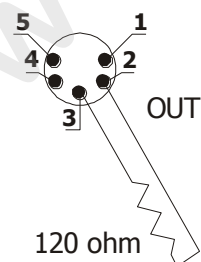

PLACE A 120 OHM RESISTOR BETWEEN PIN 2 AND 3 OF A MALE XLR CONNECTOR AND PLUG IT INTO THE DMX OUT PANEL CONNECTOR OF THE LAST UNIT CONNECTED TO THE DMX LINE

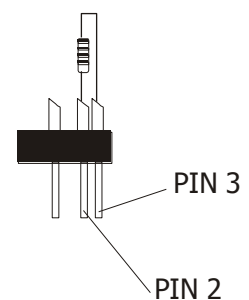

11.1-DMX Addresses

RAPTOR can be controlled with 18 DMX channels.

In order to use the unit in 18 channels, set the following addresses on the mixer:

Projector 1 A001

Projector 2 A019

If you want to select the next projector, just add "18"

Projector 3 A037

..... A....

projector 6 A091

11.2-Selecting the DMX address

1) Press the UP-DOWN key until you reach the required DMX channel. The numbers on the display will start to flash (but the new DMX address hasn't yet been set).

2) Press ENTER to confirm your selection. The numbers on the display will stop flashing and the projector is now setted to the new DMX address.

TRICKS:

If you keep pushed the UP or DOWN keys, the channels are calculated more quickly and you get a faster selection.

12- FIRMWARE UPDATING

Warning:

This procedure require a base knowledge of computer applications and Windows Hyperterminal program. **Please refer to an authorised D.T.S. service centre.**



To update the software version of the RAPTOR you need:

D.T.S. RED BOX interface (D.T.S. Code: 03.LA.008).

USB-DMX Driver for the D.T.S. RED BOX interface.

(The driver and the installation procedure are available in our web site www.dts-lighting.it)


Updating the software version.

Please follow the procedure below to perform the update:

1. Install the D.T.S. RED BOX USB-DMX driver on the PC you will use to update the unit software.
2. Connect the D.T.S. RED BOX interface to the PC by using a USB cable.
3. Connect the D.T.S. RED BOX interface to the fixture by using a DMX cable.
4. Download the new software version into the unit by using Windows Hyperterminal program.


It will be possible to download the software from the reserved area of D.T.S. web site: www.dts-lighting.it.

13- DISPLAY FUNCTIONS

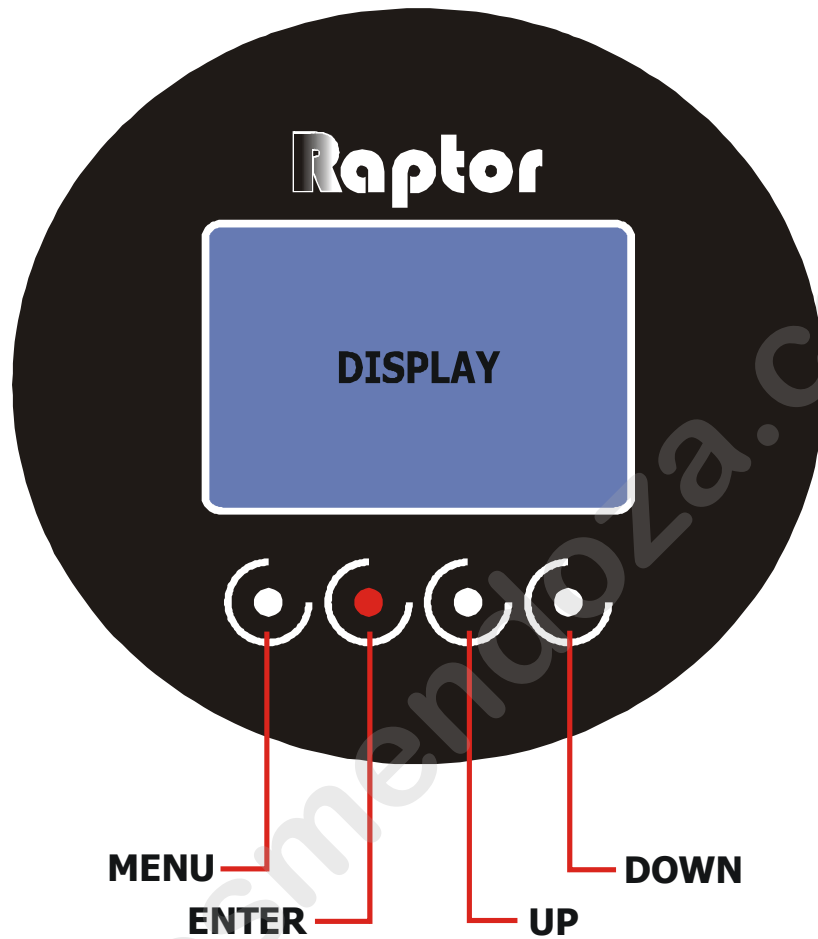


DISPLAY FUNCTIONS

The RAPTOR display panel shows all the available functions . Using these functions, it is possible to change some of the parameters and add some functions. Changing the D.T.S. setting can vary the functions of the unit so that it does not respond to the DMX 512 used to control it. Carefully follow the instructions below before carrying out any variations or selections.

NOTE: the symbol  shows which key has to be pushed to obtain the desired function.

13- DISPLAY FUNCTIONS

Software Version: 18.25

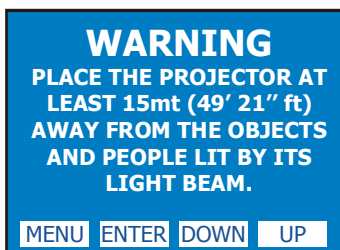

Pan Direction

PAN DIRECTION
This menu allows to set
the Pan movement
Normal or Reversed



Pan movement
Normal or Reversed
Default = Normal



Tilt Direction

TILT DIRECTION
This menu allows to set
the Tilt movement
Normal or Reversed




Tilt movement
Normal or Reversed
Default = Normal



Pan Speed

PAN SPEED
Pan Speed control (1-8)

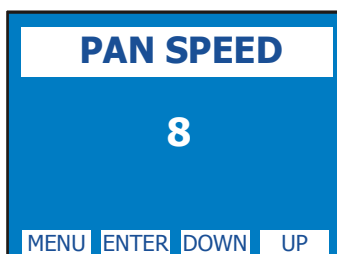


Pan Speed control
(1-8)
Default = 8



Tilt Speed

TILT SPEED
Tilt Speed control (1-8)

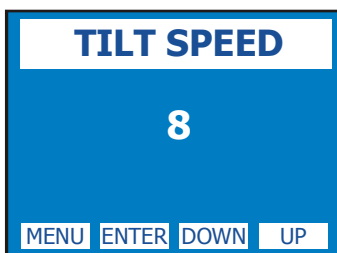

Tilt Speed control
(1-8)
Default = 8



13- DISPLAY FUNCTIONS



Display




DISPLAY FLIP / STAND BY / CONTRAST


Display Flip:
Reverses display's reading depending on the mounting position (On the ground or suspended).

Display Standby:
To turn off the display (after 5 seconds) or leave it always on.

Display Contrast:
Display contrast regulation (1-40)

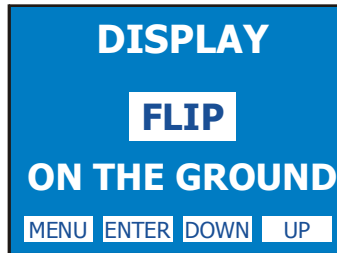

Display Flip
ON THE GROUND (Default)
SUSPENDED

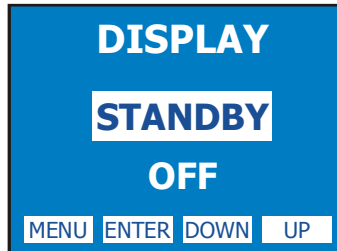

Display Standby
OFF = Display Standby disabled (Default)
ON = Display goes OFF after 5 seconds



Display Contrast
1-40 (Default = 30)




Lamp




LAMP
Lamp always ON, always OFF, lamp ON-OFF selectable via DMX and lamp life time reset

ADJUST
To adjust the lamp with no mixer connected.
It's possible to set the parameters for PAN-TILT and FOCUS

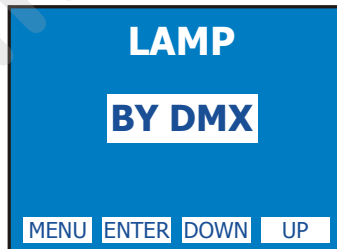

BY DMX = Lamp ON / OFF via DMX (Default)
ALWAYS ON = Forced ON
ALWAYS OFF = Forced OFF
RESET COUNTER = Lamp life time reset

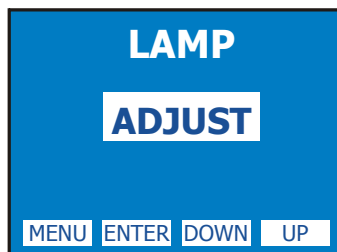


LAMP ADJUST = To adjust the lamp with no mixer connected.
It's possible to set the parameters for PAN-TILT and FOCUS



Reset



RESET
Reset via DMX ENABLED / DISABLED
And unit reset

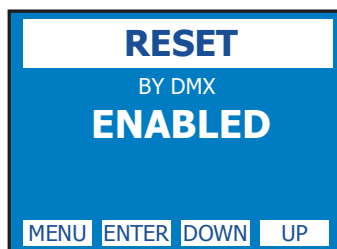

ENABLED = Reset via DMX enabled (Default)
DISABLED = Reset via DMX disabled
NOW = Unit motors reset



13- DISPLAY FUNCTIONS




Wireless

WIRELESS

Wireless DMX enabled / disabled.

(Wireless module on request)

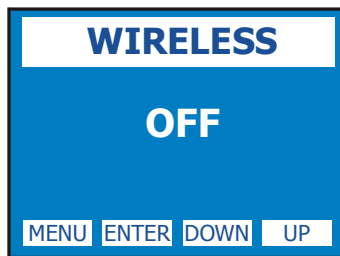

ON = Enabled
OFF = Disabled
(Default)
UNLINK = Log out


(Wireless module on request)



System Info

SYSTEM INFO

Lamp life time, lamp strikes,
unit life time, 9 motors card
software version, Pan&Tilt card
software version and unit model

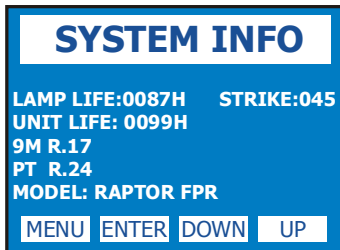

SYSTEM INFO


Lamp life time, lamp strikes,
unit life time, 9 motors card
software version, Pan&Tilt
card software version and
unit model





Reserved

RESERVED


(Code = 100)
Pan lock-Tilt lock
Pan free-Tilt free
Lock Detector
Reboot
Exit To Main

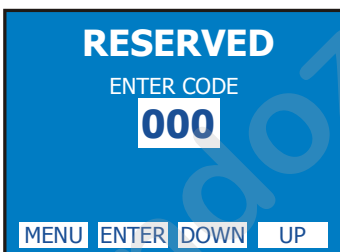

Pan Lock = Lock the Pan
to the desired value
Tilt Lock = Lock the Tilt
to the desired value
Pan Free = Remove power
to Pan motor
Tilt Free = Remove power
to Tilt motor

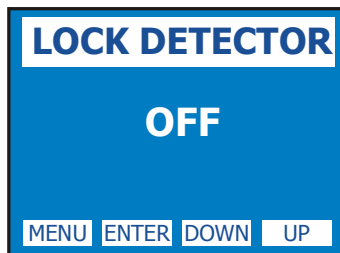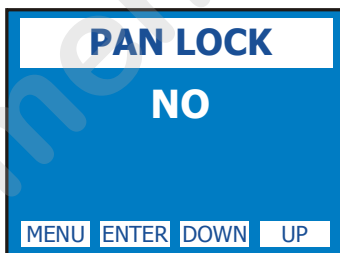

Lock Detector OFF = Default
Lock Detector ON: This function
let the user to activate the Lock
detector on Pan and Tilt.
When Lock detector is set to
ON, the unit start the Pan&Tilt
motors reset normally, but if for
any reason there is something
blocking the movement for
Pan&Tilt motors during the
initial reset (example unit into
the fly case and power
connected), it automatically will
stop to reset Pan&Tilt motors
after 5 seconds from the startup
and a warning message (Pan
Locked-Tilt locked) will appear
on unit display .

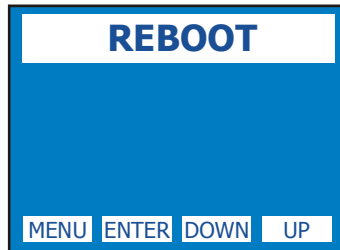

Reboot = Unit Reboot without
needing of turning OFF the unit




Exit To Main = Exit from
Reserved menu




Default

DEFAULT
To restore main settings

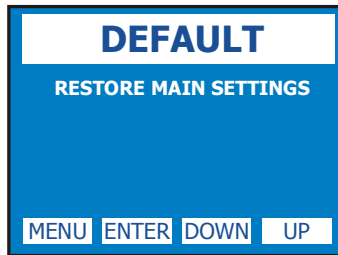


Default


To restore main settings

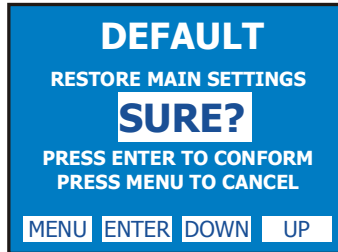


14- ERROR MESSAGES

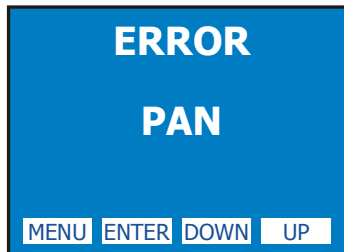

PAN REPOSITIONING
ENCODER ERROR

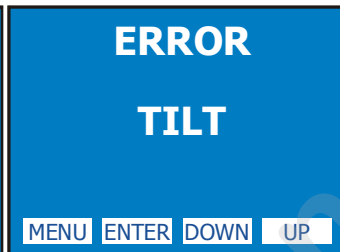

TILT REPOSITIONING
ENCODER ERROR

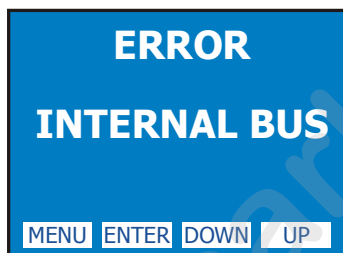

COMMUNICATION
PROBLEM BETWEEN
9 MOTORS CARD AND
PAN&TILT CARD



DMX ADDRESS
ERROR




FIXED GOBO WHEEL
POSITION ERROR




COLOUR WHEEL
POSITION ERROR




FROST BLADE
POSITION ERROR

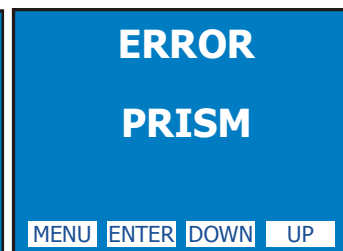

PRISM POSITION
ERROR

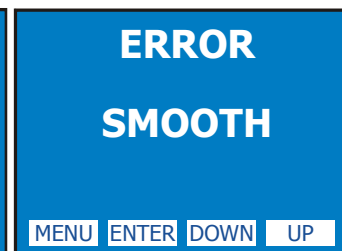

SMOOTH BLADE
POSITION ERROR

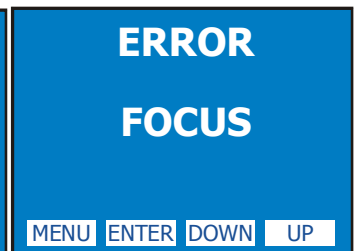

FOCUS ERROR


15- HIDDEN MENU (only for technical personnel)

To operate this menu:


- Connect the projector to the DMX controller (DMX SIGNAL MUST BE CORRECTLY RECEIVED)
- Reset the RAPTOR (reset from the MENU, not from the DMX controller).
- While reset is running, press the MENU and ENTER keys at the same time.




ELECTRONIC
CALIBRATION OF
THE MOTORS

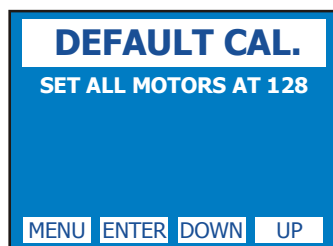

RESET ALL SETTINGS
TO VALUE 128

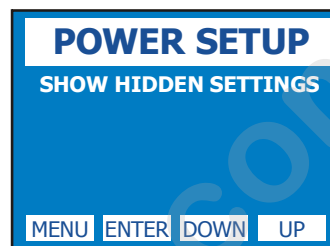

FANS / POWER SETTINGS
MENU

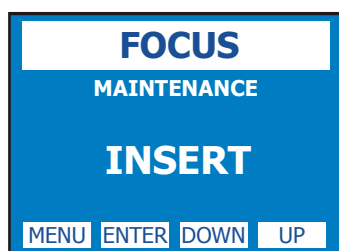

FOCUS LENS INSERTING
OR EJECTING




EXIT FROM HIDDEN
MENU


15.1 Calibration mode



PAN ALIGNMENT
To align Pan position

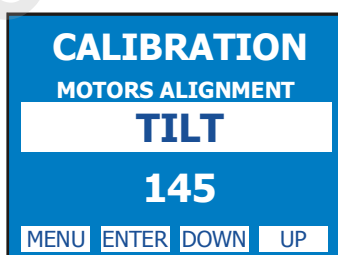

TILT ALIGNMENT
To align Tilt position

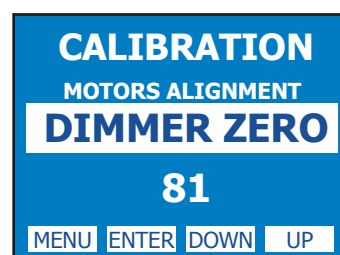

DIMMER ZERO ALIGNMENT
Dimmer zero position setting



DIMMER PATH ALIGNMENT
Dimmer excursion setting



SHUTTER ZERO ALIGNMENT
Shutter zero position setting



SHUTTER PATH ALIGNMENT
Shutter excursion setting


15.1 Calibration mode



COLOUR WHEEL
ALIGNMENT
To align Colour wheel



FIXED GOBO WHEEL
ALIGNMENT
To align Fixed Gobo wheel

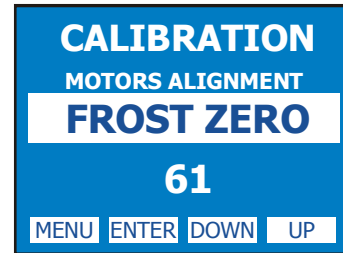

FROST ZERO
ALIGNMENT
Frost zero position setting




FROST PATH
ALIGNMENT
Frost excursion setting



PRISM ZERO ALIGNMENT
Prism zero position setting




PRISM PATH ALIGNMENT
Prism excursion setting

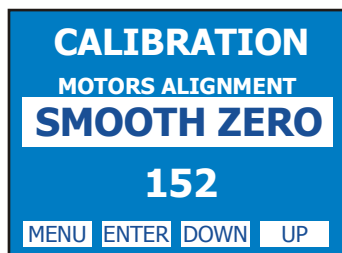

SMOOTH ZERO
ALIGNMENT
Smooth zero position
setting



SMOOTH PATH
ALIGNMENT
Smooth excursion
setting

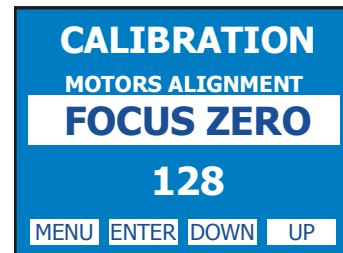

FOCUS ZERO
ALIGNMENT
Focus zero position setting




FOCUS PATH
ALIGNMENT
Focus excursion setting




FOCUS GOBO 0-17 CALIBRATION
Focus gobo 0-17 setting




15.2 Power Setup menu (Access code only for technical personnel)

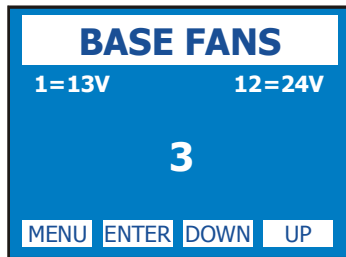


BASE FANS SPEED

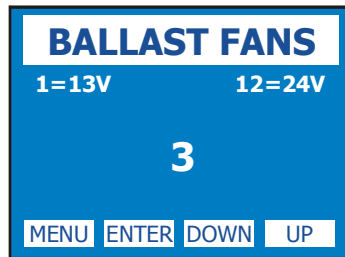


BALLAST FANS SPEED

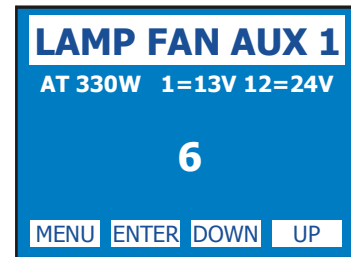


LAMP FANS SPEED WHEN
OPEN INSERTED

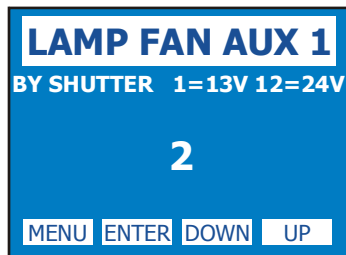


LAMP FANS SPEED
WHEN SHUTTER CLOSED

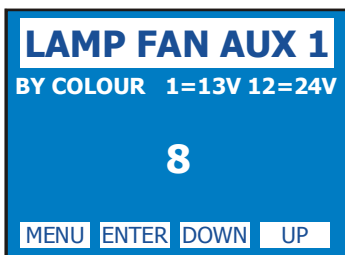

LAMP FANS SPEED
WHEN COLOURS INSERTED

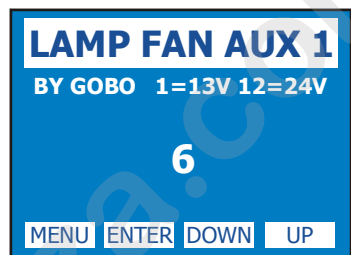

LAMP FANS SPEED
WHEN GOBOS INSERTED

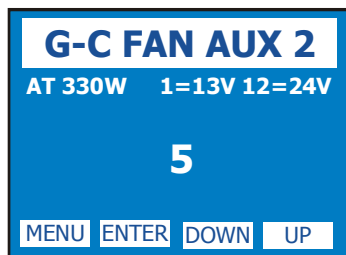


GOBO-COL. FAN SPEED
WHEN OPEN INSERTED




GOBO-COL. FAN SPEED
WHEN COLOUR WHEEL
INSERTED




GOBO-COL. FAN SPEED
WHEN GOBO WHEEL
INSERTED

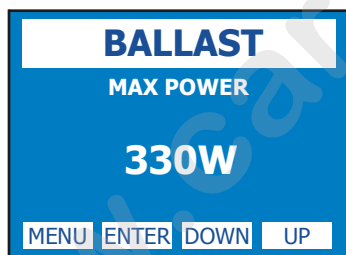


BALLAST POWER WHEN
OPEN INSERTED

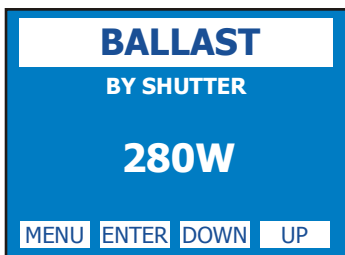


BALLAST POWER WHEN
SHUTTER CLOSED

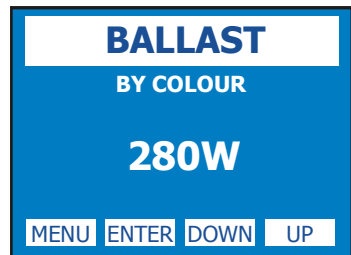

BALLAST POWER WHEN
COLOURS INSERTED

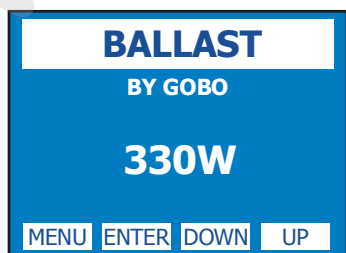

BALLAST POWER WHEN
GOBOS INSERTED

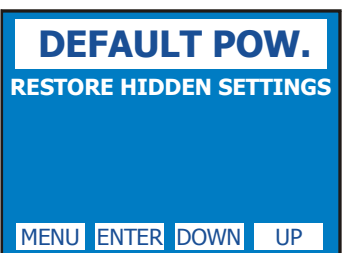

RESTORE THE DEFAULT
FANS / POWER SETTINGS



EXIT FROM POWER SETUP
MENU

16- PAN SPEED & TILT SPEED

You can set the PAN and TILT motors at high speed on your RAPTOR. Press menu until you see PAN SPEED / TILT SPEED. Press ENTER and select a speed with UP-DOWN (there are 8 speeds). Confirm by pressing ENTER.


17- OPENING THE PROJECTOR HOUSING

It is possible to inspect the inside of the projector by removing the cover as indicated below.


ATTENTION
REMOVE MAINS POWER PRIOR TO ACCESSING THE PROJECTOR'S INTERNAL COMPONENTS.



- 1) Loosen the 3 “¼ turn” screws which fix the head covers on both sides (picture 1) .
- 2) Once loosened the screws, simply lift the covers to access the internal components (picture 2).

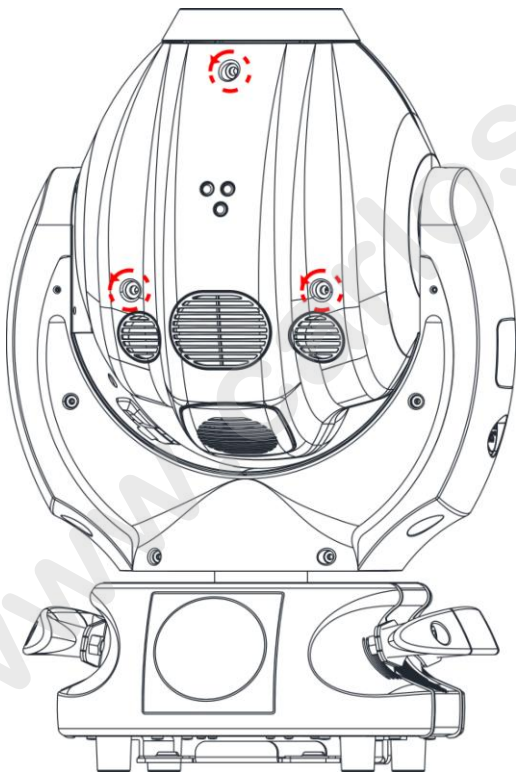

PICTURE 1

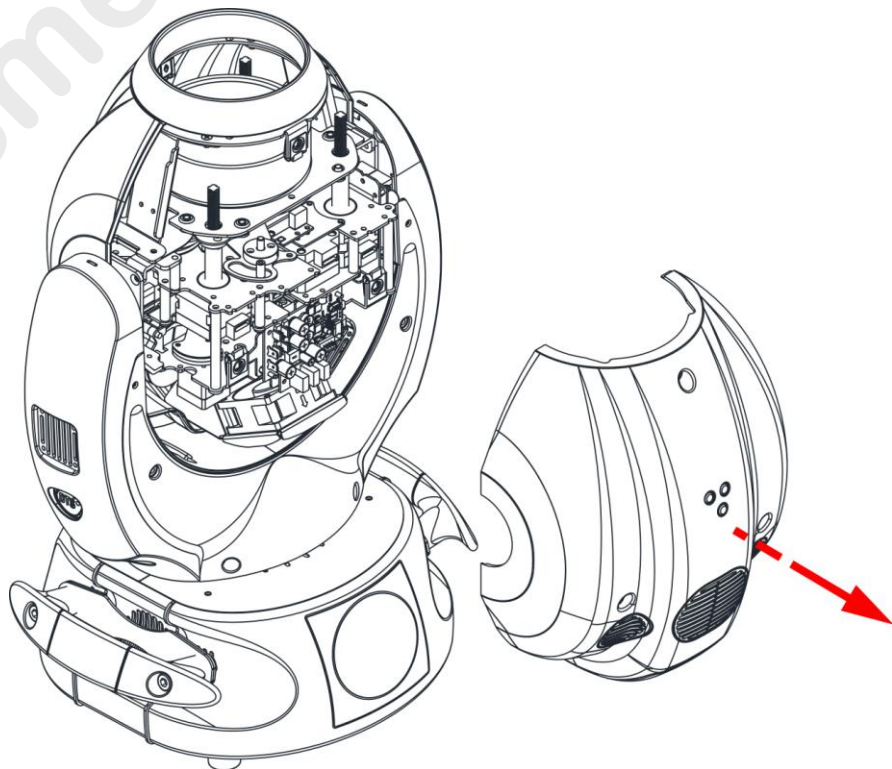

PICTURE 2

18- PERIODIC CLEANING

18.1- Lenses and reflectors

Even a fine layer of dust can reduce the luminous output substantially.

Regularly clean all lenses and the reflector using a soft cotton cloth, dampened with a specialist lens cleaning solution.

18.2- Fans and air passages

The fans and air passages must be cleaned approximately every 6 weeks.

This periodic cleaning will depend of course, on the conditions in which the projector is operating.

Suitable instruments for performing this type of maintenance are a brush and a common vacuum cleaner or an air compressor.

If necessary, clean the fans and air passages more frequently.

19- PERIODIC CONTROLS

Attention



Disconnect mains power prior to removing the projector housing.

Lamp



The lamp should be replaced if there is any visible damage or deformation due to heat. This will help to avoid the danger of the lamp exploding.

RAPTOR lamp lifespan is about 1500 hours, then it is necessary to replace it.

Mechanical parts

Periodically check all mechanical parts, gears, guides, belts, etc. for wear and tear, replacing them if necessary.

Periodically check the lubrication of all components, particularly the parts subject to high temperatures.

If necessary, lubricate with suitable lubricant, available from your D.T.S. distributor.

Check the tension of the belts and adjust it if necessary.

Electrical components



Check all electrical components for correct earthing and proper connection of all connectors, refastening if necessary.

Fuse replacement

Locate the fuse, which protects the lamp and electronics, in the base of the RAPTOR.

Using a multimeter, test the condition of the fuse, replacing it with one of equivalent type (5AT) if necessary.

20- DMX PROTOCOL**18 CHANNELS MODE**

- 1 PAN msb
- 2 PAN lsb
- 3 TILT msb
- 4 TILT lsb
- 5 SPEED MOVEMENT
- 6 PAN FAR (Active only on RAPTOR FPR)
- 7 DIMMER
- 8 SHUTTER
- 9 COLOUR
- 10 COLOUR MODE
- 11 FIXED GOBO
- 12 FIXED GOBO SHAKE
- 13 FROST
- 14 SMOOTH
- 15 PRISM
- 16 PRISM ROTATION
- 17 FOCUS
- 18 RESET + LAMP

DMX CHANNEL	1	Parameter: PAN msb
-------------	---	---------------------------

DMX CHANNEL	2	Parameter: PAN lsb
-------------	---	---------------------------

DMX CHANNEL	3	Parameter: TILT msb
-------------	---	----------------------------

DMX CHANNEL	4	Parameter: TILT lsb
-------------	---	----------------------------

DMX CHANNEL	5	Parameter: SPEED MOVEMENT
-------------	---	----------------------------------

DMX value	Function
000-010	Standard
011-025	Fast movement
026-127	Vector mode from fast to slow
128-247	Variable time reaction to dmx signal (fast to slow)
248-255	Silent movement

DMX CHANNEL	6	Parameter: PAN FAR (Active only on RAPTOR FPR)
-------------	---	---

DMX value	Function
000-010	Position mode 540° (standard path)
011-020	Position mode 360° (1 turn)
021-030	Position mode 720° (2 turns)
031-040	Position mode 1080° (3 turns)
041-050	Position mode 1440° (4 turns)
051-060	Position mode 1800° (5 turns)
061-070	Position mode 2160° (6 turns)
071-080	Position mode 2520° (7 turns)
081-090	Position mode 2880° (8 turns)
091-100	Position mode 3240° (9 turns)
101-110	Position mode 3600° (10 turns)
111-120	Position mode 360° smart path
121-182	Forward spin rotation speed from max to min
183-193	Stop
194-255	Reverse spin rotation speed from min to max

DMX CHANNEL	7	Parameter: DIMMER
-------------	---	--------------------------

DMX value	Function
000-007	Black-out
008-255	Proportional dimmer

DMX CHANNEL	8	Parameter: SHUTTER
-------------	---	---------------------------

DMX value	Function
000-019	Black-out
020-039	Open
040-059	Black-out
060-079	Strobe random speed
080-084	Strobe speed 1 (1 flash/sec)
085-089	Strobe speed 2 (2 flash/sec)
090-094	Strobe speed 3 (3 flash/sec)
095-099	Strobe speed 4 (4 flash/sec)
100-104	Strobe speed 5 (5 flash/sec)
105-109	Strobe speed 6 (6 flash/sec)
110-114	Strobe speed 7 (7 flash/sec)
115-119	Strobe speed 8 (8 flash/sec)
120-124	Strobe speed 9 (10 flash/sec)
125-129	Strobe speed 10 (12 flash/sec)
130-134	Strobe speed 11 (15 flash/sec)
135-139	Strobe speed 12 (18 flash/sec)
140-149	Flash open speed 1
150-159	Flash open speed 2
160-169	Flash open speed 3
170-179	Flash open speed 4
180-189	Flash closed speed 1
190-199	Flash closed speed 2
200-209	Flash closed speed 3
210-219	Flash closed speed 4
220-227	Colours/Gobo in black-out
228-233	Pan/Tilt in black-out
234-255	Open

DMX CHANNEL	9	Parameter: COLOUR
-------------	---	-------------------

IF CHANNEL 10 = FULL COLOUR (DMX range value 0-63)

DMX value	Function
000-013	Colour 1
014-027	Colour 2
028-041	Colour 3
042-055	Colour 4
056-069	Colour 5
070-083	Colour 6
084-097	Colour 7
098-111	Colour 8
112-125	Colour 9
126-139	Colour 10
140-153	Colour 11
154-167	Colour 12
168-181	Colour 13
182-195	Colour 14
196-209	Colour 15
210-223	Colour 16
224-237	Colour 17
238-255	Colour 18

IF CHANNEL 10 = HALF COLOUR (DMX range value 64-127)

DMX value	Function
000-012	Colour 1
013-025	Colour 1-2
026-038	Colour 2-3
039-051	Colour 3-4
052-064	Colour 4-5
065-077	Colour 5-6
078-090	Colour 6-7
091-103	Colour 7-8
104-116	Colour 8-9
117-129	Colour 9-10
130-142	Colour 10-11
143-155	Colour 11-12
156-168	Colour 12-13
169-181	Colour 13-14
182-194	Colour 14-15
195-207	Colour 15-16
208-220	Colour 16-17
221-233	Colour 17-18
234-255	Colour 18-1

IF CHANNEL 10 = PROPORTIONAL COLOUR (DMX range value 128-191)

DMX value	Function
000-010	No colour
011-255	Proportional colour

IF CHANNEL 10 = RAINBOW (DMX range value 192-255)

DMX value	Function
000-009	No colour
010-127	Right rotation speed from max to min
128-137	Stop
138-255	Left rotation speed from min to max

DMX CHANNEL	10	Parameter: COLOUR MODE
-------------	----	-------------------------------

DMX value	Function
000-063	Full colour
064-127	Half colour
128-191	Proportional colour
192-255	Rainbow

DMX CHANNEL	11	Parameter: FIXED GOBO
-------------	----	------------------------------

DMX value	Function
000-010	Open
011-021	Gobo 1
022-032	Gobo 2
033-043	Gobo 3
044-054	Gobo 4
055-065	Gobo 5
066-076	Gobo 6
077-087	Gobo 7
088-098	Gobo 8
099-109	Gobo 9
110-120	Gobo 10
121-131	Gobo 11
132-142	Gobo 12
143-153	Gobo 13
154-164	Gobo 14
165-175	Gobo 15
176-186	Gobo 16
187-255	Gobo 17

DMX CHANNEL	12	Parameter: FIXED GOBO SHAKE
-------------	----	------------------------------------

DMX value	Function
000-009	Stop
010-016	Gobo shake R-L speed 1
017-023	Gobo shake R-L speed 2
024-030	Gobo shake R-L speed 3
031-037	Gobo shake R-L speed 4
038-044	Gobo shake R-L speed 5
045-051	Gobo shake R-L speed 6
052-058	Gobo shake R-L speed 7
059-065	Gobo shake R-L speed 8
066-072	Gobo shake R-L speed 9
073-079	Gobo shake R-L speed 10
080-086	Gobo shake R-L speed 11
087-093	Gobo shake R-L speed 12
094-100	Gobo shake R-L speed 13
101-107	Gobo shake R-L speed 14
108-114	Gobo shake R-L speed 15
115-126	Gobo shake R-L speed 16
127-138	Stop
139-145	Gobo shake L-R speed 1
146-152	Gobo shake L-R speed 2
153-159	Gobo shake L-R speed 3
160-166	Gobo shake L-R speed 4
167-173	Gobo shake L-R speed 5
174-180	Gobo shake L-R speed 6
181-187	Gobo shake L-R speed 7
188-194	Gobo shake L-R speed 8
195-201	Gobo shake L-R speed 9
202-208	Gobo shake L-R speed 10
209-215	Gobo shake L-R speed 11
216-222	Gobo shake L-R speed 12
223-229	Gobo shake L-R speed 13
230-236	Gobo shake L-R speed 14
237-243	Gobo shake L-R speed 15
244-255	Gobo shake L-R speed 16

DMX CHANNEL	13	Parameter: FROST
-------------	----	-------------------------

DMX value	Function
000-007	No function
008-255	Frost inserted

DMX CHANNEL	14	Parameter: SMOOTH
-------------	----	--------------------------

DMX value	Function
000-127	No function
128-255	Smooth inserted

DMX CHANNEL	15	Parameter: PRISM
-------------	----	-------------------------

DMX value	Function
000-127	No function
128-255	Prism inserted

DMX CHANNEL	16	Parameter: PRISM ROTATION
-------------	----	----------------------------------

DMX value	Function
000-009	Stop
010-127	Left rotation from fast to slow
128-137	Stop
138-255	Right rotation from slow to fast


DMX CHANNEL	17	Parameter: FOCUS
-------------	----	-------------------------

DMX value	Function
000-255	Linear focus


DMX CHANNEL	18	Parameter: RESET + LAMP
-------------	----	--------------------------------

DMX value	Function
000-009	No effect
010-060	Lamp OFF (3 sec)
061-129	No effect
130-179	Lamp ON (3 sec)
180-200	No effect
201-239	Internal motor reset
240-255	Total reset

21- FIXED GOBO WHEEL

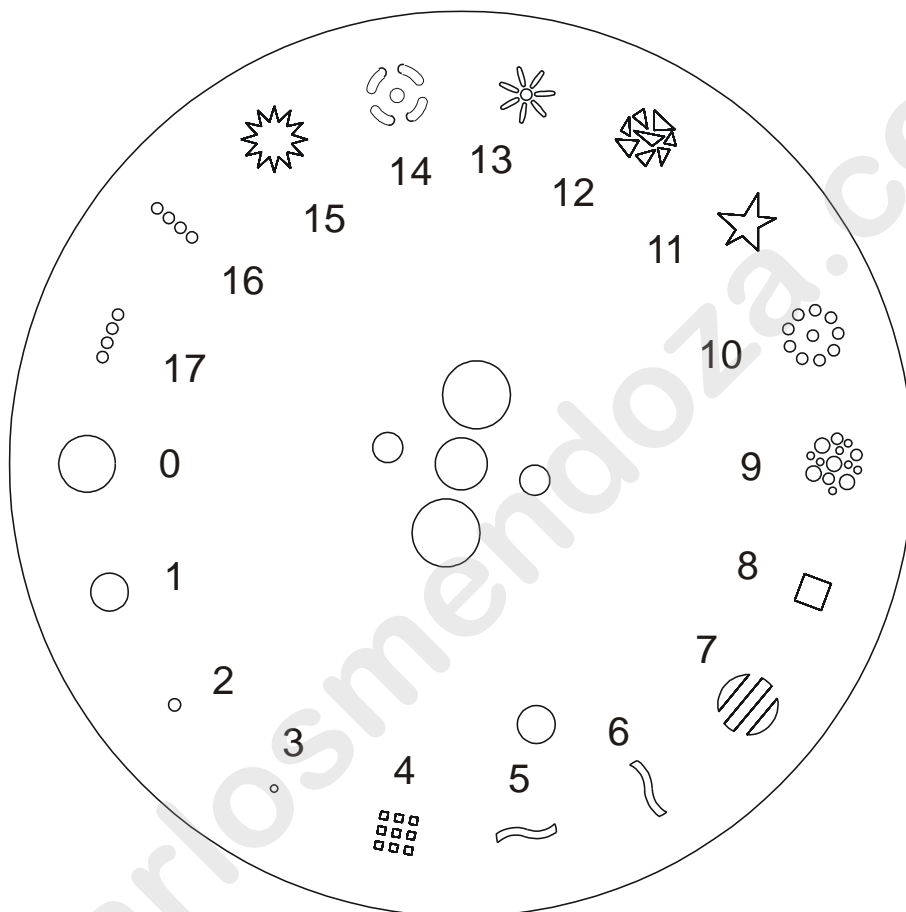

www.carlosmendoza.com.mx

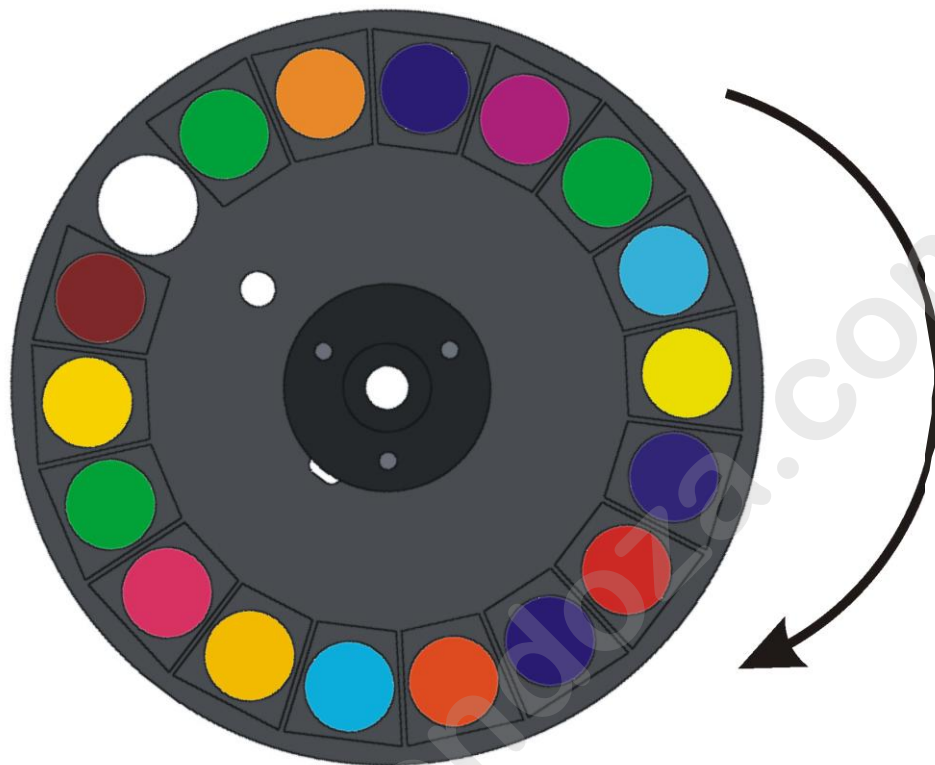22- COLOUR WHEEL

COLOUR 1
RED



D.T.S. Code:
(0507C059.D14)

COLOUR 2
YELLOW 1



D.T.S. Code:
(0507C065.D14)

COLOUR 3
GREEN



D.T.S. Code:
(0507C068.D14)

COLOUR 4
PINK



D.T.S. Code:
(0507C071.D14)

COLOUR 5
FULL CTO



D.T.S. Code:
(0507C061.D14)

COLOUR 6
FULL CTB



D.T.S. Code:
(0507C060.D14)

COLOUR 7
ORANGE



D.T.S. Code:
(0507C063.D14)

COLOUR 8
DARK BLUE



D.T.S. Code:
(0507C069.D14)

COLOUR 9
LIGHT RED



D.T.S. Code:
(0507C062.D14)

COLOUR 10
PURPLE



D.T.S. Code:
(0507C072.D14)

COLOUR 11
YELLOW 2



D.T.S. Code:
(0507C066.D14)

COLOUR 12
LIGHT BLUE



D.T.S. Code:
(0507C075.D14)

COLOUR 13
LIGHT GREEN



D.T.S. Code:
(0507C073.D14)

COLOUR 14
MAGENTA



D.T.S. Code:
(0507C074.D14)

COLOUR 15
BLUE



D.T.S. Code:
(0507C070.D14)

COLOUR 16
AMBER



D.T.S. Code:
(0507C064.D14)

COLOUR 17
DARK GREEN



D.T.S. Code:
(0507C067.D14)

The information contained in this publication has been carefully prepared and checked. However, no responsibility will be taken for any errors. All rights are reserved and this document cannot be copied, photocopied or reproduced, in part or completely, without prior written consent from D.T.S.

D.T.S. reserves the right to make any aesthetic, functional or design modifications to any of its products without prior notice. D.T.S. assumes no responsibility for the use or application of the products or circuits described herein.

MADE IN ITALY



The Lighting Company

ISO 9001:2008

D.T.S. quality system
is certified to the
ISO 9001:2008 standard



D.T.S. products are designed
and manufactured at the D.T.S.
plants in Italy



05171208

D.T.S. Illuminazione s.r.l. – Via Fagnano Selve 10-12-14 47843
Misano Adriatico (RN) Italia
Tel.: +39 0541 611131. Fax + 39 0541 611111
info@dts-lighting.it www.dts-lighting.it