

# LED MOVING HEAD



LED MOVING HEAD 300
USER MANUAL



## CATALOG

| CATALOG            |    |
|--------------------|----|
| DESCRIPTION        | 2  |
| OVERVIEW           |    |
| SAFETY INFORMATION | 4  |
| POWER CONNECTION   | 5  |
| DATA CONNECTION    | 5  |
| INSTALLATION       | 7  |
| OPERATION          | 8  |
| CHANNEL FUNCTIONS  | 9  |
| CONTROL PANEL      | 12 |
| MENU INSTRUCTION   | 12 |
| PHOTOMETRIC DATA   |    |
| SPECIFICATIONS     | 17 |

#### DESCRIPTION

Thanks for using our Products, this device is a great and reliable unit that can meet most of your requirements for professional markets. This product can be operated as a single unit or in multiple units for large applications. This moving head has got the nice sculpt, efficient, save electricity and durable. It is suitable for saloon, disco, hotel, showplace, studio, stage, etc.

This product complies with the following standards:

IEC60598-1:2003

IEC60598-2-17:1984+A2:1990

Upon receiving products, please check carefully that there has been no damage caused in transportation and that the following parts are enclosed:


User manual----- 1 Pcs


Omega clamp----- 1 Pcs


#### Main features

- ✓ Super bright 3 Watt LED, long lifespan 100,000 hours
- ✓ Electronic strobe with pulse effects
- √ 10 or 12 standard DMX channels
- √ 3 control modes: DMX 512, master/slave mode, sound activated mode
- ✓ Maximum Pan-movement: 540° or 630°, self-correcting
- ✓ Maximum Tilt-movement: 270°, self-correcting
- ✓ Electronic strobe with pulse effects
- ✓ Smooth electronic dimming make the light more colorful
- ✓ Onboard control panel and LCD graphic display

## **OVERVIEW**

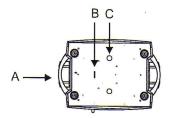

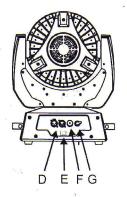

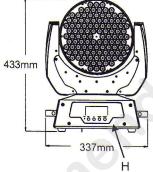



- A. Carrying handle
- B. Safety cable hole
- C. Installation holes
- D. DMX IN socket/ DMX OUT socket
- E. Power switch
- F. Fuseholder
- G. Power supply
- H. Control pannel

## **SAFETY INFORMATION**

## Important

Every person involved with the installation, operation and maintenance of this device has to be qualified and follow the instructions of this manual. Manufacturer will not with responsibility for those operation not according to this Instruction

- Verify that the voltage matches the rated voltage.
- Always disconnect the power before attempting to open the equipment housing or carrying out any maintenance.
- Always ground (earth) the fixture electrically .
- Do not expose the fixture to rain or moisture.
- Verify that the feed cables are undamaged and rated for the current requirements of all connected devices before use.
- Never attempt to bypass the thermostatic switch or fuses. Always replace defective fuses with ones of the specified type and rating.
- Ensure that the air flow through fans and vents is free and unobstructed.
- Avoid looking directly into the light source (especially those who suffer from epileptic fits)
- When suspending the fixture above ground level, verify that the structure can hold at least 10 times the weight of all installed devices.
- Verify that all external covers and rigging hardware are securely fastened and use an approved means of secondary attachment such as a safety cable.
- Block access below the work area whenever installing or removing the fixture.

- Avoiding hit the Light when you are move or install the light.
- Maximum ambient temperature (Ta) is 35°C. Do not operate fixture at temperatures higher than this.
- The surface temperature of the light can reach to 50°C, cool down at least 15 minutes before you operate the light.
- The minimum distance between light-output and the illuminated surface must be more than 0.5 meters. Keep all combustible materials (for example fabric, wood, paper) at least 0.3 meters away from the fixture.
- If the exterior cord of the fixture is damaged, it must be replaced by manufactory, agent or a qualified technician

#### POWER CONNECTION

Please ensure that the voltage matches the rated voltage and the device is always connected to the earth properly.

Depending on the application, the lighting may require a different connector.

Please refer to the below wire color code if installing a new connector


| Wire         | Connection |  |
|--------------|------------|--|
| Brown        | AC Live    |  |
| Blue         | Neutral    |  |
| Green/Yellow | AC Ground  |  |

#### DATA CONNECTION


The fixtures may be conected via 3-Pin signal cables.

In DMX mode, at the last fixture in the chain, the DMX output has to

connected with a DMX terminator . This prevents electrical noise from disturbing and corrupting the DMX control signals .

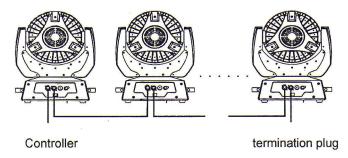

#### Master/slave connection

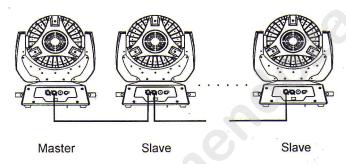


#### Occupation of the XLR-connection:

| DMX-output                                     |             | DMX-input |             |
|--|-------------|-----------|-------------|
| XLR mounting-socket:                           |             | XLR mou   | nting-plug: |
|  | 1: Ground   |           | 1: Ground   |
| $\begin{pmatrix} 2 & 1 \\ 3 & 2 \end{pmatrix}$ | 2: Signal - | ( 1 3 2 ) | 2: Signal - |
|  | 3: Signal + |           | 3: Signal + |

## **Termination plug**

The termination plug is a male XLR plug with a 120 ohm, 0.25 watt resistor soldered between pins 2 and 3.

If you are making your own cables, be sure to use standard two conductor shielded cable (This cable may be purchased at almost all professional sound and lighting stores). Your cables should be made with a male and female XLR connector on either end of the cable. Also remember that DMX cable must be daisy chained and cannot be split.

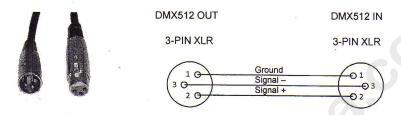

#### 3-PIN TO 5-PIN CONVERSION CHART

If you use a controller with a 5 pin DMX output connector, you will need to use a 5 pin to 3 pin adapter. The chart below details a proper cable conversion:


| Conductor  | 3 Pin Female (output) | 5 Pin Male (Input) |
|------------|-----------------------|--------------------|
| Ground     | Pin 1                 | Pin 1              |
| signal -   | Pin 2                 | Pin 2              |
| signal +   | Pin 3                 | Pin 3              |
| Do not use |                       | Pin 4              |
| Do not use |                       | Pin 5              |

#### **INSTALLATION**

When suspending the fixture above ground level, verify that the structure can hold at least 10 times the weight of all installed devices.


Verify that all external covers and rigging hardware are securely fastened

and use an approved means of secondary attachment such as a safety cable.

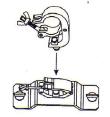


Screw clamp onto the

Omega-holder

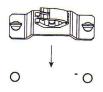


Insert quick lock fasteners

into the installation holes

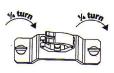

Tighten quick-lock fasteners fully clockwise.

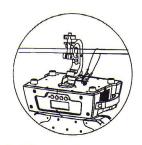

Use safety-cable for second protection

## **OPERATION**

### Stand-alone operation

Stand-alone opreration allows the fixture works without controller and be controlled by the control panel directly. Please refer to the menu instruction.

## Master / slave operation

Setting the first fixture to master-device and the following devices to slave-devices (work in DMX mode), then all devices will run synchronously. Please refer to the menu instruction.

#### DMX operation

You can control the devices individually or synchronously by the DMX-controller. You should set the device's start address in the DMX menu by control panel .After setting the address, the device enter DMX mode.

#### Setting the start address

Each fixture requires a "start address" from 1 to 512. A fixture requiring one or more channels for control begins to read the data on the channel indicated by the start address. For example, a fixture that uses 4 DMX channels and was addressed to start on DMX channel 1, would read data from channels: 1, 2, 3, 4. Choose start addresses so that the channels used do not overlap, and note the start address selected for future reference. Note that Assign the same address to the different lightings, they will receive the same signal.

#### **CHANNEL FUNCTIONS**

#### Channel 1 - Red dimmer

| Value   | Function          |
|---------|-------------------|
| 000~255 | Red dimmer 0~100% |

#### Channel 2 - Green dimmer

| Value   | Function            |
|---------|---------------------|
| 000~255 | Green dimmer 0~100% |

## Channel 3 - Blue dimmer

| Value   | Function           |  |
|---------|--------------------|--|
| 000~255 | Blue dimmer 0~100% |  |

### Channel 4 - Pan

| Value   | Function  |
|---------|---|
| 000~255 | Pan 0 - 630° or 0~540° (depending on setting in menu) |

#### Channel 5 - Tilt

| Value   | Function      | 1   |
|---------|---------------|-----|
| 000~255 | Tilt 0 - 270° | • / |

### Channel 6 - Scan speed

| Value   | Function   |
|---------|--|
| 000~225 | Fast to slow   |
| 226~255 | Natural speed(fast)  |
|         | If selected the "ScanBlackOut:ON" function in SET menu by        |
|         | control panel , while DMX value is 226~236,the lighting blackout |
|         | during pan/tilt movement.  |

## Channel 7 - Strobe

| Value   | Function                        |  |
|---------|---------------------------------|--|
| 000~009 | No strobe function              |  |
| 010~149 | Strobe (slow to fast)           |  |
| 150~199 | Fast in slow out (slow to fast) |  |
| 200~249 | Slow in fast out (slow to fast) |  |
| 250~255 | No strobe function              |  |

## Channel 8 - General dimmer

| Value   | Function       |        |
|---------|----------------|--------|
| 000~255 | General dimmer | 0~100% |

### Channel 9 – Rainbow effects

| Value     | Function     |
|-----------|--------------|
| 005 - 031 | R(↑)G(0)B(0) |

| 032 - 063 | R(↓)G(↑)B(0)                              |
|-----------|---|
| 064 - 095 | R(†)G(255)B(0)                            |
| 096 - 127 | $R(\downarrow)G(\downarrow)B(\uparrow)$   |
| 128 - 159 | R(†)G(0)B(255)                            |
| 160 - 191 | R(↓)G(↑)B(255)                            |
| 192 - 223 | R(†)G(255)B(255)                          |
| 224 - 255 | $R(\downarrow)G(\downarrow)B(\downarrow)$ |
|           |   |

## Channel 10 - Auto program, reset

| Value      | Function  |  |  |  |
|------------|---|--|--|--|
| 000 - 049  | RGB dimmer in operation (CH1~CH3)                 |  |  |  |
| 050 - 059  | Red   |  |  |  |
| 060 - 069  | Green   |  |  |  |
| 070 - 079  | Blue  |  |  |  |
| 080 - 089  | Yellow  |  |  |  |
| 090 - 099  | Cyan  |  |  |  |
| 100 - 109  | Purple  |  |  |  |
| 110 - 119  | White   |  |  |  |
| 120 - 129  | Color temperature 3200K                           |  |  |  |
| 130 - 139  | Color temperature 5600K                           |  |  |  |
| 140 - 149/ | Color temperature 6500K                           |  |  |  |
| 150 - 159  | Color temperature 8500K                           |  |  |  |
| 160 -/169  | Color temperature 10000K                          |  |  |  |
| 170 - 174  | ChangeColor (The motors rotate automatically)     |  |  |  |
| 175 - 179  | ChangeColor (The motors controlled by controller) |  |  |  |
| 180 - 184  | Twinkling (The motors rotate automatically)       |  |  |  |
| 185 - 189  | Twinkling (The motors controlled by controller)   |  |  |  |
| 190 - 194  | Fade (The motors rotate automatically)            |  |  |  |
| 195 - 199  | Fade (The motors controlled by controller)        |  |  |  |
| 200 - 21,9 | No function                                       |  |  |  |
| 220 - 229  | Reset after 5S                                    |  |  |  |
| 230 - 234  | Auto macro (The motors rotate automatically)      |  |  |  |

| 235 - 239 | Auto macro (The motors controlled by controller)  |
|-----------|---|
| 240 - 244 | Sound macro (The motors rotate automatically)     |
| 245 - 249 | Sound macro (The motors controlled by controller) |
| 250 - 255 | No function                                       |

#### Channel 11 – Pan fine (16 bit mode)

| . Value | Function | - / |
|---------|----------|-----|
| 000~255 | Pan fine |     |

#### Channel 12 - Tilt fine (16 bit mode)

item or parameter)

| Value   | Function  |  |
|---------|-----------|--|
| 000~255 | Tilt fine |  |

#### CONTROL PANEL

#### Button

[ESC] Call the main menu, or escape the current menu(i.e. return to the upper menu and give up the selected item or parameter)

[UP] Browse the menu item forward or increase the parameter

[DOWN] Browse the menu item backward or decrease the parameter

[ENTER] Confirm the selected item or parameter(i.e. enter the next menu, or escape the current menu and save the selected

#### **MENU INSTRUCTION**

Power on the fixture, use UP or DOWN button could scroll all function menu step by step as follow:

Addr:001, ManualDimmer, Red, Green, Blue, Yellow, Cyan, Purple, White, 3200K, 5600K, 6500K, 8500K, 10000K, ChangeColor, Twinkling, Fade, Macro

Press Enter-button if you wish to select one of them .

Press ECS-button enter SET menu, press again return.

#### Menu navigation

- SET menu←ESC— Addr:001(with actually stored address) —ENTER→DMX menu UP↑↓DOWN
- SET menu←ESC− **ManualDimmer** −ENTER→ManualDimmer menu UP↑↓DOWN
- SET menu←ESC− Red −ENTER→null UP↑↓DOWN
- SET menu←ESC− **Green** −ENTER→null UP↑↓DOWN
- SET menu←ESC− Blue −ENTER→null UP↑↓DOWN
- SET menu←ESC− **Yellow** −ENTER→null UP↑↓DOWN
- SET menu←ESC− **Cyan** −ENTER→null UP↑↓DOWN
- SET menu←ESC− Purple −ENTER→null UP↑↓DOWN
- SET menu←ESC− White −ENTER→null UP↑↓DOWN
- SET menu←ESC− 3200K −ENTER→null UP↑↓DOWN
- SET menu←ESC 5600K —ENTER→null UP↑↓DOWN
- SET menu←ESC 6500K —ENTER→null UP↑↓DOWN
- SET menu←ESC− 8500K −ENTER→null UP↑↓DOWN
- SET menu ← ESC − 10000K − ENTER → null UP↑↓DOWN
- SET menu←ESC− ChangeColor −ENTER→null UP↑↓DOWN
- SET menu←ESC− **Twinkling** −ENTER→null UP↑↓DOWN
- SET menu←ESC− Fade −ENTER→null UP↑↓DOWN
- SET menu ← ESC − Macro − ENTER → Macro menu UP↑↓DOWN

The Menu functions provided are described in the following sections.

#### Function menu

Addr:001(with actually stored address) \_\_ DMX mode

Press ENTER enter to the submenu

DMX Menu:

-DMX Address: 001

; Set the DMX address

└No DMX Signal

; Run if there is no DMX signal

-Stop Run

-Hold Run

-Auto Run

LSound Run

#### ManualDimmer

ManualDimmer:

-Light Switch

⊢Light ON

Light OFF

-Light Red:000

-Light Green:000

Light Blue:000

Light Strobe:000

-Scan Pan:128

-Scan Tilt:128

-Scan PanFine:000

-ScanTiltFine:000

Light Calibrate

-Cal Red:-15~+16

-Cal Green:-15~+16

-Cal Blue:-15~+16

-Cal Pan:-128~+127

-Cal Tilt:-128~+127

; Red dimmer ; Green dimmer

; Blue dimmer

; Strobe adjustment

; Pan -movement with 8 Bit-resolution

: Tilt -movement with 8 Bit-resolution

THE THOTOLOGIC WILL C DIC TOCOLOGIC

; Pan -movement with 16 Bit-resolution


; Tilt -movement with 16 Bit-resolution

LProgram Step 62

#### SET menu

SET Menu: -Reset Machine -Reset:ON LReset: OFF **HLoad Parameter** -Load ON Lload OFF -Master / Alone -Master Mode L-Alone Mode -Auto / Sound - Auto Mode LSound Mode HMIC Sense:00~99% ; MIC sensitivity adjusting -TC Switch ; Reduce output if over temperature **LTC Switch Mask** -Switch Mask ON LSwitch Mask OFF LTC Switch Temp ; (Pass-word protected, common user taboo) -TC Temp Cap ; TC Temperature Capture -TC Temp Cap:Yes LTC Temp Cap:No LTC Temp Set ; TC Temperature set -Scan Setting -Reverse Pan -Reverse Pan :ON LReverse Pan :OFF -Reverse Tilt -Reverse Tilt:ON Reverse Tilt:OFF -Scan 16 Bit 16 bit resolution -Scan 16 Bit:ON LScan 16 Bit:OFF Pan Degree -Pan Degree:630 : 630° Pan Degree:540 : 540° -Scan BlackOut ; Blackout during pan/tilt movement -ScanBlackOut:ON ScanBlackOut:OFF LFeed Back ; Return the head to the correct starting position Feed Back:ON after changing the position -Feed Back: OFF Information : Information consultation -Time:tt/mm/ss -Date:mm/dd/vv

#### PHOTOMETRIC DATA

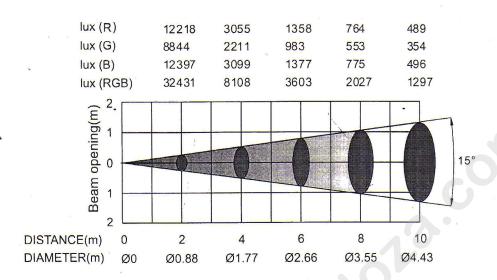

## **SPECIFICATIONS**

#### **Electrical**

Power supply 90~260V AC, 50/60Hz

Power consumption 400W

Fuse 5A Ø 5\*20

Photometric data

Light source 108 pcs 3W LEDs , 36R , 36G , 36B

LED rated life 100,000 hours

Beam angle 15°

Dynamic effects

Color changing effects 
Can create excellent color mixing with high even and

uniform distribution of brightness and light output

Strobe Variable electronic strobe 0~25F.P.S

at Wallack

Dimmer Variable electronic dimmer 0~100%

Pan 540° or 630°(8/16 bit movement resolution),

automatic self-correction

Tilt 270°(8/16 bit movement resolution),automatic

self-correction

Control and programming

DMX channels 10 or 12 channels (depend on 8/16 bit movement

resolution)

Protocols DMX-512

Operation modes DMX mode, Master/Slave mode, Sound Activated

mode

Construction

Color Black

Housing ABS

Protection rating IP20

Thermal

Working temperature -25°C~+35°C

Thermalstat Built-in thermalstat for overheating protection

Physical

Fixture dimensions 337x228x433mm

Net weight 10kg

**NOTE**: Due to improvement, the product specifications and this manual are subject to change without prior notice